

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Karlsson](#) /

› [Karlsson Mini Flip Wall Clock KA5364OR User Manual](#)

Karlsson KA5364OR

Karlsson Mini Flip Wall Clock KA5364OR User Manual

Model: KA5364OR

INTRODUCTION

The Karlsson Mini Flip Wall Clock KA5364OR is a distinctive timepiece designed to provide a clear, at-a-glance display of the time, day, date, and year. Featuring an automatic flip mechanism for calendar changes and a precise quartz movement, this clock combines functionality with a unique aesthetic. Its design ensures accurate timekeeping and effortless date progression, including automatic adjustment for leap years.



Figure 1: Karlsson Mini Flip Wall Clock KA5364OR (Front View)

SAFETY INFORMATION

- Keep the clock away from direct sunlight and extreme temperatures to prevent damage to the internal components and casing.
- Avoid exposing the clock to excessive moisture or liquids. This product is not waterproof.
- Do not attempt to disassemble or repair the clock yourself. Refer to qualified personnel for servicing.
- Ensure batteries are inserted with correct polarity (+/-) as indicated in the battery compartment. Incorrect insertion can cause damage.
- Remove batteries if the clock will not be used for an extended period to prevent battery leakage.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.

PACKAGE CONTENTS

Please check the package contents carefully. If any items are missing or damaged, contact your retailer.

- 1 x Karlsson Mini Flip Wall Clock KA5364OR
- 1 x User Manual (this document)
- *Note: Batteries are not included and must be purchased separately.*

SETUP

1. Battery Installation:

The Karlsson Mini Flip Wall Clock requires a total of **5 AA batteries** for full functionality (timekeeping and flip calendar mechanism). It is crucial to install all batteries correctly in their designated compartments.

- Locate the primary battery compartment, typically on the back of the clock. Insert the required AA batteries (usually 1 or 2), ensuring correct polarity (+/-). This compartment powers the main timekeeping mechanism.
- Locate the secondary battery compartment, which often powers the flip calendar display. This compartment may be found behind a small removable cover or panel, sometimes on the side or within the main casing. Insert the remaining AA batteries (usually 3 or 4) into this compartment, observing correct polarity.

Important: Ensure all 5 AA batteries are installed correctly across both compartments for both the analog clock and the automatic flip calendar to function properly. Failure to install all batteries, or incorrect placement, may result in the date, month, or year not flipping automatically.

2. Mounting (Optional):

The clock can be placed on a flat surface or mounted on a wall. If wall mounting, use appropriate hardware (not included) for your wall type and ensure the clock is securely fastened.

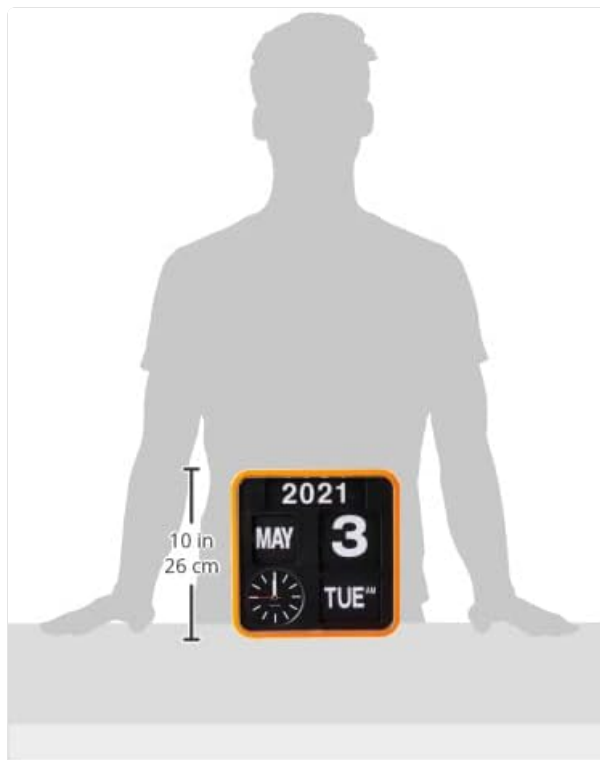 


Figure 2: Approximate Dimensions of the Clock

OPERATING INSTRUCTIONS

1. Setting the Time:

Locate the time setting knob, usually on the back or side of the clock. Rotate the knob clockwise to advance the minute and hour hands until the correct time is displayed. Ensure you set the correct AM/PM if applicable to the flip mechanism (though the clock itself is analog, the date flip might be tied to a 24-hour cycle).

2. Setting the Date, Month, and Year:

The flip calendar mechanism operates automatically. However, for initial setup or after battery replacement, you may need to manually advance the date, month, and year to the current settings.

- Look for small adjustment wheels or buttons near the respective flip displays (Year, Month, Date, Day).
- Carefully turn the wheels or press the buttons to advance each display until the current year, month, date, and day are shown.
- The clock is designed to automatically advance the date at midnight and adjust for month-end and leap years.

Caution: Do not force the flip mechanism. If it feels stuck, recheck battery installation or consult the troubleshooting section.

MAINTENANCE

- **Cleaning:** Wipe the clock's casing and display with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or spray directly onto the clock.
- **Battery Replacement:** Replace all 5 AA batteries approximately once a year, or when the clock's timekeeping becomes inaccurate or the flip mechanism stops advancing. Always replace all batteries at the same time with new ones.
- **Storage:** If storing the clock for an extended period, remove all batteries to prevent potential leakage and damage. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock is not running or time is inaccurate.	Batteries are dead or low. Batteries inserted incorrectly.	Replace all batteries with new ones. Check battery polarity (+/-) and reinsert correctly.
Date/Month/Year is not flipping automatically.	Batteries for the flip mechanism are dead, low, or not installed. Batteries for the flip mechanism inserted incorrectly. Mechanism is stuck.	Ensure all 5 AA batteries are installed correctly in their respective compartments (primary for time, secondary for flip mechanism). Replace all batteries with new ones if they are old or low. Check battery polarity (+/-) for all batteries and reinsert correctly. Gently try to manually advance the flip display to see if it frees up. If resistance is felt, do not force it.
Flip display is skipping days or months.	Low batteries for the flip mechanism. Initial setup not fully completed.	Replace all 5 AA batteries with new ones. Manually set the date, month, and year to the correct current values. Allow a few days for the mechanism to "settle" if recently set up.

SPECIFICATIONS

Model Number	KA5364OR
Brand	Karlsson
Product Dimensions (L x W x H)	24.5 x 10 x 24.5 cm (9.65 x 3.94 x 9.65 inches)


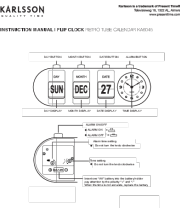 
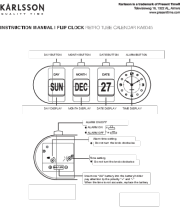 
Product Weight	1.18 Kilograms (2.6 lbs)
Color	Orange Casing with Black Dial
Display Type	Analog (Time), Flip (Calendar)
Special Feature	Calendar Display (Year, Month, Date, Day)
Power Source	Battery Powered
Batteries Required	Yes, 5 x AA batteries (not included)



 
WARRANTY AND SUPPORT

For warranty information and support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for warranty claims.

For further assistance or inquiries, please visit the official Karlsson website or contact their customer service department.

Related Documents - KA5364OR

	<p>Karlsson Flip Clock KA5955 Instruction Manual</p> <p>Official instruction manual for the Karlsson Flip Clock model KA5955, covering warranty, maintenance, and setup instructions in multiple languages.</p>
	<p>Karlsson KA6045 Retro Tube Calendar Flip Clock - Instruction Manual</p> <p>Comprehensive instruction manual for the Karlsson KA6045 Retro Tube Calendar Flip Clock, covering setup, operation, alarm setting, maintenance, and warranty information.</p>
	<p>Karlsson KA6045 Retro Tube Calendar Flip Clock: Instruction Manual</p> <p>Comprehensive instruction manual for the Karlsson KA6045 Retro Tube Calendar Flip Clock. Covers setup, time and alarm setting, battery installation, maintenance, warranty, and symbol explanations in English.</p>

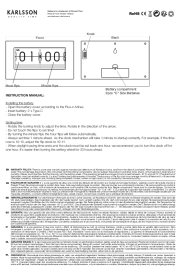	<p>Karlsson Flip Clock KA5601BK & KA5601WH Instruction Manual</p> <p>Instruction manual for the Karlsson Flip Clock models KA5601BK and KA5601WH, covering warranty policy, time setting, and battery installation.</p>
	<p>Karlsson KA6044 Cuckoo Light Wall Clock Instruction Manual</p> <p>Comprehensive instructions for setting up and operating the Karlsson KA6044 Cuckoo Light Wall Clock, including battery replacement and maintenance tips.</p>
	<p>Karlsson Flip Clock Instruction Manual and Warranty Information</p> <p>Detailed instructions for setting up and operating your Karlsson flip clock, including battery installation, time setting, and warranty policy information in multiple languages.</p>