

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bielmeier](#) /

› [BIELMEIER Einkochautomat BHG 650.0 User Manual](#)

Bielmeier BHG 650.0

BIELMEIER Einkochautomat BHG 650.0 User Manual

Model: BHG 650.0 | Brand: Bielmeier

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The appliance is designed for household use only.
- Do not touch hot surfaces. Use handles or knobs.
- Ensure proper ventilation around the appliance during operation.
- This appliance operates at 230V/50Hz and has a power output of 2000W.

2. PRODUCT OVERVIEW

The Bielmeier BHG 650.0 preserving automatic cooker is designed for preserving and sterilizing fruits and vegetables. It features a robust plastic construction and a 29-liter capacity.



Figure 2.1: Front view of the Bielmeier BHG 650.0 preserving automatic cooker, showing the control knob and indicator light.

Key Features:

- **2000 Watt Heating Power:** Ensures efficient and quick heating.

- **Adjustable Thermostat:** Temperature control from 30°C to boiling point.
- **Overheat and Dry-Boil Protection:** Safety mechanism to prevent damage.
- **29 Liter Capacity:** Accommodates up to 14 one-liter preserving jars.
- **Indicator Light:** Shows operational status.
- **Insert Rack:** Included for proper jar placement.
- **High-Quality Plastic Construction:** Durable and BPA-free.
- **Integrated Cable Winding:** For convenient storage of the power cord.



Figure 2.2: Side view with dimensions, showing the height of 460 mm and width of 405 mm.



Figure 2.3: Interior view of the preserving cooker, showing the included insert rack at the bottom.



Figure 2.4: Bottom view of the appliance, illustrating the integrated cable winding for neat storage.

3. SETUP

1. **Unpacking:** Carefully remove the preserving automatic cooker from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the appliance on a flat, stable, and heat-resistant surface. Ensure there is sufficient space around the unit for ventilation.
3. **Initial Cleaning:** Before first use, clean the interior of the cooker and the insert rack with warm water and a mild detergent. Rinse thoroughly and dry.
4. **Power Connection:** Unwind the power cord from the integrated cable winding at the bottom of the unit. Plug the appliance into a grounded 230V/50Hz electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Preserving Fruits and Vegetables

1. Place the insert rack at the bottom of the cooker.
2. Arrange your filled and sealed preserving jars on the insert rack. Ensure jars do not touch each other or the sides of the cooker.
3. Fill the cooker with water until the jars are covered by approximately 2/3 of their height. Do not overfill.
4. Place the lid securely on the cooker.
5. Set the desired temperature using the control knob. For most preserving processes, refer to your recipe's specific temperature and time requirements. The thermostat can be set from 30°C up to boiling.
6. The indicator light will illuminate when the heating element is active. It will turn off once the set temperature is reached and cycle on/off to maintain the temperature.
7. Once the preserving time is complete, switch off the appliance and unplug it from the power outlet.
8. Allow the jars to cool inside the cooker or carefully remove them using appropriate heat-resistant gloves.

4.2 Juicing (with optional attachment)

This appliance supports a juicer attachment (BIELMEIER Entsafteraufsatz BHG 630, Art.-Nr. 630028), which is sold separately. Follow the instructions provided with the juicer attachment for proper use in conjunction with this preserving automatic cooker.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

1. **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior of the cooker with a damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Interior Cleaning:** Clean the interior of the cooker and the insert rack with warm water and a mild detergent. For stubborn residues, a soft brush or sponge can be used. Rinse thoroughly.
4. **Descaling:** Over time, mineral deposits may accumulate inside the cooker, especially in areas with hard water. Descale the appliance regularly using a commercial descaling agent suitable for kitchen appliances, following the product's instructions. Alternatively, a solution of water and vinegar can be used.
5. **Storage:** Ensure the appliance is clean and dry before storing. Wrap the power cord around the integrated cable winding. Store in a cool, dry place.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; check circuit breaker; try a different outlet.
Water not heating up.	Temperature knob set too low; appliance malfunction.	Increase temperature setting; if problem persists, contact customer support.
Indicator light not illuminating.	Appliance not heating; light malfunction.	Check if appliance is heating; if not, refer to "Water not heating up" solution. If heating, light may be faulty, but appliance is still functional.
Overheat protection activated.	Insufficient water; prolonged dry operation.	Unplug appliance, let it cool down completely, then add water and restart. Ensure sufficient water level during operation.

7. SPECIFICATIONS

Model: BHG 650.0

Brand: Bielmeier

Power: 2000 W

Voltage: 230V / 50Hz

Capacity: 29 Liters (approx. 14 x 1-liter jars)

Temperature Range: 30°C to boiling

Material: High-quality Plastic

Dimensions (H x W x D): 460 x 405 x 400 mm

Weight: 3.6 kg

Safety Certifications: VDE/CE



Figure 7.1: CE Mark, indicating compliance with European safety standards.

8. WARRANTY AND SUPPORT

This Bielmeier preserving automatic cooker BHG 650.0 comes with a **two-year manufacturer's warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal household use.

The warranty does not cover damage resulting from misuse, neglect, accident, alteration, or unauthorized repair. Please retain your proof of purchase for warranty claims.

For technical support, warranty claims, or spare parts, please contact Bielmeier customer service. Refer to the official Bielmeier website or your purchase documentation for contact details.

Manufacturer: Bielmeier Consumer Kitchen Products GmbH

© 2024 Bielmeier. All rights reserved. Model BHG 650.0.

Made in Germany.