

[manuals.plus](#) /

› [Paramount](#) /

› [Paramount Transformers: Dark of the Moon DVD Instruction Manual DV356044](#)

## Paramount DV356044

# Transformers: Dark of the Moon DVD Instruction Manual

Model: DV356044

## 1. PRODUCT OVERVIEW

This manual provides essential instructions for the proper setup, operation, and maintenance of your Transformers: Dark of the Moon DVD. Please read this manual thoroughly before use to ensure optimal performance and longevity of your product.

A MICHAEL BAY FILM

# TRANSFORMERS™

## DARK OF THE MOON



This image displays the front cover of the *Transformers: Dark of the Moon* DVD. It features the film's title logo prominently, with key characters and action scenes depicted in the background, characteristic of the movie's theme.

**Product Description:** When a mysterious event from Earth's past erupts into the present day it threatens to bring a war to Earth so big that the Transformers alone will not be able to save us.

## 2. SETUP INSTRUCTIONS

- Prepare Your Equipment:** Ensure your DVD player and television are properly connected and powered on. Refer to your DVD player's and television's respective manuals for connection details (e.g., HDMI, RCA cables).
- Open DVD Player Tray:** Press the "Open/Close" button on your DVD player to open the disc tray.
- Insert DVD:** Carefully place the Transformers: Dark of the Moon DVD into the disc tray with the label side facing up. Avoid touching the playback surface of the disc.
- Close DVD Player Tray:** Press the "Open/Close" button again to close the disc tray. The DVD player should begin to load the disc automatically.
- Select Input:** On your television, select the correct input source (e.g., HDMI 1, Video 1) that corresponds to your DVD player's connection.

## 3. OPERATING INSTRUCTIONS

### 3.1 Basic Playback

- Play:** Once the disc loads, the main menu or movie may start automatically. If not, select "Play Movie" from the on-screen menu using your DVD player's remote control.
- Pause:** Press the "Pause" button to temporarily stop playback. Press "Play" again to resume.
- Stop:** Press the "Stop" button to end playback and return to the disc's main menu or stop the disc entirely.
- Fast Forward/Rewind:** Use the "FF" (Fast Forward) and "RW" (Rewind) buttons to quickly scan through the movie.
- Chapter Select:** Use the "Next Chapter" or "Previous Chapter" buttons to jump between different scenes or chapters of the movie.

### 3.2 Language and Subtitle Selection

The Transformers: Dark of the Moon DVD supports multiple audio languages and subtitle options.

- Access Menu:** During playback or from the main menu, navigate to the "Audio" or "Subtitles" section. This is often accessible via a "Menu" or "Setup" button on your remote.
- Select Audio Language:** Choose from available audio tracks, including English, French, and Spanish.
- Select Subtitles:** Choose from available subtitle tracks, including English, French, Portuguese, and Spanish. Select "Off" to disable subtitles.

## 4. MAINTENANCE

- Cleaning the Disc:** To clean the DVD, gently wipe the playback surface from the center outwards using a soft, lint-free cloth. Do not use abrasive cleaners, solvents, or rough materials, as these can scratch the disc.
- Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity. Proper storage prevents warping and surface damage.
- Handling:** Always hold the DVD by its edges or the center hole. Avoid touching the shiny playback surface to prevent fingerprints and scratches.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Disc does not play or load.	Disc inserted incorrectly, dirty disc, incompatible region code, or DVD player issue.	Ensure disc is inserted label-side up. Clean the disc. Check your DVD player's region compatibility. Try another DVD to confirm player functionality.
No audio or video during playback.	Incorrect TV input, loose cables, or TV/DVD player settings.	Verify TV is on the correct input. Check all audio/video cables are securely connected. Adjust audio settings on your DVD player or TV.
Disc skips or freezes.	Scratched or dirty disc, or a temporary player malfunction.	Clean the disc carefully. Inspect for deep scratches. Try restarting the DVD player.
Cannot change language or subtitles.	Incorrect menu selection or player settings.	Ensure you are navigating the disc's specific audio/subtitle menu. Some players have a dedicated "Audio" or "Subtitle" button on the remote.

## 6. SPECIFICATIONS

<b>Title</b>	Transformers: Dark of the Moon
<b>Model Number</b>	DV356044
<b>Format</b>	DVD (AC-3, Color, Dolby, Dubbed, Multiple Formats, NTSC, Subtitled, Widescreen)
<b>MPAA Rating</b>	PG-13 (Parents Strongly Cautioned)
<b>Run Time</b>	2 hours and 34 minutes
<b>Release Date</b>	September 30, 2011
<b>Director</b>	Michael Bay
<b>Actors</b>	Frances McDormand, Hugo Weaving, John Malkovich, Patrick Dempsey, Tyrese Gibson, Shia LaBeouf, Rosie Huntington-Whiteley, Josh Duhamel, John Turturro, Ken Jeong, Leonard Nimoy, Peter Cullen
<b>Dubbed Languages</b>	French, Spanish
<b>Subtitles</b>	English, French, Portuguese, Spanish
<b>Studio</b>	Paramount
<b>ASIN</b>	B005G4TJUC
<b>Number of Discs</b>	1
<b>Product Dimensions</b>	0.7 x 7.5 x 5.4 inches; 2.4 ounces
<b>Genre</b>	Action, Adventure, Sci-Fi

## 7. WARRANTY AND SUPPORT

Warranty information for the Transformers: Dark of the Moon DVD is typically provided within the product packaging or on the disc itself. Please refer to these resources for details regarding any limited warranty that may apply.

For technical support or inquiries regarding your DVD, please contact your retailer or the manufacturer, Paramount Pictures. Contact information can usually be found on the DVD packaging or their official website.

**Manufacturer:** Paramount Pictures

**Website:** [www.paramount.com](http://www.paramount.com) (This is a general link, specific support links may vary)

© 2026 Paramount Pictures. All rights reserved. This manual is for informational purposes only.