

Manuals.plus /

› Orbegozo /

› Orbegozo MIG 2525 Microwave with Grill 25L 900W Stainless Steel User Manual

Orbegozo MIG 2525

Orbegozo MIG 2525 Microwave with Grill User Manual

Model: MIG 2525

1. INTRODUCTION

Thank you for choosing the Orbegozo MIG 2525 Microwave with Grill. This appliance is designed to provide efficient and versatile cooking for your home. To ensure safe and optimal operation, please read this manual thoroughly before using the appliance and keep it for future reference.



Figure 1: Orbegozo MIG 2525 Microwave with Grill, showcasing its stainless steel finish and digital control panel.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the microwave oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not use this appliance for commercial purposes. It is intended for household use only.
- Always ensure the turntable and roller ring are correctly positioned before operation.
- Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if the door or door seals are damaged.
- Only qualified service personnel should perform service or repair.
- The appliance is equipped with a child safety lock mechanism for secure operation.

3. PRODUCT FEATURES

The Orbegozo MIG 2525 Microwave with Grill offers a range of features designed for convenience and efficient cooking:

- Full stainless steel construction with 900W microwave power and 1000W grill power.
- GRILL & GRILL combination for optimal food cooking.
- 8 power levels to suit various cooking needs.
- 25-liter capacity, suitable for large dishes.
- 9 automatic cooking menus for diverse meal preparation.
- Quick cooking function.
- Defrost program for efficient thawing.
- Timer up to 60 minutes.
- Acoustic signal for cooking completion.
- Child safety lock mechanism for secure use.



Figure 2: Front view of the Orbegozo MIG 2525 Microwave, highlighting its sleek design and integrated handle.

4. SETUP AND INSTALLATION

4.1 Unpacking

- Carefully remove the microwave oven from its packaging.
- Remove all packing materials, including the turntable, roller ring, and grill rack.
- Inspect the oven for any damage, such as dents or a misaligned door. Do not operate if damaged.

4.2 Placement

- Place the oven on a flat, stable surface that can support its weight.
- Ensure there is adequate ventilation around the oven. Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side.
- Do not block air vents.
- Keep the oven away from heat sources and strong magnetic fields.

4.3 Electrical Connection

- Ensure your power supply matches the voltage specified on the oven's rating label (230 Volts AC).
- Plug the oven into a properly grounded wall outlet. Do not use extension cords or adapters.



Figure 3: Interior view of the OrbeGozo MIG 2525 Microwave, showing the spacious 25L cavity, glass turntable, and metal grill rack.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The control panel features a digital display, function buttons, and a time/menu knob for easy operation.



Figure 4: Detailed view of the control panel, showing the digital display, function buttons (Micro, Grill, Wei Adj, Combi 1, Clock, Combi 2, Start, Stop/Cancel), and the Time/Menu knob.

5.2 Setting the Clock

1. Press the **CLOCK** button once. The hour digits will flash.
2. Turn the **TIME/MENU** knob to set the hour.
3. Press the **CLOCK** button again. The minute digits will flash.
4. Turn the **TIME/MENU** knob to set the minutes.

5. Press the **CLOCK** button once more to confirm the setting.

5.3 Microwave Cooking

1. Place food in a microwave-safe container and put it on the turntable.
2. Press the **MICRO** button repeatedly to select the desired power level (P100, P80, P60, P40, P20).
3. Turn the **TIME/MENU** knob to set the cooking time (up to 60 minutes).
4. Press the **START** button to begin cooking.

5.4 Grill Cooking

1. Place food on the grill rack.
2. Press the **GRILL** button. The display will show "G".
3. Turn the **TIME/MENU** knob to set the cooking time.
4. Press the **START** button to begin grilling.

5.5 Combination Cooking

The oven offers two combination modes:

- **COMBI 1:** 55% Microwave, 45% Grill. Ideal for poultry, fish, and light browning.
- **COMBI 2:** 36% Microwave, 64% Grill. Suitable for thicker cuts of meat and more intense browning.

1. Press the **COMBI 1** or **COMBI 2** button.
2. Turn the **TIME/MENU** knob to set the cooking time.
3. Press the **START** button to begin.

5.6 Auto Cook Menus

The oven has 9 pre-set auto cook menus for common dishes. Refer to the list next to the Time/Menu knob for options (e.g., Milk/Coffee, Rice, Spaghetti, Potato, Auto Reheat, Fish, Chicken, Beef/Mutton, Skewered Meat, Auto Defrost).

1. Turn the **TIME/MENU** knob to select the desired auto cook menu number.
2. Press the **WEI ADJ** button to select the weight or serving size.
3. Press the **START** button to begin.

5.7 Defrost Program

The oven features an automatic defrost program (Auto Def.) based on weight.

1. Turn the **TIME/MENU** knob to select "Auto Def." (usually menu item 10).
2. Press the **WEI ADJ** button repeatedly to select the weight of the food to be defrosted.
3. Press the **START** button to begin defrosting.

5.8 Quick Start

For quick microwave cooking at full power:

- Press the **START** button. Each press adds 30 seconds of cooking time at 100% microwave power.

5.9 Child Safety Lock

To activate the child safety lock:

- Press and hold the **STOP/CANCEL** button for 3 seconds. A lock indicator will appear on the display.

To deactivate the child safety lock:

- Press and hold the **STOP/CANCEL** button for 3 seconds again. The lock indicator will disappear.



Figure 5: Angled view of the control panel, providing a clear look at the buttons and the Time/Menu knob with its surrounding auto-cook menu labels.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Exterior:** Wipe the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Interior:** Clean the interior cavity after each use with a damp cloth. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen residue, then wipe clean.
- **Door and Seals:** Regularly clean the door, door seals, and oven front face with a mild detergent and soft cloth to prevent food buildup.
- **Turntable and Roller Ring:** The glass turntable and roller ring can be washed in warm soapy water or in the dishwasher. Ensure they are dry before placing them back in the oven.
- **Grill Rack:** Wash the metal grill rack with warm soapy water and dry thoroughly.
- Always unplug the oven before cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your microwave oven, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse/circuit breaker.
Food not cooking evenly	Food not stirred or turned; Incorrect power level or cooking time.	Stir or turn food halfway through cooking; Adjust power level and time as needed.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Turntable not rotating	Turntable or roller ring not positioned correctly; Food too large or heavy.	Reposition turntable and roller ring; Use smaller dishes.
Excessive steam from door	Normal during cooking, especially high-moisture foods.	This is normal and not a fault. Wipe door after use.

8. SPECIFICATIONS

Feature	Detail
Brand	Orbegozo
Model Number	MIG 2525
Capacity	25 Liters
Microwave Power	900 Watts
Grill Power	1000 Watts
Voltage	230 Volts (AC)
Material	Stainless Steel
Installation Type	Freestanding
Dimensions (L x W x H)	48.3 x 42.2 x 28.1 cm
Weight	14 Kilograms
Special Features	Defrost function, Reheat function, Integrated display, Grill
Human Interface Input	Buttons, Knob

9. WARRANTY AND SUPPORT

Orbegozo products are manufactured to high-quality standards. In the unlikely event of a defect arising from faulty materials or workmanship, your product is covered by a warranty from the date of purchase.

For warranty claims, technical support, or spare parts, please contact your retailer or the authorized Orbegozo service center in your region. Please retain your proof of purchase as it will be required for any warranty service.

Do not attempt to repair the appliance yourself. Any unauthorized repairs will void the warranty.