

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Binatone](#) /

› [Binatone Veva 1045642 DECT Cordless Phone User Manual](#)

### Binatone Veva 1045642

## Binatone Veva 1045642 DECT Cordless Phone User Manual

Model: Veva 1045642

### INTRODUCTION

---

This manual provides essential instructions for setting up, operating, and maintaining your Binatone Veva 1045642 DECT Cordless Phone. Please read this manual thoroughly before using your phone to ensure proper functionality and to familiarize yourself with its features.



Image: The Binatone Veva 1045642 DECT Cordless Phone, showing the black handset docked in its matching black base unit. The handset features a display screen, a numeric keypad, and function buttons such as 'Talk', 'Off', 'Menu/OK', 'Calls', 'Redial', 'Flash', and 'C/Mute'. The base unit has a 'Find' button.

## 1. SETUP

---

### 1.1 Unpacking and Components

Before you begin, ensure all components are present in the package:

- Binatone Veva 1045642 Handset

- Binatone Veva 1045642 Base Unit
- Power Adapter for Base Unit
- Telephone Line Cord
- 2 x AAA Rechargeable Batteries
- User Manual (this document)

## 1.2 Battery Installation

1. Locate the battery compartment cover on the back of the handset.
2. Slide the cover downwards to open it.
3. Insert the two supplied AAA rechargeable batteries, observing the correct polarity (+ and -).
4. Replace the battery compartment cover, sliding it upwards until it clicks into place.





Image: A close-up view of the Binatone Veva 1045642 DECT Cordless Phone handset, showing its illuminated orange display with "PAUL JONES" displayed, indicating caller ID. The keypad and function buttons are clearly visible.

### 1.3 Base Unit Connection

1. Connect the small end of the power adapter to the 'POWER' socket on the back of the base unit.
2. Plug the other end of the power adapter into a standard electrical wall outlet.
3. Connect one end of the telephone line cord to the 'LINE' socket on the back of the base unit.
4. Plug the other end of the telephone line cord into your telephone wall socket.
5. Place the base unit on a flat, stable surface, away from other electrical appliances to minimize interference.

### 1.4 Initial Charge

Once the batteries are installed and the base unit is connected, place the handset on the base unit. The handset will emit a short beep, and the battery icon on the display will indicate charging. For optimal battery performance, allow the handset to charge continuously for at least 16 hours before its first use, even if the display indicates a full charge sooner.

## 2. OPERATING INSTRUCTIONS

---

### 2.1 Making and Receiving Calls

- **To Make a Call:**

1. Press the **Talk** button.
2. Dial the desired phone number using the keypad.
3. Press the **Off** button to end the call.

- **To Receive a Call:**

1. When the phone rings, press the **Talk** button.
2. Press the **Off** button to end the call.

### 2.2 Adjusting Volume

During a call, press the **Vol** (Volume) up or down buttons (located below the 'Calls' button) to adjust the earpiece volume.

## 2.3 Phonebook

Your phone can store up to 20 names and numbers in its phonebook.

- **To Store a Contact:**

1. Press **Menu/OK**.
2. Navigate to 'Phonebook' and press **Menu/OK**.
3. Select 'Add New' and press **Menu/OK**.
4. Enter the name using the keypad (multi-press for letters).
5. Press **Menu/OK**.
6. Enter the phone number.
7. Press **Menu/OK** to save.

- **To Dial from Phonebook:**

1. Press the **Calls** button or navigate to 'Phonebook' via **Menu/OK**.
2. Scroll through the contacts using the navigation buttons.
3. Press **Talk** to dial the selected contact.

## 2.4 Caller Display

When you receive a call, the caller's number and name (if stored in your phonebook or provided by your network) will be displayed on the handset screen. The phone stores information for your last 10 calls.

## 2.5 Redial

Press the **Redial** button to view the last five numbers dialed. Select a number and press **Talk** to redial.

## 2.6 Mute Function

During a call, press the **C/Mute** button to mute your microphone. The other party will not hear you. Press **C/Mute** again to unmute.

## 2.7 Flash Function

The **Flash** button is used for network services such as call waiting or transferring calls, depending on your telephone service provider's features.

## 2.8 Handset Locator (Find)

If you misplace your handset, press the **Find** button on the base unit. The handset will ring, allowing you to locate it.

## 3. MAINTENANCE

---

### 3.1 Cleaning

Wipe the handset and base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the phone is disconnected from power before cleaning.

### 3.2 Battery Care

- Use only the supplied rechargeable AAA batteries.
- Do not expose batteries to extreme temperatures.

- If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- Dispose of old batteries responsibly according to local regulations.

### 3.3 Storage

Store the phone in a cool, dry place, away from direct sunlight and moisture, when not in use for prolonged periods.

## 4. TROUBLESHOOTING

If you encounter issues with your Binatone Veva 1045642, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No dial tone	<ul style="list-style-type: none"> <li>• Power adapter not connected.</li> <li>• Telephone line cord not connected.</li> <li>• Handset not registered or out of range.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure power adapter is securely plugged in.</li> <li>• Check telephone line cord connections.</li> <li>• Place handset on base to register or move closer to base.</li> </ul>
Cannot make/receive calls	<ul style="list-style-type: none"> <li>• Low battery.</li> <li>• Handset out of range.</li> <li>• Telephone line fault.</li> </ul>	<ul style="list-style-type: none"> <li>• Charge handset for at least 16 hours.</li> <li>• Move closer to the base unit.</li> <li>• Check if other phones on the same line work. Contact your service provider if not.</li> </ul>
Poor sound quality/Interference	<ul style="list-style-type: none"> <li>• Handset too far from base.</li> <li>• Interference from other electronic devices.</li> </ul>	<ul style="list-style-type: none"> <li>• Move closer to the base unit.</li> <li>• Relocate the base unit away from TVs, computers, microwaves, etc.</li> </ul>
Handset not charging	<ul style="list-style-type: none"> <li>• Handset not correctly placed on base.</li> <li>• Dirty charging contacts.</li> <li>• Faulty batteries.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure handset is seated correctly on the base.</li> <li>• Clean charging contacts on both handset and base with a dry cloth.</li> <li>• Replace batteries if they are old or damaged.</li> </ul>

## 5. SPECIFICATIONS

Feature	Detail
Model Number	1045642
Brand	Binatone
Product Type	DECT Cordless Phone
Colour	Black

Feature	Detail
Dimensions (L x W x H)	11.3 x 16.5 x 7.5 cm
Weight	350 Grams
Batteries	2 x AAA rechargeable batteries (included)
Talk Time	Up to 7 hours
Standby Time	Up to 100 hours
Range	Up to 300 meters (outdoor), up to 50 meters (indoor)
Phonebook Capacity	20 names/numbers
Caller ID Memory	Last 10 calls
Redial Memory	Last 5 numbers
Answering System Type	Digital (Note: This model may not include an integrated answering machine, refer to product packaging for confirmation.)
GAP Compatible	Yes

## 6. WARRANTY AND SUPPORT

Binatone products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your purchase or visit the official Binatone website. Keep your proof of purchase for warranty claims.

For technical support or further assistance, please contact Binatone customer service. Contact details can typically be found on the Binatone website or in the product packaging.

### Related Documents - Veva 1045642

	<p><a href="#">Binatone Veva 1915 Call Blocker User Guide</a></p> <p>Comprehensive user guide for the Binatone Veva 1915 Call Blocker digital cordless telephone, covering installation, features, settings, and troubleshooting.</p>
	<p><a href="#">Binatone Activity 6210 Digital Cordless Telephone User Guide</a></p> <p>Comprehensive user guide for the Binatone Activity 6210 digital cordless telephone with answering machine, covering installation, operation, features, troubleshooting, and technical specifications.</p>

	<p><a href="#"><b>Binatone Luna 1120 Series User Guide: Digital Cordless Telephone with Answering Machine</b></a></p> <p>Comprehensive user guide for the Binatone Luna 1120 series digital cordless telephone. Learn about installation, features like answering machine, caller display, phonebook, and settings. Includes troubleshooting and technical specifications.</p>
	<p><a href="#"><b>Motorola MDC300 Dashboard Camera User's Guide</b></a></p> <p>Comprehensive user's guide for the Motorola MDC300 Dashboard Camera, covering installation, operation, settings, and safety instructions for optimal use on the road.</p>
	<p><a href="#"><b>Motorola MBP8/MBP8/2 Digital Audio Baby Monitor Quick Start Guide</b></a></p> <p>Get started quickly with your Motorola MBP8 and MBP8/2 Digital Audio Baby Monitor. This guide covers setup, basic key operations, and troubleshooting.</p>
	<p><a href="#"><b>Motorola MBP164CONNECT User's Guide: All-in-One Smart Monitor and Intercom</b></a></p> <p>Comprehensive user's guide for the Motorola MBP164CONNECT All-in-One Smart Monitor and Intercom. Learn about setup, features, troubleshooting, and safety instructions for this baby monitor.</p>