



Manuals.plus /

- › Dorcy /
- › Dorcy 400 Lumen Rugged Camping Lantern (Model 022629) - Instruction Manual

## Dorcy 022629

# Dorcy 400 Lumen Rugged Camping Lantern

Model: 022629

Brand: Dorcy

## 1. INTRODUCTION

---

Thank you for choosing the Dorcy 400 Lumen Rugged Camping Lantern, Model 022629. This instruction manual provides important information for the safe and efficient operation of your new lantern. Please read it thoroughly before use and retain it for future reference.

This LED camping lantern is designed for durability and portability, making it ideal for various outdoor activities and emergency situations. It features a bright LED light source, a convenient hanging hook, and a robust construction.



Figure 1: Front view of the Dorcy 400 Lumen Rugged Camping Lantern.

## 2. SETUP

### 2.1 Battery Installation

The Dorcy Camping Lantern requires three (3) D-cell batteries for operation. Batteries are not included with the product.

1. Locate the battery compartment cover at the base of the lantern.
2. Twist the cover counter-clockwise to unlock and remove it.
3. Insert three D-cell batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and twist it clockwise until securely locked.



Figure 2: Battery compartment at the base of the lantern.

### 3. OPERATING INSTRUCTIONS

---

#### 3.1 Power On/Off and Light Modes

The lantern features a durable side-mounted push button switch for easy operation and mode selection.

- **To Turn On:** Press the push button once. The lantern will illuminate with the standard LED area light.
- **To Change Light Mode:** Press the push button repeatedly to cycle through available light modes. The lantern offers a dual function LED area light and an amber night light.
- **To Turn Off:** Continue pressing the push button until the light turns off, or press and hold the button for a few seconds.



Figure 3: Lantern operating in bright white LED mode.



Figure 4: Lantern operating in amber night light mode.

### 3.2 Using the Hanging Hook

The lantern is equipped with a built-in hanging hook integrated into the handle for convenient, hands-free illumination.

- Extend the handle upwards to reveal the hanging hook.
- Hang the lantern from a tent loop, branch, or any suitable overhead fixture to provide ambient lighting.



Figure 5: Lantern with handle extended to show the hanging hook.

## 4. MAINTENANCE

---

### 4.1 Battery Care

- Always use fresh, high-quality D-cell batteries for optimal performance.
- Replace all three batteries at the same time. Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the lantern will not be used for an extended period to prevent leakage and damage.

### 4.2 Cleaning

- Wipe the exterior of the lantern with a soft, damp cloth.
- Do not use abrasive cleaners or solvents, as these may damage the plastic finish.

## 5. TROUBLESHOOTING

---

- **Lantern does not turn on:** Check if the batteries are inserted correctly with the proper polarity. Replace old or depleted batteries with new ones.
- **Light is dim:** This indicates low battery power. Replace all three D-cell batteries.
- **Intermittent operation:** Ensure battery contacts are clean and free from corrosion. Re-insert batteries firmly.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	022629
Light Output	65 Lumens
Beam Distance	30 feet
Battery Type	3 x D-cell (not included)
Run Time	144 hours
Construction Material	Durable Plastic
Color	Green
Dimensions	4.75 inches x 7 inches (approx. 12.1 cm x 17.8 cm)
Weight	0.8 pounds (approx. 363 grams)
Water Resistance	Waterproof
Switch Style	Push Button
Light Source Type	Light Emitting Diode (LED)

## 7. WARRANTY

The Dorcy 400 Lumen Rugged Camping Lantern (Model 022629) comes with a 1-year limited warranty. This warranty protects against defects in material or workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

## 8. SUPPORT

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Dorcy International customer support. Refer to the product packaging or the official Dorcy website for the most current contact information.