

[Manuals.plus](#) /

> [Le Creuset](#) /

> Le Creuset Foil Cutter - Black Nickel Instruction Manual

Le Creuset 599940160

Le Creuset Foil Cutter - Black Nickel Instruction Manual

Model: 599940160

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your Le Creuset Foil Cutter. Designed for effortless removal of wine bottle foil, this handheld tool features a 4-wheel system with sharp blades for a clean cut. Its ergonomic design ensures comfortable handling.

2. SAFETY INFORMATION

- The foil cutter contains sharp blades. Handle with care to prevent injury.
- Keep out of reach of children.
- Do not attempt to disassemble the unit, as this may cause damage or injury.
- Use only for its intended purpose: removing foil from wine bottles.

3. PRODUCT OVERVIEW

The Le Creuset Foil Cutter is constructed from durable metal with a black nickel finish. It features a compact, ergonomic design for ease of use. The internal mechanism consists of four razor-sharp wheels designed to precisely cut through wine bottle foil.



Image 1: The Le Creuset Foil Cutter, showcasing its sleek black nickel finish and ergonomic shape.



Image 2: A closer view of the Le Creuset Foil Cutter, highlighting its compact design.

4. SETUP

The Le Creuset Foil Cutter requires no assembly. Simply remove it from its packaging before first use.

5. OPERATING INSTRUCTIONS

1. **Positioning:** Place the foil cutter firmly on top of the wine bottle, ensuring the blades are positioned around the foil cap.
2. **Applying Pressure:** Gently squeeze the two halves of the cutter together with a modest amount of pressure to engage the blades with the foil.
3. **Cutting:** With the cutter firmly in place, rotate it a quarter turn (approximately 90 degrees) around the neck of the bottle. The four sharp wheels will cleanly cut the foil.
4. **Removing Foil:** While maintaining gentle pressure, carefully lift the cutter and the severed foil cap from the bottle.



Image 3: The foil cutter positioned next to a corkscrew, demonstrating its role in preparing a wine bottle.

6. CARE AND MAINTENANCE

- **Cleaning:** Wipe the foil cutter with a damp cloth after each use. For stubborn residue, use a mild soap solution and rinse thoroughly. Dry immediately to prevent water spots or corrosion.
- **Storage:** Store the foil cutter in a dry place.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners or scouring pads, as these can damage the finish.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-----------------------------|---|---|
| Foil not cutting cleanly. | Insufficient pressure applied; blades not fully engaged; dull blades. | Ensure firm pressure is applied. Rotate the cutter a full quarter turn. If issues persist, blades may be dull due to extensive use. |
| Cutter slips on the bottle. | Not enough grip; bottle surface is wet or oily. | Ensure hands and bottle neck are dry. Apply firm, even pressure. |

8. SPECIFICATIONS

Brand: Le Creuset

Model Number: 599940160

Material: Metal

Color: Black

Finish Type: Black Nickel

Item Weight: 6.4 ounces

Product Dimensions: 4"L x 2.89"W

Special Feature: 4-wheel system with razor-sharp blades

Recommended Use: Removing foil from wine bottles

UPC: 630870075176, 630870249041, 630877700057

9. WARRANTY AND SUPPORT

The Le Creuset Foil Cutter is backed by a **10-year warranty**, as indicated in product documentation. For warranty claims, product support, or further inquiries, please contact Le Creuset customer service or visit the official Le Creuset store online.

Official Le Creuset Store: [Visit Store](#)

