

## Edesa URBANHP200X

# Edesa URBANHP200X Electric Oven User Manual

Model: URBANHP200X

Brand: Edesa

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Edesa URBANHP200X electric oven. Please read these instructions carefully before installation, operation, or maintenance. Keep this manual for future reference.

## 2. SAFETY INSTRUCTIONS

- Ensure the oven is correctly installed by a qualified technician before use.
- Do not allow children to operate the oven unsupervised.
- The oven becomes hot during operation. Avoid touching hot surfaces. Use oven mitts.
- Never use water to extinguish grease fires; turn off the oven and cover the flame.
- Disconnect the appliance from the power supply before cleaning or maintenance.
- Do not store flammable materials in or near the oven.

## 3. SETUP AND INSTALLATION

The Edesa URBANHP200X oven is designed for built-in installation. Professional installation is recommended to ensure proper electrical connection and ventilation.

### 3.1 Unpacking

Carefully remove all packaging materials. Inspect the oven for any damage incurred during transit. Report any damage to your retailer immediately.

## 3.2 Electrical Connection

Ensure the electrical supply matches the voltage and frequency specified on the rating plate of the oven. The oven must be properly earthed.

## 3.3 First Use

1. Before first use, clean the oven interior with a damp cloth and mild detergent.
2. Heat the empty oven at its maximum temperature (275°C) for approximately 30 minutes to burn off any manufacturing residues. Ensure adequate ventilation during this process.
3. Allow the oven to cool completely before wiping the interior again.



**Image 1:** Front view of the Edesa URBANHP200X electric oven. This image displays the stainless steel finish, the control panel with two rotary knobs and a digital display, and the large glass oven door.

# 4. OPERATING INSTRUCTIONS

## 4.1 Control Panel Overview

The Edesa URBANHP200X features a user-friendly control panel. It includes two rotary knobs for function and temperature selection, and a digital display for time and settings.

## 4.2 Setting the Time

Upon initial power-up or after a power outage, the digital display will flash. Use the appropriate knob or buttons (refer to specific markings on your appliance) to set the current time. This is often required for timer functions to operate correctly.

## 4.3 Selecting a Cooking Function

1. Turn the function selector knob to choose your desired cooking mode (e.g., conventional heat, grill, fan-assisted, rotary function).
2. Turn the temperature selector knob to set the desired temperature, ranging from 35°C to 275°C.
3. The oven will begin to heat. The indicator light will turn off once the set temperature is reached.

## 4.4 Using the Timer

The integrated timer allows you to set cooking durations or a delayed start. Consult the specific symbols on your control panel for setting the minute minder, cooking duration, or end time.

## 4.5 Oven Capacity

The oven has a generous capacity of 51 Litres, suitable for various cooking needs.

## 5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Edesa URBANHP200X oven.

### 5.1 General Cleaning

- Always ensure the oven is cool and disconnected from the power supply before cleaning.
- Clean the exterior surfaces with a soft cloth and warm soapy water. Avoid abrasive cleaners or scouring pads.
- For the interior, use a specialized oven cleaner or a solution of baking soda and water for stubborn stains. Follow the product instructions carefully.
- The oven door glass can be cleaned with a glass cleaner.

### 5.2 Replacing the Oven Light

If the oven light needs replacement, ensure the oven is cool and unplugged. Unscrew the protective cover, replace the bulb with a new one of the same type (heat-resistant, specific wattage), and reattach the cover.

## 6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Oven does not heat	No power supply; incorrect settings; faulty fuse.	Check power connection and circuit breaker; verify function and temperature settings; replace fuse if necessary.
Oven light not working	Bulb is faulty or loose.	Replace the oven light bulb (refer to Section 5.2).
Food not cooking evenly	Incorrect rack position; oven door not sealed properly.	Adjust rack position; ensure oven door is fully closed and seal is intact.

If the problem persists after attempting these solutions, please contact a qualified service technician.

## 7. SPECIFICATIONS

Feature	Specification
Brand	Edesa
Model Number	URBANHP200X
Type	Electric Built-in Oven
Capacity	51 Litres

Feature	Specification
Power	3570 Watts
Temperature Range	35 – 275 °C
Dimensions (L x W x H)	59.2 x 55.2 x 59.5 cm
Weight	29 kg (63.93 lbs)
Material	Stainless Steel

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. Please note that information regarding the availability of spare parts for this model is currently unavailable.

For technical assistance or service requests, please contact Edesa customer support or an authorized service center. Always provide your oven's model number (URBANHP200X) and serial number when seeking support.