

## Targus AMP09CA

# Targus Wireless USB Multimedia Presentation Remote

Model: AMP09CA

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Targus Wireless USB Multimedia Presentation Remote. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

## PACKAGE CONTENTS

- Targus Wireless USB Multimedia Presentation Remote
- USB Receiver
- AAA Batteries (pre-installed or included separately)
- User Manual (this document)

## PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your presentation remote.





Figure 1: Top-down view of the remote, showing the main control buttons and laser pointer button.



Figure 2: Angled view of the remote, highlighting its ergonomic design and side power switch.



Figure 3: The presentation remote shown alongside its compact USB receiver.



Figure 4: View of the remote's underside with the battery compartment open, showing two AAA batteries.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the underside of the remote (refer to Figure 4).
2. Slide the battery cover open.
3. Insert two AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery cover securely.

### 2. Connecting the USB Receiver

1. Remove the USB receiver from its storage slot within the remote (if applicable, typically near the battery compartment).
2. Plug the USB receiver into an available USB port on your computer or presentation device.
3. The operating system should automatically detect and install the necessary drivers. This may take a few moments.

### 3. Powering On the Remote

- Locate the power switch on the side of the remote (refer to Figure 2).
- Slide the switch to the 'ON' position. The remote is now ready for use.

## OPERATING INSTRUCTIONS

### Presentation Control

- **Next Slide:** Press the **Forward** button (often indicated by a right arrow or 'Next' icon).
- **Previous Slide:** Press the **Backward** button (often indicated by a left arrow or 'Previous' icon).
- **Laser Pointer:** Press and hold the **Laser** button to activate the laser pointer. Release to turn off.
- **Black Screen:** Some models feature a button to black out the screen. Press this button once to toggle the screen black, press again to return to the presentation.

### Multimedia Control (if applicable)

If your remote includes multimedia functions, use the dedicated buttons for:

- **Play/Pause:** To start or pause media playback.
- **Volume Up/Down:** To adjust audio volume.
- **Mute:** To mute or unmute audio.

### Mouse Function (if applicable)

Some advanced models may include a joystick or trackball for mouse control:

- **Activate Mouse Mode:** Locate the switch or button to toggle between presentation and mouse modes.
- **Move Cursor:** Use the joystick or trackball to move the on-screen cursor.
- **Left Click:** Press the designated left-click button.
- **Right Click:** Press the designated right-click button.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or the indicator light (if present) signals low power. Always use fresh AAA batteries.
- **Storage:** When not in use, store the remote in a cool, dry place. It is recommended to remove the USB receiver and store it within the remote's designated slot to prevent loss.
- **Avoid Extreme Conditions:** Do not expose the remote to extreme temperatures, direct sunlight, or excessive moisture.

## TROUBLESHOOTING

Problem	Possible Solution
Remote is not responding.	<ul style="list-style-type: none"> <li>Ensure the remote is powered on.</li> <li>Check if the USB receiver is securely plugged into a working USB port.</li> <li>Replace the batteries with fresh ones.</li> <li>Try plugging the USB receiver into a different USB port.</li> </ul>
Laser pointer is not working.	<ul style="list-style-type: none"> <li>Ensure the remote has sufficient battery power.</li> <li>Confirm you are pressing and holding the correct laser button.</li> </ul>

Problem	Possible Solution
Slide navigation is inconsistent.	Ensure there are no obstructions between the remote and the USB receiver. Move closer to the computer/receiver. Check for interference from other wireless devices.

## SPECIFICATIONS

---

- **Model Number:** AMP09CA
- **Connectivity:** Wireless USB
- **Dimensions (L x W x H):** 4.75 x 1.5 x 1 inches (12.07 x 3.81 x 2.54 cm)
- **Weight:** 4.1 ounces (116.23 grams)
- **Power Source:** 2 x AAA Batteries
- **Features:** Presentation controls, Laser pointer, Multimedia controls (model dependent), Mouse function (model dependent)

## WARRANTY AND SUPPORT

---

Targus products are designed for quality and performance. For information regarding warranty coverage, technical support, or to register your product, please visit the official Targus website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims. For the most up-to-date support information, please refer to the official Targus support channels.