

Beurer HK 125

Beurer HK 125 XXL Heating Pad User Manual

Model: HK 125

1. INTRODUCTION

Thank you for choosing the Beurer HK 125 XXL Heating Pad. This extra-soft and snuggly heating pad is designed to provide comfortable warmth with its high-quality super-fleece fibers. Please read this manual carefully before first use and keep it for future reference. It contains important information regarding safety, operation, and maintenance of your device.



Image 1.1: The Beurer HK 125 XXL Heating Pad in use, demonstrating its generous size of 60 x 40 cm.

2. SAFETY INSTRUCTIONS

Your safety is paramount. The Beurer HK 125 Heating Pad is equipped with the Beurer Safety System (BSS) to prevent overheating. Always adhere to the following safety guidelines:

- Do not use the heating pad if it is wet or damp.
- Do not pierce the heating pad with pins or other sharp objects.
- Do not use the heating pad on persons insensitive to heat, helpless persons, or young children.
- Do not fold, crease, or roll the heating pad during operation.
- The heating pad features an automatic switch-off function after approximately 90 minutes of continuous use. This is a safety feature to prevent prolonged heat exposure and conserve energy.
- Always disconnect the power plug from the socket after use and before cleaning.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.



Safe
application
through automatic
switch-off after
90 minutes



Image 2.1: The heating pad and controller, highlighting the 90-minute automatic switch-off for safe use.

3. PACKAGE CONTENTS

Carefully unpack the device and check the contents for completeness and any signs of damage. If any components are missing or damaged, contact your retailer immediately.

- Beurer HK 125 Heating Pad
- Removable Cover
- Removable Controller
- User Manual (this document)

4. SETUP

Before using your Beurer HK 125 Heating Pad for the first time, follow these steps:

1. **Attach the Cover:** Ensure the removable cover is properly fitted over the heating pad. The cover is designed

for comfort and hygiene.

2. **Connect the Controller:** Locate the connection point on the heating pad. Insert the plug from the removable controller firmly into this connection point until it clicks into place.
3. **Position the Pad:** Place the heating pad on the desired area of your body or surface. Ensure it lies flat and is not folded or creased.
4. **Connect to Power:** Plug the power cord of the controller into a suitable electrical outlet.



Image 4.1: The heating pad with its removable cover, ready for use.

5. OPERATING INSTRUCTIONS

The Beurer HK 125 Heating Pad features an innovative LED button controller with 6 temperature settings for personalized comfort.

1. **Turning On:** Slide the ON/OFF switch on the controller to the 'ON' position. The display will illuminate, indicating the current temperature setting.
2. **Selecting Temperature:** Use the '+' and '-' buttons on the controller to cycle through the 6 available

temperature settings. The illuminated display will show the selected setting. Start with a lower setting and increase gradually to find your preferred warmth level.

3. **Automatic Switch-Off:** The heating pad will automatically switch off after approximately 90 minutes of operation. To restart, slide the ON/OFF switch to 'OFF' and then back to 'ON'.
4. **Turning Off:** When you are finished using the heating pad, slide the ON/OFF switch to the 'OFF' position. Unplug the power cord from the electrical outlet.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and hygiene of your heating pad. The Beurer HK 125 is designed for easy cleaning.

1. **Before Cleaning:** Always unplug the heating pad from the power outlet and disconnect the controller from the heating pad. Allow the pad to cool down completely.
2. **Machine Washing:** The heating pad and its removable cover are machine-washable. Wash at a maximum temperature of 30°C on a gentle cycle. Do not bleach, tumble dry, iron, or dry clean.
3. **Drying:** After washing, reshape the heating pad and cover and lay them flat to air dry. Do not use clothes pegs or hang them, as this may damage the internal heating elements. Ensure the pad is completely dry before reattaching the controller and using it again.
4. **Storage:** When not in use, store the heating pad in a clean, dry place, preferably in its original packaging. Do not place heavy objects on top of it.



Image 6.1: The heating pad is machine washable at 30°C for easy cleaning.

7. TROUBLESHOOTING

If you experience any issues with your Beurer HK 125 Heating Pad, please refer to the following common solutions:

- **No Heat/Pad Not Turning On:**

- Check if the power cord is securely plugged into the wall outlet.
- Ensure the controller is firmly connected to the heating pad.
- Verify that the ON/OFF switch on the controller is in the 'ON' position.
- If the pad has been on for 90 minutes, the automatic switch-off may have activated. Turn the controller off and then on again to reset.

- **Pad Not Heating Sufficiently:**

- Increase the temperature setting using the '+' button on the controller.
- Ensure the pad is not folded or bunched up, which can affect heat distribution.

- **Controller Display Not Illuminating:**

- Check power connections as described above.
- If the issue persists, the controller may be faulty. Do not attempt to repair it yourself.

If these steps do not resolve the issue, please contact Beurer customer service or your retailer for assistance. Do not attempt to repair the device yourself.

8. SPECIFICATIONS

Key technical details and features of the Beurer HK 125 XXL Heating Pad:

- **Model:** HK 125
- **Dimensions:** Approximately 60 x 40 cm (XXL format)
- **Material:** Super-fleece fibers (microfiber)
- **Temperature Settings:** 6 illuminated settings
- **Wattage:** 100 watts
- **Safety Features:** Beurer Safety System (BSS), Automatic switch-off after approx. 90 minutes
- **Cleaning:** Machine washable at 30°C (removable controller)
- **Special Features:** Lightweight, Portable, Accurate electronic temperature regulation, Innovative LED button controller



Size: 60 x 40 cm ■

6 Temperature settings ■

Machine washable ■

Automatic switch-off ■

Soft outer material and removable cover in verified quality ■

Image 8.1: Overview of the Beurer HK 125 Heating Pad's features and specifications.



	STANDARD 100
	Special Articles
	06.0.43510 Hohenstein HTTI
	www.oeko-tex.com

Tested textile quality*

*This device meets the high requirements of OEKO-TEX® STANDARD 100 for human ecology as verified by the Hohenstein Research Institute.

Image 8.2: The heating pad meets OEKO-TEX STANDARD 100 for tested textile quality.

9. WARRANTY AND SUPPORT

Beurer products are manufactured to high-quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official Beurer website. If you require technical support, spare parts, or have any questions not covered in this manual, please contact your local Beurer customer service or the retailer from whom you purchased the product. Do not attempt to open or repair the device yourself, as this will void the warranty.