

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER JE2200B Deluxe Juicer Instruction Manual](#)

BLACK+DECKER JE2200B

BLACK+DECKER JE2200B Deluxe Juicer Instruction Manual

Model: JE2200B

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact customer service for examination, repair, or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces.
- Always make sure juicer cover is properly and securely fastened before motor is turned on. Do not unfasten while juicer is in operation.
- Be sure to turn switch to OFF position after each use. Make sure the motor stops completely before disassembling.
- Do not put fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in opening, use food pusher to push it down. If this method is not possible, turn the motor off and disassemble the juicer to remove the remaining food.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The BLACK+DECKER JE2200B Deluxe Juicer is designed for efficient juice extraction from fruits and vegetables. It features a powerful 400-watt motor, a 28-ounce pulp collector, and a 300-milliliter juice pitcher. The unit includes removable, dishwasher-safe parts for easy cleaning and a dual safety locking mechanism for secure operation.



Image: The BLACK+DECKER JE2200B Deluxe Juicer, a compact black and silver appliance with clear plastic components for juice and pulp collection.

SETUP

Unpacking and Initial Cleaning

1. Carefully remove all parts from the packaging.
2. Wash all removable parts (cover, pulp collector, juice pitcher, stainless steel blades, and strainer) in warm, soapy water or place them in the dishwasher. Rinse thoroughly and dry.
3. Wipe the motor base with a damp cloth. Do not immerse the motor base in water.

Assembly

1. Place the motor base on a stable, flat surface.
2. Insert the stainless steel strainer into the motor base, ensuring it sits securely.
3. Place the juicer cover over the strainer and motor base, aligning the locking tabs.
4. Secure the cover by engaging the dual safety locking mechanism on both sides. You should hear a click when it is properly locked.
5. Attach the pulp collector to the back of the juicer.
6. Position the 300-ml juice pitcher under the juice spout.

OPERATING INSTRUCTIONS

Preparing Ingredients

- Wash all fruits and vegetables thoroughly.
- Peel fruits with thick or inedible skins (e.g., citrus, pineapple).
- Remove large seeds or pits (e.g., peaches, cherries).
- Cut ingredients into pieces small enough to fit into the feeding chute.

Juicing Process

1. Ensure the juicer is properly assembled and the juice pitcher and pulp collector are in place.
2. Plug the power cord into a standard electrical outlet.
3. Turn the ON/OFF switch to the 'ON' position. The motor will start.
4. Slowly feed prepared fruits and vegetables into the feeding chute. Use the food pusher to gently guide the ingredients down. **Do not force ingredients**, as this can strain the motor.
5. The fresh juice will flow into the pitcher, and the pulp will collect in the pulp collector.
6. Once juicing is complete, turn the ON/OFF switch to the 'OFF' position and unplug the appliance.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your juicer. All removable parts are dishwasher-safe for convenience.

Disassembly for Cleaning

1. Ensure the juicer is unplugged and the motor has completely stopped.
2. Remove the juice pitcher and pulp collector.
3. Unlock the dual safety locking mechanism and remove the juicer cover.
4. Carefully lift out the stainless steel strainer.

Cleaning

- Wash the cover, pulp collector, juice pitcher, stainless steel blades, and strainer in warm, soapy water immediately after use to prevent food residue from drying. A brush may be helpful for cleaning the strainer mesh.
- Alternatively, place these parts on the top rack of your dishwasher.
- Wipe the motor base with a damp cloth. **Never immerse the motor base in water or any other liquid.**

- Dry all parts thoroughly before reassembling or storing.

TROUBLESHOOTING

If you encounter issues with your juicer, refer to the following common problems and solutions:

- **Juicer does not turn on:**
 - Ensure the power cord is securely plugged into a working outlet.
 - Check that the juicer cover is properly assembled and the dual safety locking mechanism is fully engaged. The juicer will not operate if not securely locked.
- **Poor juice yield or excessive wet pulp:**
 - Ensure ingredients are fresh and firm. Overripe or soft fruits/vegetables may yield less juice.
 - Feed ingredients slowly and apply gentle pressure with the food pusher.
 - Clean the strainer. A clogged strainer can reduce juice extraction efficiency.
- **Motor stops during operation:**
 - The juicer may have overheated. Turn off and unplug the unit, allow it to cool for at least 30 minutes before resuming use.
 - Too much pressure or too many ingredients at once can cause the motor to stall. Reduce the load and restart.

SPECIFICATIONS

Brand	BLACK+DECKER
Model Number	JE2200B
Power	400 Watts
Pulp Collector Capacity	28 ounces
Juice Pitcher Capacity	300 milliliters
Product Dimensions (D x W x H)	11.93" x 7.72" x 15.19"
Item Weight	5.64 pounds
Blade Material	Stainless Steel
Dishwasher Safe Parts	Yes
Color	Black

WARRANTY INFORMATION

This BLACK+DECKER JE2200B Deluxe Juicer comes with a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage. Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or service inquiries regarding your BLACK+DECKER JE2200B Deluxe Juicer, please visit the official BLACK+DECKER website or contact their customer service department. Contact information can typically be found in the product packaging or on the manufacturer's website.

Online resources may include FAQs, troubleshooting guides, and product registration. Always provide your model number (JE2200B) when contacting support to ensure efficient service.