

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AgfaPhoto](#) /

› [AgfaPhoto AF5089MS 8-inch Digital Photo Frame User Manual](#)

AgfaPhoto AF5089MS

AgfaPhoto AF5089MS 8-inch Digital Photo Frame User Manual

Model: AF5089MS

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your AgfaPhoto AF5089MS 8-inch Digital Photo Frame. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

2. SAFETY INFORMATION

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the power adapter supplied with the device.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Keep the device away from strong magnetic fields.
- Clean the screen and casing with a soft, dry cloth. Do not use liquid cleaners.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing. If any items are missing or damaged, contact your retailer.

- AgfaPhoto AF5089MS Digital Photo Frame
- Power Adapter
- USB Cable
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your digital photo frame.



Figure 1: Front view of the AgfaPhoto AF5089MS Digital Photo Frame. This image displays the 8-inch screen and the sleek black casing of the device.

4.1. Front Panel

- **8-inch LCD Screen:** Displays photos and menu options. The screen is touch-sensitive for navigation.

4.2. Rear/Side Panel (Typical Locations)

- **Power Input:** Connects to the power adapter.
- **USB Port:** For connecting to a computer or USB flash drive.
- **Memory Card Slot(s):** For inserting compatible memory cards (e.g., SD, MMC, MS).
- **Power Button:** To turn the device on or off.

5. SETUP

5.1. Connecting Power

1. Connect the power adapter to the DC IN port on the digital photo frame.
2. Plug the other end of the power adapter into a standard electrical outlet.
3. The frame will typically power on automatically or can be turned on using the Power button.

5.2. Inserting Memory Cards or USB Drives

The AgfaPhoto AF5089MS features 2 GB of internal memory and supports external storage.

1. Locate the memory card slot(s) or USB port on the side or rear of the frame.
2. Insert your compatible memory card (e.g., SD, MMC, MS) into the appropriate slot until it clicks into place.
3. Alternatively, insert a USB flash drive into the USB port.
4. Ensure the storage device is inserted correctly to avoid damage.

5.3. Initial Settings

Upon first power-on, you may be prompted to configure basic settings.

1. **Language Selection:** Use the touch screen to select your preferred language.
2. **Date and Time:** Set the current date and time.
3. **Display Mode:** Choose between photo, video, or mixed playback modes.

6. OPERATING THE DIGITAL PHOTO FRAME

6.1. Navigating the Menu

The AgfaPhoto AF5089MS features a touch screen interface for easy navigation.

- Tap on icons or options displayed on the screen to select them.
- Swipe left or right to browse through photos or menu pages.
- Look for a "Back" or "Home" icon to return to previous menus or the main screen.

6.2. Viewing Photos

1. From the main menu, select the "Photo" or "Slideshow" option.
2. Choose the source for your photos (Internal Memory, SD Card, USB Drive).
3. The frame will begin displaying photos in a slideshow format.
4. You can typically pause, skip, or adjust slideshow settings (e.g., interval, transition effects) via on-screen controls.

6.3. Managing Photos (Internal Memory)

To transfer photos to the 2 GB internal memory:

1. Connect the digital photo frame to your computer using the supplied USB cable.
2. The frame should appear as a removable disk drive on your computer.
3. Drag and drop photo files (e.g., JPEG) from your computer to the frame's internal storage folder.
4. Safely eject the removable disk from your computer before disconnecting the USB cable.

6.4. Connecting to a Computer

Use the USB cable to connect the frame to a computer for file transfer.

- Ensure the frame is powered on.
- Connect one end of the USB cable to the frame's USB port and the other end to an available USB port on your computer.
- The frame will enter "USB Mode" and its internal memory or inserted storage will be accessible on your computer.

7. MAINTENANCE

7.1. Cleaning the Device

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water (do not spray directly on the screen).
- **Casing:** Use a soft, dry cloth to clean the exterior casing.
- Do not use abrasive cleaners, solvents, or aerosol sprays, as these can damage the finish or screen.

7.2. Storage

- When not in use for extended periods, disconnect the power adapter.
- Store the digital photo frame in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty.	Ensure the power adapter is securely connected to both the frame and a working electrical outlet. Try a different outlet.
No photos displayed.	No memory card/USB inserted, or no photos on internal memory. Incorrect file format.	Insert a memory card/USB with photos, or transfer photos to internal memory. Ensure photos are in a compatible format (e.g., JPEG). Check the selected source in the menu.
Screen is blank or frozen.	Temporary software glitch.	Turn off the frame, disconnect the power adapter, wait 10 seconds, then reconnect and power on again.
Cannot connect to computer via USB.	Faulty USB cable or port. Frame not in USB mode.	Try a different USB cable or port on your computer. Ensure the frame is powered on and recognized by the computer.

9. SPECIFICATIONS

Feature	Detail
Model Number	AF5089MS
Brand	AgfaPhoto
Screen Size	8 Inches

Feature	Detail
Resolution	800 x 600 pixels
Aspect Ratio	4:3
Internal Memory	2 GB
Connectivity Technology	USB
Power Source	Electric Cable
Human Interface Input	Touch Screen
Product Dimensions	8.8 x 20.2 x 16.2 cm
Product Weight	690 g

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official AgfaPhoto website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, contact AgfaPhoto customer service.