

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [INTIMINA](#) /

› INTIMINA Kiri Gentle Small Personal Massager User Manual

INTIMINA E30694

INTIMINA Kiri Gentle Small Personal Massager User Manual

Model: E30694

INTRODUCTION

The INTIMINA Kiri is a compact personal massager designed for external stimulation. Its ergonomic shape is crafted to follow the body's curves, providing a discreet and quiet experience. This manual provides instructions for the safe and effective use, maintenance, and care of your Kiri massager.



Image: The INTIMINA Kiri Gentle Small Personal Massager, showcasing its compact and ergonomic design.

SAFETY INFORMATION

Please read all safety instructions before using the Kiri massager. Failure to do so may result in injury or damage to the device.

- This device is for external use only.
- Do not use if the silicone is damaged or torn.
- Discontinue use immediately if you experience any discomfort or pain.
- Keep out of reach of children.
- Do not attempt to disassemble the device.
- Dispose of batteries responsibly according to local regulations.

PACKAGE CONTENTS



Image: The INTIMINA Kiri massager, its storage pouch, and the user manual included in the package.

Your INTIMINA Kiri package should contain:

- 1 x INTIMINA Kiri Personal Massager
- 1 x Storage Pouch
- 1 x User Manual

Note: 2 AAA batteries are required for operation and are not included in the package.

SETUP

Battery Installation

1. Locate the battery compartment cap at the base of the massager.
2. Twist the cap counter-clockwise to open.
3. Insert two (2) AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cap and twist clockwise until securely fastened. Ensure a tight seal to maintain waterproofing.



Image: The INTIMINA Kiri massager, showing the brand logo and the general shape, indicating where the battery compartment is typically located at the base.

OPERATING INSTRUCTIONS

The Kiri massager features a 3-button interface for intuitive control.

Controls

- **Power Button (I):** Press and hold to turn the device ON or OFF.
- **Mode Button (O):** Press to cycle through 6 rhythmic vibration modes.
- **Intensity Button (+):** Press to increase vibration intensity across 8 speeds.

Using the Massager

1. Ensure batteries are correctly installed.
2. Press and hold the Power button (I) to turn the massager ON. It will start at a default setting.

3. Press the Mode button (O) to explore the 6 different vibration patterns.
4. Press the Intensity button (+) to adjust the vibration strength. There are 8 speeds available.
5. To turn OFF, press and hold the Power button (I) until the device stops.

The Kiri is fully waterproof, allowing for use in the shower or bath. Always ensure the battery cap is securely sealed before exposing the device to water.

MAINTENANCE AND CARE

Cleaning

The Kiri massager is made from premium, soft-touch silicone, which is easy to clean and long-lasting.

1. After each use, wash the massager with warm water and a mild, antibacterial soap.
2. Rinse thoroughly to remove all soap residue.
3. Dry the device completely with a lint-free cloth.
4. Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.

Storage

Store your Kiri massager in its silky pouch in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid storing with other toys made of different materials to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn ON.	Batteries are dead or incorrectly inserted. Battery cap is not securely closed.	Replace with fresh AAA batteries and ensure correct polarity. Tighten the battery cap securely.
Vibrations are weak.	Low battery power. Intensity setting is too low.	Replace batteries. Press the Intensity (+) button to increase vibration strength.
Device stops working unexpectedly.	Batteries are depleted. Battery cap has loosened.	Replace batteries. Check and re-secure the battery cap.

If troubleshooting steps do not resolve the issue, please contact INTIMINA customer support.

SPECIFICATIONS

Dimensions

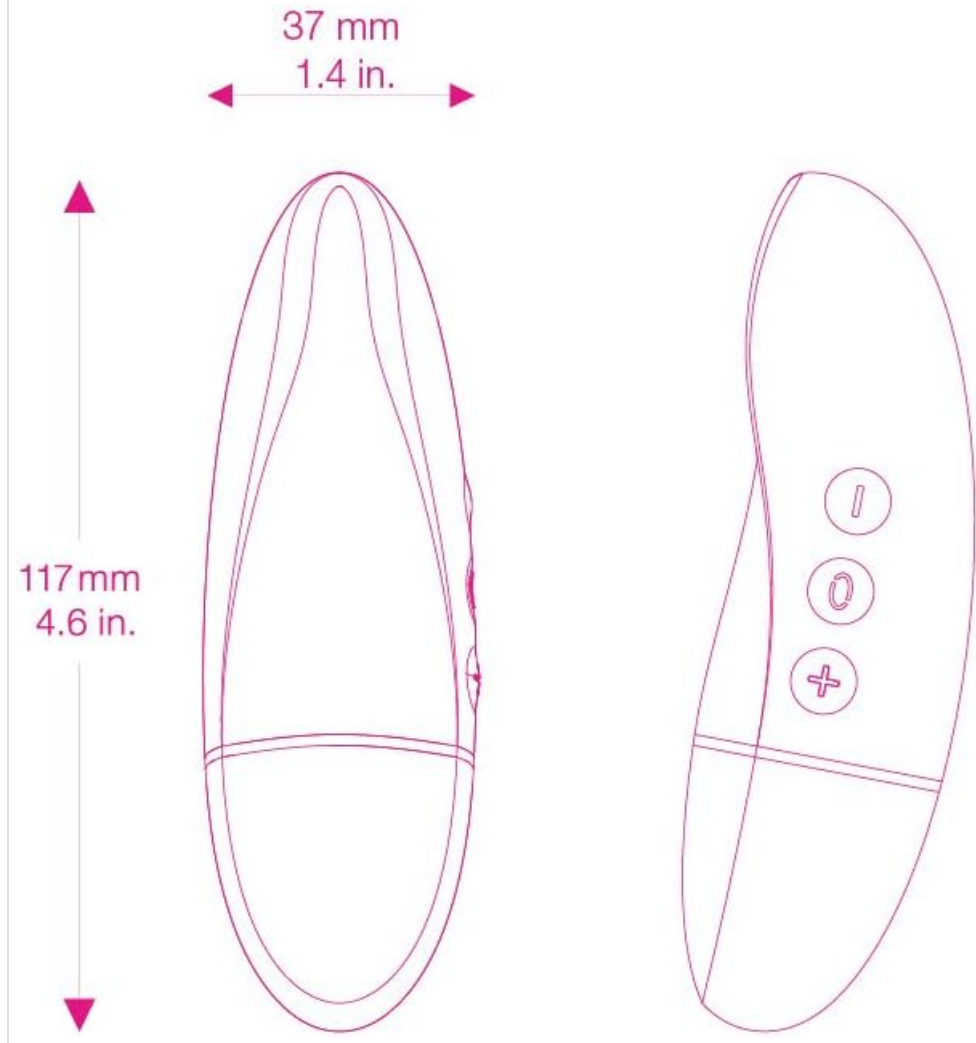


Image: Diagram illustrating the dimensions of the INTIMINA Kiri massager.

Feature	Detail
Model Number	E30694
Material	Body-safe Silicone
Dimensions (L x W x H)	4.6 x 1.25 x 1 inches (117 x 37 x 25 mm)
Weight	3.14 ounces (89 grams)
Battery Type	2 x AAA (not included)
Vibration Modes	6 rhythmic patterns
Vibration Speeds	8 intensity levels
Water Resistance	Waterproof
Manufacturer	Intimina By LELO

WARRANTY AND SUPPORT

For warranty information, product support, or to contact customer service, please visit the official INTIMINA website or refer to the warranty card included with your purchase. Keep your proof of purchase for warranty claims.

Official INTIMINA Website: www.intimina.com
