

Haier JM-V16A

Haier Oven Range JM-V16A(W) User Manual

Model: JM-V16A(W)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Haier Oven Range JM-V16A(W). Please read these instructions thoroughly before using the appliance and retain them for future reference.

2. SAFETY INFORMATION

To prevent personal injury or property damage, always follow basic safety precautions when using electrical appliances. This includes, but is not limited to:

- Ensure the appliance is properly grounded.
- Do not operate the oven range if the door is damaged or if the seals are compromised.
- Never heat sealed containers, as they may explode.
- Use only microwave-safe cookware.
- Supervise children closely when the appliance is in use.
- Do not attempt to service or repair the appliance yourself. Contact qualified service personnel.

3. PRODUCT OVERVIEW

The Haier Oven Range JM-V16A(W) is a versatile kitchen appliance designed for convenient cooking and reheating. It features a weight sensor for automatic heating, a dedicated toast function, and multiple cooking modes including microwave, grill, and oven.

- **(Start)**: Initiates cooking or heating.
- **(Cancel)**: Stops operation or clears settings.
- **(Toast)**: Dedicated button for toasting bread.
- **(Bento)**: Automatic program for heating bento boxes.
- **(Side Dishes)**: Automatic program for heating side dishes.
- **(Milk/Sake)**: Automatic program for heating milk or sake.
- **(Coffee)**: Automatic program for heating coffee.
- **(Boiled Vegetables)**: Includes options for (Leafy Greens) and (Root Vegetables).
- () **(Defrost Meat/Fish)**: Automatic program for defrosting meat or fish.
- **(Sashimi Defrost)**: Automatic program for defrosting sashimi.
- **(Fry)**: Automatic program for frying.
- **(Microwave)**: Selects microwave mode.
- **(Oven)**: Selects oven mode.
- **(Grill)**: Selects grill mode.
- **(Time Setting)**: Buttons for 10 (10 minutes), 1 (1 minute), 10 (10 seconds).
- / **(Temperature/Finish Adjustment)**: Up/Down arrows for adjusting temperature or cooking finish.
- **(Weight Sensor)**: Indicates the presence of the weight sensor feature.

4. SETUP

4.1 Unpacking and Placement

- Remove all packaging materials and accessories. Inspect the oven for any damage.
- Place the oven range on a flat, stable countertop surface that can support its weight. Ensure adequate ventilation space around the appliance (at least 10 cm on sides and back, 20 cm above).
- Do not block air vents.

4.2 Electrical Connection

- Ensure your household electrical supply matches the voltage specified on the appliance's rating label.
- Plug the power cord into a dedicated, grounded electrical outlet. Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

5.1 Basic Microwave Operation

1. Place food in a microwave-safe container inside the oven.
2. Press the **(Microwave)** button.
3. Select the desired power level (600W, 450W, or 200W) using the appropriate buttons or dial (if applicable).
4. Set the cooking time using the **10** , **1** , and **10** buttons.
5. Press **(Start)** to begin cooking.

5.2 Automatic Programs

The oven range features a weight sensor and pre-programmed settings for common tasks:

- **(Warm)**: For general reheating of food. The weight sensor automatically determines the optimal heating time.
- **(Defrost Frozen Items)**: For reheating frozen food. The weight sensor adjusts heating based on the

item's weight.

- **(Toast):** Use this dedicated button for toasting bread.
- **(Bento):** Place a bento box inside and press this button for automatic heating.
- **() (Defrost Meat/Fish):** For thawing meat or fish.
- **(Sashimi Defrost):** A gentle defrost setting suitable for sashimi.

5.3 Grill and Oven Functions

For grilling and baking, use the dedicated Grill and Oven modes:

- Press the **(Grill)** or **(Oven)** button to select the desired mode.
- Adjust the temperature or cooking time using the appropriate controls.
- Press **(Start)** to begin.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your oven range.

- **Interior:** Wipe the interior with a damp cloth and mild detergent after each use. For stubborn stains, use a microwave-safe cleaner.
- **Exterior:** Clean the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Turntable:** The glass turntable can be removed and washed with warm, soapy water. Ensure it is completely dry before placing it back in the oven.
- **Door Seals:** Regularly check and clean the door seals to ensure a tight closure.

7. TROUBLESHOOTING

If you encounter issues with your oven range, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Fuse blown.	Ensure door is securely closed; Check power connection; Check household fuse/circuit breaker.
Food not heating	Incorrect cooking time/power level; Microwave-safe cookware not used.	Adjust settings; Use appropriate cookware.
Unusual noise during operation	Turntable not correctly positioned; Foreign object inside.	Re-position turntable; Remove any obstructions.

If the problem persists, please contact Haier customer service.

8. SPECIFICATIONS

Feature	Specification
Brand	Haier
Model Number	JM-V16A(W)

Feature	Specification
Color	White
Dimensions (W×D×H)	461 × 360 × 293 mm
Product Weight	13.1 kg
Installation Type	Countertop
Microwave Output	600W / 450W / 200W
Microwave Rated Power Consumption	1250 W
Grill Oven Heater	1200 W
Number of Power Levels	3
Defrost System Type	Automatic Defrost
Frequency	50 Hz
Turntable Diameter	360 mm
Special Features	Weight Sensor

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your product or visit the official Haier website. Keep your proof of purchase for any warranty claims.