

[Manuals.plus](#) /

› [Fagor](#) /

› Fagor 2VFT-750AS Electric Ceramic Hob Instruction Manual

Fagor 8413880183923

Fagor 2VFT-750AS Electric Ceramic Hob Instruction Manual

Model: 8413880183923 | Brand: Fagor

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Fagor 2VFT-750AS Electric Ceramic Hob. Please read this manual thoroughly before using the appliance and keep it for future reference.

The Fagor 2VFT-750AS is a self-sufficient 78 cm ceramic hob featuring four cooking zones, including a double circular High Light zone and a dedicated roasting zone. It offers precise digital control with 9 power levels and advanced safety features.

IMPORTANT SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.


- **Child Safety Lock:** The hob is equipped with a child safety lock to prevent accidental activation or changes to settings. Activate this feature when the hob is not in use or when children are present.
- **Residual Heat Indicators:** After use, the cooking zones will remain hot for a period. The hob features 4 residual heat indicators to warn you when a zone is still hot. Do not touch hot surfaces.
- **Safety Thermostat:** Each cooking zone has a safety thermostat that automatically shuts down the zone if it overheats.
- **Automatic Safety Shutdown:** If a cooking zone is left on for an extended period without any changes in settings, the hob will automatically shut down as a safety measure.
- Ensure proper ventilation around the appliance during operation.
- Do not place flammable materials on or near the hob.
- Only use cookware suitable for ceramic hobs.

INSTALLATION AND SETUP

Installation should only be performed by a qualified technician in accordance with local regulations and standards.

Mounting Dimensions

The Fagor 2VFT-750AS hob requires a specific cutout in your countertop for proper installation. Refer to the diagram below for precise measurements.

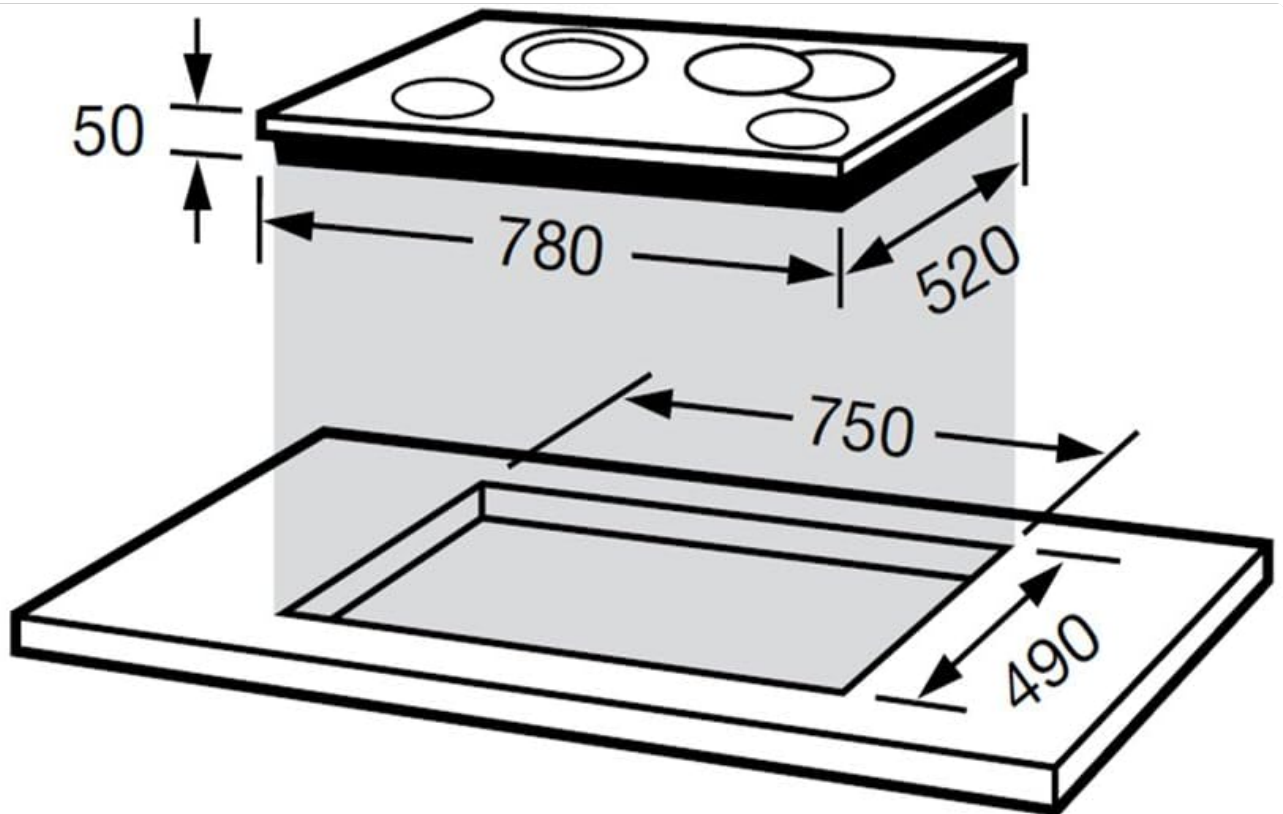

2VFT-750AS 2VFT-750AS_Einbauskizze

Figure 1: Installation dimensions for the Fagor 2VFT-750AS ceramic hob. The hob measures 780mm (width) x 520mm (depth) x 50mm (height). The required countertop cutout dimensions are 750mm (width) x 490mm (depth).

- **Overall Dimensions (H x W x D):** 50 mm x 780 mm x 520 mm
- **Mounting Dimensions (W x D):** 750 mm x 490 mm
- Ensure adequate clearance for ventilation beneath the hob.
- Connect the hob to a suitable electrical supply as per the appliance's power requirements (Total power: 7.3 kW).

OPERATING INSTRUCTIONS

The Fagor 2VFT-750AS features intuitive touch controls for easy operation.



Figure 2: Detail of the touch control panel, showing power level indicators and function buttons.

Control Panel Overview

The touch control panel allows you to select cooking zones, adjust power levels, set timers, and activate special functions. The smooth surface is also easy to clean.

Turning On/Off and Power Levels

1. **To Turn On:** Touch the main power button.
2. **Selecting a Cooking Zone:** Touch the corresponding zone selection button.
3. **Adjusting Power:** Use the '+' and '-' buttons to set the desired power level from 1 to 9. Level 9 is the highest setting.
4. **To Turn Off:** Touch the main power button again, or select a zone and reduce its power level to 0.

Cooking Zones

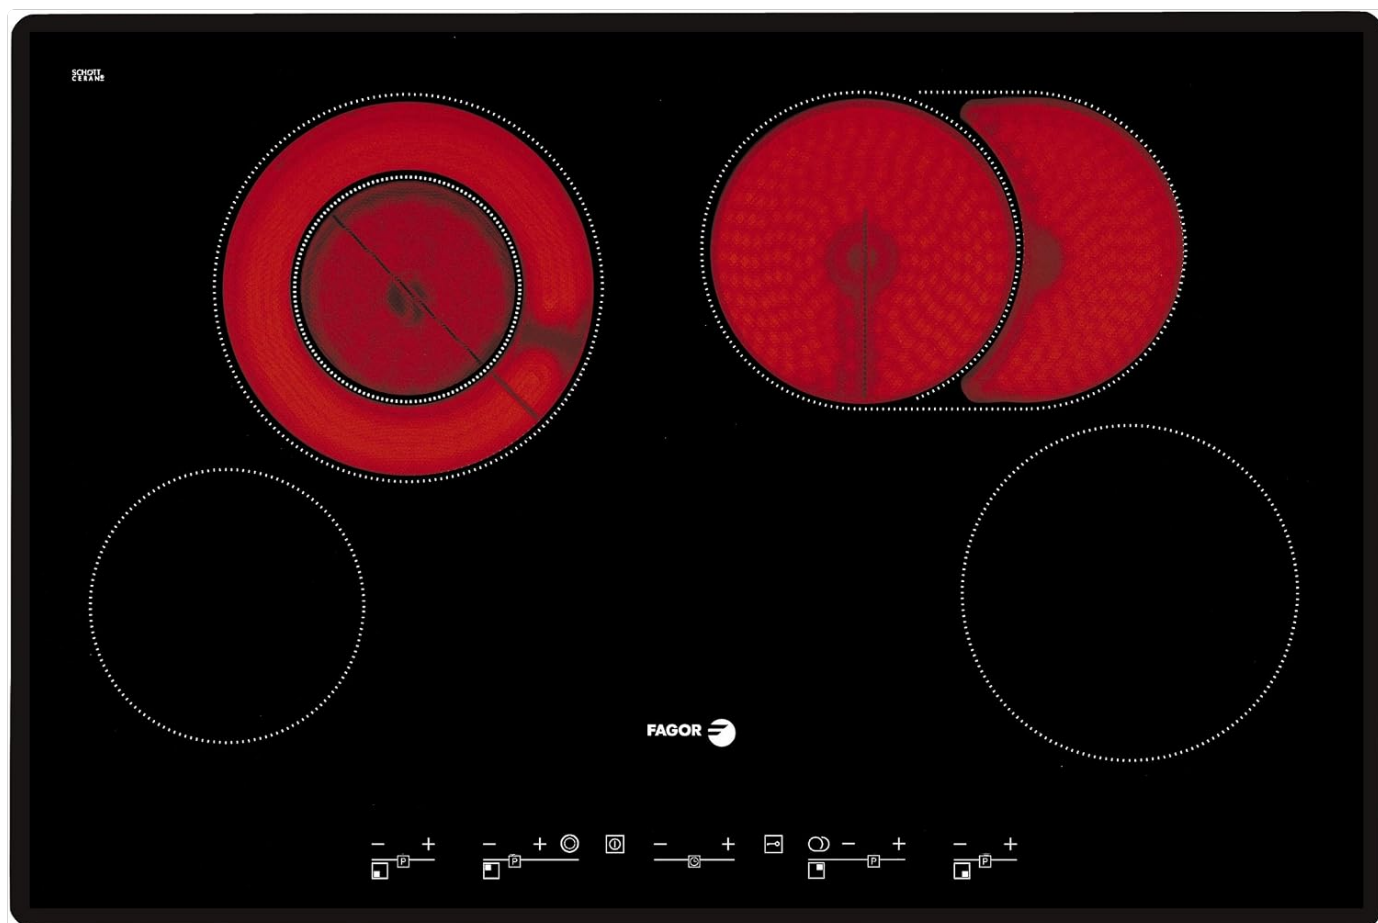


Figure 3: Overview of the Fagor 2VFT-750AS ceramic hob with its four cooking zones.

The hob features four High Light cooking zones designed for efficient and even heating:

- **Front Right:** 180 mm, 1.8 kW
- **Front Left:** 145 mm, 1.2 kW
- **Rear Right:** 265/170 mm (double circular), 2.2/1.5 kW
- **Rear Left:** 210/120 mm (roasting zone), 2.1/0.7 kW

Special Functions

- **Quick Heating Function:** This function allows a cooking zone to reach its maximum temperature rapidly. Consult the control panel for the specific button to activate this feature.
- **Cooking Time Sensor (Timer):** The hob includes a timer function (1-99 minutes) that can be assigned to any of the four cooking zones.
 - a. Select the desired cooking zone.
 - b. Press the timer button.
 - c. Use the '+' and '-' buttons to set the desired cooking duration.
 - d. The zone will automatically switch off once the set time has elapsed.

Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Fagor ceramic hob.

- Always ensure the hob is cool before cleaning.
- For daily cleaning, wipe the ceramic surface with a damp cloth and a mild detergent.
- For stubborn stains or burnt-on food, use a specialized ceramic hob cleaner and a scraper designed for glass-

ceramic surfaces.

- Avoid abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.
- The touch control panel is designed for easy cleaning; simply wipe it down with a soft, damp cloth.
- The hob uses Schott Ceran® ecological glass, which is manufactured without toxic metals, making it environmentally friendly and easy to maintain.

TROUBLESHOOTING

If you encounter issues with your Fagor ceramic hob, refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; Child safety lock activated.	Check the circuit breaker. Deactivate the child safety lock (refer to operating instructions).
Cooking zone not heating.	Incorrect power level selected; Safety thermostat activated due to overheating.	Increase power level. Allow the zone to cool down; ensure proper ventilation.
Control panel unresponsive.	Surface is wet or dirty; Child safety lock activated.	Clean and dry the control panel. Deactivate the child safety lock.
Display shows an error code.	Internal fault or specific operational issue.	Note the error code and consult the Fagor customer support for assistance.

If the problem persists after attempting these solutions, please contact Fagor customer support or a qualified service technician.

TECHNICAL SPECIFICATIONS

- Brand:** Fagor
- Model Number:** 8413880183923
- Product Type:** Electric Ceramic Hob
- Color:** Black with Facets
- Material:** Ceramic Glass (Schott Ceran®)
- Number of Heating Elements:** 4
- Total Power:** 7.3 kW
- Power Source:** Electric Cable
- Ignition System Type:** Electric
- Product Dimensions (H x W x D):** 5.5 cm x 78 cm x 52 cm (approx. 50 x 780 x 520 mm)
- Product Weight:** 12.4 kg (approx. 12.44 kg)
- Mounting Dimensions (W x D):** 75 cm x 49 cm (approx. 750 x 490 mm)
- Special Features:** Automatic Shutdown, Child Safety Lock, Quick Heating Function, Timer (1-99 minutes)

Cooking Zone Details:

Zone	Type	Diameter (mm)	Power (kW)
Front Right	High Light	180	1.8
Front Left	High Light	145	1.2
Rear Right	Double Circular High Light	265/170	2.2/1.5
Rear Left	Roasting Zone High Light	210/120	2.1/0.7

WARRANTY AND SUPPORT

Fagor products are manufactured to high quality standards. For information regarding warranty coverage, service, or technical support, please refer to the warranty card included with your product or visit the official Fagor website. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the [Fagor Brand Store on Amazon](#).

© 2023 Fagor. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B005I47YLG>

More documents and user manuals: <https://manuals.plus/>