

Tefal TL6008

Tefal Toast N Grill TL6008 2-in-1 Toaster and Mini Oven Instruction Manual

Model: TL6008 | Brand: Tefal

1. INTRODUCTION

Thank you for choosing the Tefal Toast N Grill TL6008. This innovative 2-in-1 appliance combines the functionality of a long slot toaster and a compact mini oven, designed to save space and offer versatility in your kitchen. Please read this instruction manual carefully before first use to ensure safe and optimal operation of your appliance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is placed on a stable, heat-resistant surface, away from walls and cabinets, to allow adequate air circulation.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not touch hot surfaces. Use handles or knobs. The exterior surfaces of the appliance can become very hot during operation.
- Oversized foods, metal foil packages, or utensils must not be inserted into the toaster or oven as they may create a risk of fire or electric shock.
- Do not place paper, cardboard, plastic, or other flammable materials in the oven.
- Never leave the appliance unattended while in use.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Tefal Toast N Grill TL6008.



This image shows the front of the Tefal Toast N Grill TL6008 appliance, highlighting its compact dimensions of 40 cm in width and 21 cm in height, making it suitable for various kitchen spaces.



A clear front view of the appliance, focusing on the two control dials on the right side. The top dial is for toaster browning levels and the bottom dial is for oven temperature and timer settings.

Key Components:

- **Long Toaster Slot:** For toasting bread, baguettes, and brioche.
- **Toaster Browning Control Dial:** Adjusts browning level (1-6).
- **Stop Button:** To cancel toasting at any time.
- **Mini Oven Compartment:** For grilling, baking, and reheating.
- **Oven Temperature/Timer Dial:** Controls oven temperature (up to 210°C) and cooking time.
- **Oven Door:** Transparent door for viewing food.
- **Removable Crumb Tray:** Located beneath the oven for easy cleaning.
- **Integrated Protective Cover:** For the toaster slot when not in use.
- **Grill Rack and Baking Tray:** Accessories for the mini oven.

4. SETUP

Unpacking and First Use:

1. Carefully remove the appliance and all accessories from the packaging.

2. Remove any protective films or stickers from the appliance.
3. Wipe the exterior of the appliance with a damp cloth. Clean the grill rack, baking tray, and crumb tray with warm, soapy water, then rinse and dry thoroughly.
4. Place the appliance on a flat, stable, heat-resistant surface, ensuring adequate ventilation around it.
5. Before first use, operate the toaster and mini oven functions empty for a few minutes at maximum settings to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

5.1. Toaster Function



An angled view of the appliance, illustrating the long toaster slot at the top and the transparent door of the mini oven below, ready for use.

1. Ensure the integrated protective cover is removed from the toaster slot.
2. Insert bread slices, baguettes, or brioche into the long toaster slot.
3. Select your desired browning level using the top control dial (1 for light, 6 for dark).
4. Press down the toaster lever until it locks into place. The toasting cycle will begin.
5. Once the selected browning level is reached, the toast will automatically pop up.
6. To stop the toasting cycle at any time, press the 'Stop' button.

5.2. Mini Oven / Grill Function



This image demonstrates the dual functionality of the appliance, with two slices of bread being toasted in the top slot and a small pizza cooking inside the mini oven, showcasing its versatility.



This image shows a hand turning one of the control dials, illustrating the user interaction with the appliance's settings for either toasting or oven functions.

1. Open the mini oven door. Place your food (e.g., pizza, quiche, tart, grilled cheese sandwich) on the grill rack or baking tray.
2. Slide the rack/tray into the mini oven compartment. Close the oven door securely.
3. Turn the bottom control dial to select the desired temperature (up to 210°C) and cooking time. The mini oven does not require preheating for most recipes.
4. The appliance will begin heating. The temperature indicator light will illuminate during operation.
5. Once the set time has elapsed, the appliance will automatically switch off. Carefully remove the cooked food using oven mitts.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.



The mini oven door is open, clearly showing the pull-out crumb tray located at the bottom of the oven compartment, designed for convenient cleaning and maintenance.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Removable Crumb Tray:** Pull out the crumb tray from the bottom of the mini oven. Empty crumbs and wash the tray with warm, soapy water. Rinse and dry thoroughly before reinserting.
4. **Grill Rack and Baking Tray:** Wash these accessories with warm, soapy water. For stubborn food residues, soak them before cleaning. Rinse and dry completely.
5. **Toaster Slot:** Never insert metal objects into the toaster slot. For cleaning inside the slot, ensure the appliance is unplugged and completely cool, then gently shake out any remaining crumbs.
6. **Integrated Protective Cover:** Clean the cover with a damp cloth and ensure it is dry before placing it back over the toaster slot.

7. TROUBLESHOOTING

If you encounter any issues with your Tefal Toast N Grill TL6008, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the appliance is securely plugged into a working electrical outlet. Check your circuit breaker.
Toast is too light/dark.	Browning level setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.

Problem	Possible Cause	Solution
Mini oven not heating.	Temperature/timer dial not set correctly.	Ensure the bottom dial is set to a desired temperature and cooking time.
Smoke or unusual odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. If it persists after initial use, contact customer support.
Food stuck in toaster slot.	Overly large food item; appliance malfunction.	Unplug the appliance and allow it to cool. Carefully remove the food using non-metallic utensils. Never force food out.

If the problem persists after trying these solutions, please contact Tefal customer support.

8. SPECIFICATIONS

- **Model Number:** TL6008
- **Brand:** Tefal
- **Power:** 1300 Watts
- **Voltage:** 240V
- **Material:** Stainless Steel
- **Color:** Black / Matte Aluminum
- **Dimensions (L x W x H):** 43.5 x 28.5 x 22.5 cm
- **Weight:** 4.06 Kilograms
- **Number of Toaster Slots:** 1 (long slot)
- **Toaster Browning Levels:** 6
- **Max Mini Oven Temperature:** 210°C
- **Special Features:** Temperature indicator, removable crumb tray, automatic stop function.

9. WARRANTY AND SUPPORT

Tefal is committed to providing high-quality products. This appliance is designed for durability and ease of repair.

Repairability:

Tefal offers **15 years of repairability at a fair price**. Economical spare parts are available through our network of 6,200 repair centers worldwide, ensuring quick repairs and contributing to environmental protection by reducing waste.

Customer Support:

For any questions, technical assistance, or warranty claims, please visit the official Tefal website or contact your local Tefal customer service center. You can find contact details and further information on the [Tefal Brand Store](#).