

Fujifilm Fujifilm X10 Digital Camera

Fujifilm X10 Digital Camera User Manual

Model: Fujifilm X10 Digital Camera

[Introduction](#) [Box Contents](#) [Setup](#) [Operating the Camera](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The Fujifilm X10 is a compact digital camera designed for enthusiasts seeking exceptional image quality and intuitive control. It features a 12-megapixel EXR CMOS sensor and a bright Fujinon 4x optical zoom lens, offering versatility for various photographic situations. The camera's robust build and advanced features provide a premium shooting experience.

Your browser does not support the video tag.

Official product video introducing the Fujifilm X10 digital camera, highlighting its design, optical performance, and key features.

2. BOX CONTENTS

Please ensure all items listed below are present in your product packaging:

- Fujifilm X10 Digital Camera (Black)
- NP-50 Lithium-Ion Battery (3.7v 1000mAh)
- BC-45W Battery Charger
- Shoulder Strap
- Lens Cap
- USB Cable
- CD-ROM (containing software and drivers)
- Owner's Manual (this document)

3. SETUP

3.1. Charging the Battery

Before first use, fully charge the NP-50 Lithium-Ion Battery using the supplied BC-45W Battery Charger. Insert the battery into the charger, then plug the charger into a power outlet. The charging indicator light will show the charging status and turn off when charging is complete.

3.2. Inserting the Battery and Memory Card

Open the battery/card compartment cover on the bottom of the camera. Insert the charged battery with the correct orientation. Insert a compatible SD/SDHC/SDXC memory card (not included) into the card slot until it clicks into place. Close the compartment cover securely.



Image showing the bottom of the Fujifilm X10, illustrating the battery and memory card compartment.

3.3. Attaching the Shoulder Strap

Thread the supplied shoulder strap through the strap lugs on both sides of the camera body. Secure the strap firmly to prevent accidental drops.

3.4. Attaching the Lens Cap

Place the metal lens cap onto the front of the lens when the camera is not in use to protect the lens surface from dust and scratches.

4. OPERATING THE CAMERA

4.1. Powering On/Off

To power on the camera, rotate the manual zoom barrel lens. The camera is ready to shoot in approximately 0.8 seconds when in Quick Start mode. To power off, rotate the zoom barrel back to the 'OFF' position.



Front view of the Fujifilm X10 camera, showing the Fujinon 4x optical zoom lens.

4.2. Basic Shooting Modes

The X10 offers diverse shooting modes accessible via the mode dial on the top plate:

- **Program (P):** Camera sets aperture and shutter speed for optimal exposure.
- **Aperture Priority (A):** You set the aperture, and the camera selects the shutter speed.
- **Shutter Speed Priority (S):** You set the shutter speed, and the camera selects the aperture.
- **Manual (M):** You control both aperture and shutter speed.
- **EXR:** Utilizes the EXR CMOS sensor to automatically select the optimum shooting mode (SN, DR, HR) based on lighting conditions.
- **Scene (SP):** Pre-set modes for specific scenes (e.g., Portrait, Landscape, Night).

- **Movie:** For recording Full HD 1080p videos.



Top view of the Fujifilm X10, highlighting the mode dial and other control buttons.

4.3. Using the Viewfinder and LCD

The X10 features a bright optical viewfinder for traditional composition and a 2.8-inch 460K dot high-contrast LCD screen for live view and playback. The LCD provides excellent viewing even in bright sunlight.



Rear view of the Fujifilm X10, displaying the LCD screen and control layout.

4.4. Advanced Features

- **RAW Shooting and Processing:** Capture images in RAW format for maximum post-processing flexibility. In-camera RAW processing is also available.
- **Film Simulation Modes:** Choose from eight film simulation modes (e.g., Velvia, PROVIA, ASTIA) to replicate the look of classic Fujifilm films.
- **Motion Panorama 360°:** Create seamless 360-degree panoramic images by simply sweeping the camera.
- **Super Macro Mode:** Capture subjects as close as 1cm from the lens for detailed close-up shots.
- **Optical Image Stabilization:** Reduces blur caused by camera shake, especially in low light or at longer focal lengths.
- **Electronic Horizon Leveling Gauge:** Ensures your photos are perfectly level.

5. MAINTENANCE

5.1. Cleaning the Camera

- **Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution.
- **Lens:** Use a lens brush or blower to remove dust. For smudges, use a specialized lens cleaning cloth and lens cleaning fluid. Avoid touching the lens surface with your fingers.
- **LCD Screen:** Gently wipe the screen with a soft, lint-free cloth.

5.2. Battery Care

To prolong battery life, avoid exposing the battery to extreme temperatures. Store the battery in a cool, dry place when not in use. If the camera will not be used for an extended period, remove the battery.

5.3. Storage

Store the camera in a dry, well-ventilated area, away from direct sunlight and high humidity. Use the supplied lens cap to protect the lens. Consider a camera bag for added protection during transport.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is not charged or incorrectly inserted.	Ensure battery is fully charged and inserted correctly.
Images are blurry.	Camera shake, incorrect focus, or dirty lens.	Use optical image stabilization, check focus, clean lens.
Memory card error.	Incompatible card, card full, or corrupted.	Use a compatible card, delete files, or format the card (backup data first).
Flash does not fire.	Flash mode off, or subject too far.	Check flash settings, ensure pop-up flash is raised, or move closer to subject.

For more detailed troubleshooting, please refer to the comprehensive owner's manual on the supplied CD-ROM or visit the Fujifilm support website.

7. SPECIFICATIONS

Feature	Detail
Model Name	Fujifilm X10 Digital Camera
Sensor Type	2/3-inch EXR CMOS
Effective Still Resolution	12 MP
Lens	f2.0 wide-angle and f2.8 telephoto, bright Fujinon 4x optical manual barrel zoom lens (28-112mm equivalent)
Optical Zoom	4x
Image Stabilization	Optical
Display	2.8 Inches LCD (460,000 dots)
Viewfinder	Optical
Video Resolution	FHD 1080p
Storage Media	SD/SDHC/SDXC memory cards
Connectivity	USB, HDMI
Battery Type	Lithium Ion (NP-50)
Battery Life (CIPA)	Approx. 270 Photos
Dimensions (H x W x D)	2.76 inches (Height)

Feature	Detail
Weight	12.32 ounces (approx. 349g)
Color	Black

8. WARRANTY & SUPPORT

8.1. Product Warranty

The Fujifilm X10 Digital Camera comes with a**Limited 1-year parts and labor warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. Please retain your proof of purchase for warranty claims.

8.2. Customer Support

For technical assistance, service, or further inquiries, please visit the official Fujifilm support website or contact their customer service department. Contact information can typically be found on the Fujifilm website or in the full owner's manual.

8.3. Legal Disclaimer

Purchasers must be at least 18 years of age or older to purchase this product.

© 2024 Fujifilm. All rights reserved.
For the most up-to-date information, please refer to the official Fujifilm website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question