

Rommelsbacher EKM 200

Rommelsbacher EKM 200 Coffee Grinder User Manual

Model: EKM 200

INTRODUCTION

Thank you for choosing the Rommelsbacher EKM 200 Coffee Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read these instructions carefully before first use and keep them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before cleaning or maintenance.
- Do not immerse the motor unit in water or other liquids.
- Keep hands and utensils out of the bean container and ground coffee container during operation to prevent injury.
- This appliance is for household use only.
- Supervise children to ensure they do not play with the appliance.
- Do not operate the appliance with a damaged cord or plug.
- Place the grinder on a stable, dry, and level surface.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Rommelsbacher EKM 200 coffee grinder:

- Bean Container with Flavor Cover
- Grind Adjustment Dial (Fine to Coarse)
- Quantity Selection Dial (2-12 cups)
- On/Off Push-Button
- Detachable Powder Container
- Detachable Grinding Disc

- Cleaning Brush
- Cord Take-up

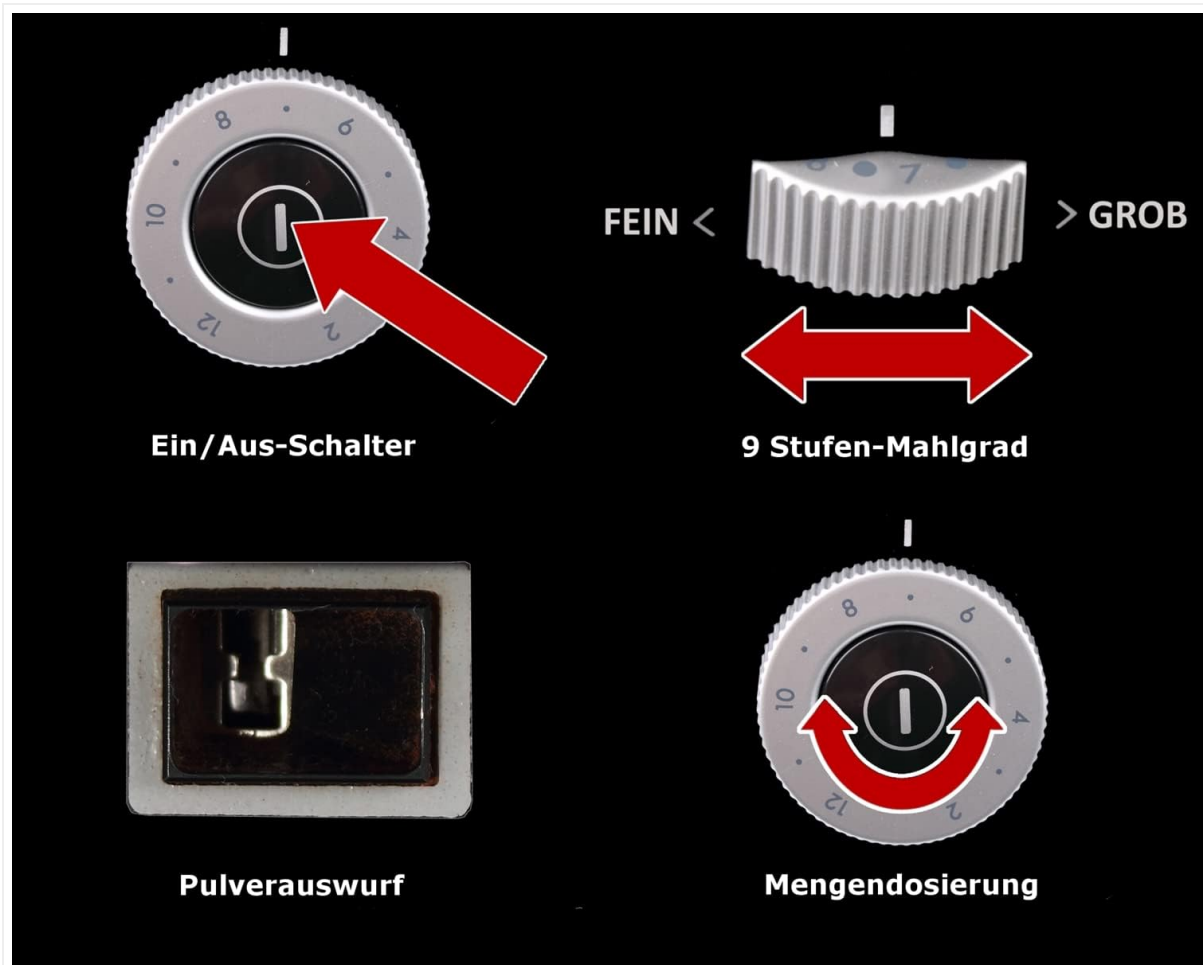


Image: Detailed view of the control elements including the on/off button, grind adjustment, and quantity selection.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present.
2. **Clean:** Before first use, clean the bean container, powder container, and grinding disc as described in the "Maintenance and Cleaning" section.
3. **Assemble:** Place the detachable grinding disc correctly, then attach the bean container and the powder container. Ensure they are securely in place.
4. **Position:** Place the grinder on a stable, dry, and level surface.
5. **Connect:** Plug the power cord into a suitable electrical outlet (230 Volts). Use the practical cord take-up to manage excess cord.



SIEGER PREIS/LEISTUNG

**Haus &
Garten
Test** 6
2012

**(1,3)
sehr gut**

Rommelsbacher
EKM 200

www.hausgartentest.de

**Hervorragende Kaffeemühle
zum Schnäppchenpreis**

Image: The Rommelsbacher EKM 200 coffee grinder ready for use.

OPERATING INSTRUCTIONS

1. Filling the Bean Container

Open the flavor cover of the bean container and fill it with whole coffee beans. The container has a capacity of 250 grams. Close the cover securely to maintain bean freshness.

2. Selecting Grind Degree

Adjust the grind degree using the lever located on the side of the grinder. You can select from a range of settings, from 'FEIN' (fine) to 'GROB' (coarse). The robust disc grinder ensures gentle treatment of coffee beans.

- **Fine (Settings 1-4):** Ideal for espresso machines.
- **Medium (Settings 5-7):** Suitable for drip coffee makers and pour-over methods.
- **Coarse (Settings 8-9):** Best for French press or cold brew.



Image: Visual guide to grind settings and their recommended uses.

3. Selecting Coffee Quantity

Use the rotary knob on the front of the grinder to select the desired quantity of ground coffee. You can choose between 2 and 12 cups. The grinder will automatically stop once the selected quantity is reached.

4. Starting the Grinding Process

Press the on/off push-button to start the grinding process. The grinder will operate quietly until the pre-selected quantity of coffee is ground into the detachable powder container.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee grinder.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Empty Containers:** Remove and empty the bean container and the powder container.
3. **Clean Powder Container:** The detachable powder container can be washed with warm soapy water. Rinse thoroughly and dry completely before reattaching. Note: The powder container may accumulate static charge; rinsing can help reduce this.
4. **Clean Grinding Disc:** The grinding disc is detachable for easy cleaning. Use the provided cleaning brush to remove any residual coffee grounds from the grinding mechanism and the disc. Do not wash the grinding

disc with water; wipe it clean with a dry cloth.

5. **Wipe Exterior:** Wipe the exterior of the grinder with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
6. **Reassemble:** Ensure all parts are completely dry before reassembling the grinder.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in; bean container or powder container not correctly seated; power outage.	Check power connection; ensure containers are securely in place; check household fuse.
Grinder stops during operation.	Coffee outlet blocked by ground coffee; motor overheating.	Unplug the unit, remove the powder container, and clear any blockage in the coffee outlet with the cleaning brush. Allow motor to cool down if it overheated.
Ground coffee is static and messy.	Static electricity buildup in the powder container.	Rinse the powder container with a small amount of water and dry thoroughly before use. This can help reduce static.
Inconsistent grind size.	Grinding discs are dirty or worn.	Clean the grinding discs thoroughly. If the problem persists after cleaning, the discs may need replacement.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model	EKM 200
Brand	Rommelsbacher
Power Source	AC adapter
Voltage	230 Volts
Wattage	110 watts
Material	Plastic
Bean Container Capacity	250 Grams
Item Weight	1.44 Kilograms
Grind Settings	Adjustable (Fine to Coarse)
Quantity Selection	2-12 cups

