

Microsoft RKH-00042

Microsoft Xbox 360 S 250GB System User Manual

Model: RKH-00042

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Microsoft Xbox 360 S 250GB System. Please read these instructions carefully to ensure proper use and to maximize your gaming experience.

The Xbox 360 S 250GB console offers a robust gaming and entertainment platform with ample storage for games, downloadable content, and media.

What's Included

- Xbox 360 S 250GB Console
- Xbox 360 Wireless Controller
- Xbox 360 Headset
- Power Supply
- AV Cable (or HDMI cable, depending on package)

SETUP

1. Unpacking and Placement

Carefully remove all components from the packaging. Place the Xbox 360 S console on a stable, flat surface with adequate ventilation. Ensure there is clear space around the console to prevent overheating.



Image: Microsoft Xbox 360 S 250GB Console. This image displays the sleek black console, highlighting its compact design and ventilation grilles.

2. Connecting the Console

1. **Power Connection:** Connect the power supply to the console's power port and then plug the power cord into an electrical outlet.
2. **Video/Audio Connection:**
 - **HDMI:** For high-definition video and audio, connect an HDMI cable from the HDMI port on the console to an HDMI input on your TV or receiver.
 - **AV Cable:** If using the standard AV cable, connect the yellow, red, and white connectors to the

corresponding ports on your TV.

3. Internet Connection (Optional):

- **Wi-Fi:** The Xbox 360 S has built-in Wi-Fi. You can connect wirelessly during the initial setup or later through the system settings.
- **Ethernet:** For a wired connection, connect an Ethernet cable from the console's Ethernet port to your router or modem.

3. Controller Setup

Insert two AA batteries into the Xbox 360 Wireless Controller. Press and hold the Xbox Guide button on the controller until it turns on. Press the connect button on the console (small circular button near the USB ports) and then the connect button on the controller (small button on the top edge, near the battery compartment). The lights around the console's power button and on the controller will flash and then become solid when connected.

OPERATING INSTRUCTIONS

Turning On/Off

- **To Turn On:** Press the power button on the console or the Xbox Guide button on a connected controller.
- **To Turn Off:** Press and hold the Xbox Guide button on the controller, then select "Turn Off Console" from the menu. Alternatively, press the power button on the console.

Navigating the Dashboard

Use the D-pad or left analog stick on your controller to navigate through the Xbox Dashboard. The dashboard provides access to games, media, system settings, and Xbox Live services.

Playing Games

1. Insert an Xbox 360 game disc into the disc drive.
2. The game will typically start automatically or appear as an option on the dashboard. Select the game to begin playing.
3. Digital games can be accessed from your game library on the dashboard.

Connecting to Xbox Live

Xbox Live allows you to play online with friends, download new games and content, and access streaming services. To connect:

1. Ensure your console is connected to the internet (Wi-Fi or Ethernet).
2. From the Dashboard, navigate to the "Social" or "Settings" blade.
3. Select "Join Xbox Live" or "Network Settings" to configure your connection and create or sign in with your Microsoft account.

MAINTENANCE

Regular maintenance helps prolong the life of your console.

- **Cleaning:** Use a soft, dry cloth to wipe down the exterior of the console. Do not use liquid cleaners or abrasive materials. Ensure ventilation ports are free from dust and obstructions.
- **Storage:** When not in use, store the console in a cool, dry place away from direct sunlight and extreme temperatures.
- **Disc Care:** Handle game discs by the edges. Store them in their cases when not in use to prevent scratches.

TROUBLESHOOTING

If you encounter issues with your Xbox 360 S, refer to the following common solutions:

Console Not Turning On

- Check all power connections, ensuring the power supply is securely plugged into both the console and the wall outlet.
- Verify the power outlet is functional by plugging in another device.

No Video or Audio Output

- Ensure the HDMI or AV cables are securely connected to both the console and the TV.
- Verify your TV is set to the correct input source (e.g., HDMI 1, AV).
- Try a different HDMI or AV cable if available.

Disc Drive Issues (Disc Not Reading/Opening)

- Ensure the disc is clean and free of scratches.
- Try inserting a different game disc to determine if the issue is with the console or the disc.
- If the disc tray does not open, gently press the eject button multiple times. Do not force the tray open.

Controller Not Connecting

- Replace the batteries in the controller.
- Ensure you are pressing both the console's connect button and the controller's connect button within a few seconds of each other.
- Move closer to the console to rule out interference.

Overheating Warning (Red Lights)

If you see red lights around the power button, the console may be overheating. Immediately turn off the console, unplug it, and allow it to cool down for at least an hour. Ensure the console has adequate ventilation and is not in an enclosed space. Clear any dust from the vents.

SPECIFICATIONS

Model Name	RKH-00042
Platform	Xbox 360
Memory Storage Capacity	250 GB

Connectivity Technology	Wi-Fi, Ethernet
Wireless Communication	Wi-Fi
Input Device	Gamepad
Resolution	Up to 4K (via HDMI, depending on content)
Color	Black
Item Weight	9.26 Pounds (approx. 4.2 kg)
Manufacturer	Microsoft

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Microsoft Xbox support website or the documentation included with your purchase. Keep your proof of purchase for warranty claims.

You can find additional support resources and contact information on the official Microsoft Xbox website:

support.xbox.com