

LEGO 8805

LEGO Minifigures Series 5 Fitness Instructor

INSTRUCTION MANUAL

Introduction

This manual provides instructions for the assembly, care, and display of your LEGO Minifigures Series 5 Fitness Instructor. This collectible minifigure is part of the LEGO Series 5 set and includes specific accessories.

Setup and Assembly

The LEGO Minifigures Series 5 are typically packaged in blind bags. Carefully open the packaging to reveal your minifigure and its accessories.



Image: Front view of a sealed LEGO Minifigures Series 5 blind bag. The bag features various minifigures from the series, including the Fitness Instructor, and indicates "Series 5" and "8805".

Assembly Steps:

- 1. Unpack Components:** Carefully remove all parts from the packaging. You should have the minifigure body, head, hairpiece, legs, and any specific accessories (e.g., boombox, display base).
- 2. Assemble Minifigure:**
 - Attach the legs to the minifigure body.
 - Place the head onto the neck stud of the body.
 - Attach the hairpiece to the head.
- 3. Attach Accessories:**
 - The Fitness Instructor typically comes with a boombox accessory. Place this accessory into the minifigure's hand.
 - Attach the minifigure to the included display base by aligning the studs on the base with the holes on the minifigure's feet.



Image: An assembled LEGO Minifigures Series 5 Fitness Instructor. The minifigure is wearing a pink and white workout outfit, holding a pink boombox, and standing on a black display base.

Usage and Display

Once assembled, your LEGO Minifigure is ready for display or integration into LEGO play scenarios. The display base provides stability for showcasing the minifigure.

- **Display:** Position the minifigure on its display base on a flat, stable surface.
- **Interaction:** The minifigure's arms, hands, and legs are posable. The boombox accessory can be removed or re-positioned in the minifigure's hands.

Maintenance and Care

To ensure the longevity of your LEGO Minifigure, follow these care guidelines:

- **Cleaning:** Use a soft, dry cloth to gently wipe away dust. For more thorough cleaning, use a mild soap solution and a soft brush, then rinse with clean water and air dry. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the minifigure away from direct sunlight and extreme temperatures to prevent discoloration or material degradation. Keep small parts in a secure container to avoid loss.

- **Handling:** Handle the minifigure by its body rather than its accessories or delicate parts to prevent accidental detachment or damage.

Troubleshooting

Issue	Solution
Loose Parts: Minifigure parts do not connect securely.	Ensure parts are aligned correctly and pressed firmly together. If parts remain loose, they may be worn or damaged.
Missing Accessories: An expected accessory is not present.	Carefully check all packaging materials. If an item is genuinely missing, contact LEGO Customer Service.
Discoloration: Minifigure plastic appears discolored.	This can occur from prolonged exposure to direct sunlight. Store the minifigure away from UV light. Discoloration is often irreversible.

Specifications

- **Product Name:** LEGO Minifigures Series 5 - Fitness Instructor
- **Model Number:** 8805
- **ASIN:** B005MDVWIE
- **Brand:** LEGO
- **Product Dimensions:** 0.2 x 0.79 x 1.61 inches (approximately)
- **Item Weight:** 0.388 ounces (approximately)
- **Recommended Age:** 5 years and up
- **Material:** ABS Plastic

Warranty and Support

LEGO products are manufactured to high-quality standards. For information regarding product warranty, missing parts, or general support, please refer to the official LEGO website or contact their customer service directly.

Official LEGO Website: www.lego.com

Customer Service: Refer to the contact section on the official LEGO website for regional support options.