

[Manuals.plus](#) /

› [Travelpro](#) /

› Travelpro Maxlite 2 25-inch Expandable Spinner Luggage User Manual

Travelpro 4011165

Travelpro Maxlite 2 25-inch Expandable Spinner Luggage User Manual

Model: 4011165

INTRODUCTION

Thank you for choosing the Travelpro Maxlite 2 25-inch Expandable Spinner Luggage. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new luggage. Please read these instructions carefully before use and retain them for future reference.

The Travelpro Maxlite 2 is designed for durability and ease of use, featuring an ultra-lightweight construction, a 4-wheel spinner system for 360-degree maneuverability, and protective elements like skid guards and crash-guard wheel housings.

PRODUCT FEATURES

- **Ultra-lightweight design:** Facilitates easier lifting and handling.
- **4-wheel spinner system:** Provides smooth, 360-degree maneuverability.
- **Expandable capacity:** Allows for additional packing space when needed.
- **Honeycomb framing system and EVA foam construction:** Ensures durability while maintaining light weight.
- **Protective skid guards, corner guards, and crash-guard wheel housings:** Safeguard against damage during travel.
- **Telescoping handle:** Adjustable to 38-inches and 41-inches for comfortable rolling.



Figure 1: Front view of the Travelpro Maxlite 2 25-inch Expandable Spinner Luggage. This image shows the overall design, including the main compartment zipper and the telescoping handle.

SETUP

1. **Unpacking:** Carefully remove the luggage from its packaging. Inspect for any shipping damage.
2. **Handle Adjustment:**
To extend the telescoping handle, press the button located on the top of the handle and pull upwards. The handle locks at two positions: 38 inches and 41 inches. To retract, press the button and push the handle down until it is fully nested.
3. **Initial Inspection:** Check all zippers, wheels, and seams to ensure they are in proper working order before your first trip.

OPERATING INSTRUCTIONS

Packing Your Luggage

- **Main Compartment:** Open the main zipper to access the primary packing area. Utilize any internal straps or pockets to secure your belongings.
- **Expansion Feature:** If additional space is required, locate the expansion zipper (usually around the perimeter of the main compartment) and open it. This will increase the depth of the luggage.
- **Exterior Pockets:** Use exterior pockets for items you need to access quickly, such as travel documents or small electronics.

Maneuvering the Spinner

- **Upright Rolling:** For smooth surfaces, push the luggage upright on all four spinner wheels. This allows for effortless 360-degree movement.
- **Tilted Rolling:** For uneven surfaces or when navigating curbs, tilt the luggage onto two wheels and pull it behind you using the telescoping handle.

MAINTENANCE

- **Cleaning:**
Wipe the exterior fabric with a damp cloth and mild soap. For stubborn stains, a soft brush can be used. Do not use harsh chemicals or abrasive cleaners.
- **Wheel Care:**
Periodically check the wheels for debris (hair, lint, etc.) and remove them to ensure smooth operation. A small amount of silicone lubricant can be applied to the wheel axles if they become stiff.
- **Zipper Maintenance:**
Keep zippers clean and free of debris. If a zipper becomes stiff, apply a small amount of zipper lubricant or wax.
- **Storage:**
Store your luggage in a clean, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wheels do not roll smoothly.	Debris caught in wheels; wheels require lubrication.	Clean debris from wheels. Apply silicone lubricant to axles.
Telescoping handle sticks or does not extend/retract.	Mechanism is dirty or obstructed; button not fully pressed.	Ensure the release button is fully depressed. Check for obstructions around the handle shafts.
Zipper is difficult to open/close.	Zipper teeth are dirty or misaligned; zipper needs lubrication.	Clean zipper teeth. Apply zipper lubricant or wax. Gently realign teeth if necessary.
Luggage tips over easily.	Improper weight distribution.	Distribute heavier items towards the bottom and center of the luggage.

SPECIFICATIONS

- **Model Number:** 4011165
- **Dimensions (L x W x H):** 45.72 x 27.94 x 63.5 cm (18 x 11 x 25 inches)

- **Weight:** 4.35 kg (9.6 lbs)
- **Material:** Ethylene-vinyl acetate (EVA), Neoprene
- **Closure Type:** Zipper
- **Color:** Black (Note: Other colors may be available for different models)

WARRANTY INFORMATION

The Travelpro Maxlite 2 25-inch Expandable Spinner Luggage comes with **alimited lifetime warranty**. This warranty covers defects in materials and workmanship. For specific details regarding coverage, claims, and service, please refer to the official Travelpro website or contact their customer support.

Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, product inquiries, or to locate an authorized service center, please visit the official Travelpro website: www.travelpro.com.

You may also contact Travelpro customer service directly through the contact information provided on their website.

