

Pioneer STZ-D10S-P

Pioneer STEEZ AUDIO Portable Speaker STZ-D10S-P Instruction Manual

Model: STZ-D10S-P

[Introduction](#) [Features](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)
& Support

1. INTRODUCTION

Thank you for purchasing the Pioneer STEEZ AUDIO Portable Speaker STZ-D10S-P. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and longevity.

This portable speaker is designed to enhance your dance experience with specialized audio functions. It features a compact design, making it easy to carry, and supports dry cell batteries for outdoor use. An integrated iPod/iPhone dock is included for convenient music playback.

2. PRODUCT FEATURES

The STZ-D10S-P is an entry-level model equipped with core functions for dance practice and battles, designed to create a dynamic audio environment for new dance scenes.

- **Auto Battle Mode:** Easily enjoy dance battles with automatic song selection.
- **DJ MIX Mode:** Automatically selects and mixes songs of the same genre for continuous playback.
- **Tempo Control:** Adjust the playback speed of songs.
- **Dance CUE:** Start playback from a pre-set favorite point within a song.
- **Eight Skip:** Skip forward or backward in 8-beat increments within a song.
- **Compact and Portable Design:** Lightweight (0.8kg) and compact dimensions (319W x 94D x 89H mm) for easy transport.
- **Battery Support:** Operates on dry cell batteries, suitable for outdoor use.
- **iPod/iPhone Dock:** Integrated dock for direct playback from your Apple devices.
- **Internal Memory:** 4GB built-in memory for storing music.

3. SETUP GUIDE

3.1 Unpacking

Carefully remove the speaker and all accessories from the packaging. Ensure all components are present:

- Pioneer STEEZ AUDIO Portable Speaker STZ-D10S-P
- AC Power Adapter
- Remote Control (if included)
- Instruction Manual (this document)

3.2 Powering the Unit

The speaker can be powered using the AC adapter or dry cell batteries.

1. **Using AC Adapter:** Connect the supplied AC adapter to the DC IN port on the speaker and then plug it into a wall outlet.
2. **Using Batteries:** Open the battery compartment (usually on the bottom or rear) and insert the required number of dry cell batteries (e.g., AA or C, refer to the battery compartment label for type and polarity).

3.3 Connecting Audio Sources

You can connect various audio sources to your STZ-D10S-P speaker.

- **iPod/iPhone Dock:**
 - a. Open the dock cover (if present).
 - b. Carefully place your iPod or iPhone onto the dock connector. Ensure it is securely seated.
 - c. The device should begin charging and be ready for playback.
- **USB Memory:**
 - a. Locate the USB port, typically on the rear of the unit.
 - b. Insert a USB memory stick containing your music files.
 - c. Select USB as the input source (refer to Section 4.2).
- **AUX Input:**
 - a. Connect an audio cable (3.5mm stereo mini-plug) from your external audio device (e.g., MP3 player, computer) to the AUX IN port on the speaker.
 - b. Select AUX as the input source (refer to Section 4.2).
- **Bluetooth:**
 - a. Turn on the speaker and activate Bluetooth pairing mode (usually by pressing a dedicated Bluetooth button or holding the source button).
 - b. On your mobile device, go to Bluetooth settings and select "STZ-D10S-P" from the list of available devices.
 - c. Once paired, select Bluetooth as the input source on the speaker.



Figure 1: Pioneer STEEZ AUDIO Portable Speaker STZ-D10S-P. This image shows the compact design of the speaker, highlighting its portability and main features.

4. OPERATING INSTRUCTIONS

4.1 Basic Playback

1. **Power On/Off:** Press the **POWER** button to turn the unit on or off.
2. **Volume Control:** Use the **VOLUME +** and **VOLUME -** buttons to adjust the sound level.
3. **Play/Pause:** Press the **PLAY/PAUSE** button to start or pause playback.
4. **Skip Tracks:** Use the **SKIP FORWARD** and **SKIP BACKWARD** buttons to navigate between tracks.

4.2 Source Selection

Press the **SOURCE** button repeatedly to cycle through available input sources: iPod/iPhone, USB, AUX, Bluetooth.

4.3 Using Dance Features

- **Auto Battle Mode:**
Activate this mode to automatically select and play songs suitable for dance battles. Refer to the on-screen display (if available) or indicator lights for mode confirmation.
- **DJ MIX Mode:**
Engage DJ MIX Mode to have the speaker automatically mix songs of the same genre, creating a continuous flow of music without interruptions.
- **Tempo Control:**
While a song is playing, use the dedicated **TEMPO +/-** buttons to increase or decrease the playback speed. This is useful for practicing at different paces.
- **Dance CUE:**
To set a Dance CUE point, navigate to your desired starting point in a song and press the **CUE** button. To recall and play from this point, press the **CUE** button again during playback or before starting a song.
- **Eight Skip:**
Use the **8-SKIP FORWARD** or **8-SKIP BACKWARD** buttons to quickly jump forward or backward in 8-beat increments within a track. This allows for precise navigation during practice.

For detailed control over these features, especially with internal memory content, it is recommended to use the dedicated software (e.g., MIXTRAX from Pioneer's website) to prepare your music library.

5. MAINTENANCE

5.1 Cleaning the Unit

- Wipe the exterior of the speaker with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, benzene, or thinners, as these can damage the finish.
- Keep the dock connector and ports free of dust and debris. Use a soft brush or compressed air if necessary.

5.2 Battery Care

- If the unit will not be used for an extended period, remove the dry cell batteries to prevent leakage and damage.

- Replace all batteries at the same time with new ones of the same type.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC adapter not connected properly; Batteries are depleted or incorrectly inserted.	Check AC adapter connection; Replace batteries with new ones, ensuring correct polarity.
No sound	Volume is too low; Incorrect input source selected; Audio cable (AUX) not connected; iPod/iPhone not seated correctly in dock.	Increase volume; Select the correct input source; Ensure audio cable is fully inserted; Re-seat iPod/iPhone in the dock.
Sound only from one channel	Faulty audio cable; Issue with the audio source device; Internal defect.	Try a different audio cable; Test with another audio source; If problem persists, contact customer support.
Remote control not working	Remote control battery is depleted; Obstruction between remote and unit; Remote sensor is blocked.	Replace the remote control battery; Remove any obstructions; Ensure the remote sensor on the unit is clear.
USB playback issues (e.g., no random play)	Limitations of USB playback functionality; File format not supported.	Some advanced playback features may only be available with internal memory or docked devices. Ensure USB files are in a supported format (e.g., MP3).

7. SPECIFICATIONS

Feature	Detail
Brand	Pioneer
Model Number	STZ-D10S-P
Color	Pink
Speaker Type	Outdoor, Portable
Mounting Type	Tabletop Mount
Recommended Use	iPod
Control Method	Remote, Buttons
Wireless Type	Bluetooth
Power Source Type	Battery
Waterproof	No
Memory Capacity	4GB
Weight	0.8 kg
Dimensions (W x D x H)	319 x 94 x 89 mm

Feature	Detail
Compatible Devices	Smartphone

8. WARRANTY AND SUPPORT

This product comes with a **1-year manufacturer's warranty** from the date of purchase, as indicated on your delivery note. Please retain your delivery note as proof of purchase for warranty claims. For technical support, service, or warranty inquiries, please contact Pioneer customer service. Refer to the official Pioneer website for contact information specific to your region.

Pioneer Official Website: www.pioneer-headphones.com