

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Disney](#) /
- › [Disney Spotlight DS61 Wireless Microphone and App User Manual](#)

Disney DS61

Disney Spotlight DS61 Wireless Microphone and App User Manual

Model: DS61

INTRODUCTION

The Disney Spotlight DS61 Wireless Microphone and App allows users to sing along to their favorite Disney songs, perform, and create videos. This system is designed to provide an interactive karaoke experience, integrating a wireless microphone with a dedicated app for iOS devices.

Key features include:

- App-enabled songs with powerful performance tools.
- Ability to sing along with original vocals or reduce them to take the lead.
- Streaming lyrics with singing cues and Song Key ID for easy pitch enhancement.
- Professional vocal effects such as Reverb, Echo, and Tone for enhanced sound clarity.
- Functionality to capture performances using an iPad camera to create music videos.
- Option to choose custom backgrounds for videos.
- Integration with iTunes library for vocal suppression.
- Wireless connectivity for freedom of movement.







Image: The Disney Spotlight DS61 Wireless Microphone, showcasing its design and compatibility with an iPad.

SETUP GUIDE

Package Contents

Ensure all items are present in the package:

- Disney Spotlight DS61 Wireless Microphone
- Instruction Manual (this document)

Battery Installation

The Disney Spotlight DS61 Wireless Microphone requires 2 AA batteries for operation. To install the batteries:

1. Locate the battery compartment on the microphone handle.
2. Open the battery compartment cover.
3. Insert 2 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

App Installation and Device Connection

The Disney Spotlight experience is app-enabled and requires an iOS device (such as an iPad) for full functionality. The microphone connects directly to your iPad.

1. Download the official Disney Spotlight app from the Apple App Store on your iOS device.
2. Ensure your iPad is charged and the app is installed.
3. Plug the microphone's receiver directly into your iPad's audio jack or compatible port.
4. Launch the Disney Spotlight app. The app should automatically detect the connected microphone.
5. If provided, enter the code for 10 free songs within the app to expand your music library.

OPERATING INSTRUCTIONS

Using the Disney Spotlight App

The app is your central hub for selecting songs, applying effects, and recording performances.

- **Song Selection:** Browse the available Disney song library or access your iTunes library within the app.
- **Vocal Control:** Adjust the original song's vocal volume to sing along with the artist or turn it down to take the lead.

- **Lyrics Display:** Lyrics will stream on your screen with singing cues to guide your performance.
- **Pitch Enhancement:** Utilize the Song Key ID feature for easy pitch adjustment and enhancement.

Applying Vocal Effects

Enhance your voice with professional vocal effects available in the app:

- **Reverb:** Adds richness and depth to your vocals.
- **Echo:** Creates a repeating sound effect for a fuller vocal presence.
- **Tone:** Adjusts the tonal quality of your voice for clarity.
- **Pitch Enhancer:** Helps to correct and improve vocal pitch.

Recording and Sharing Performances

Capture your singing moments and share them with friends:

1. **Start Recording:** Within the app, select the 'Record' option to begin capturing your performance.
2. **Create Music Videos:** Use your iPad's camera to record video alongside your audio.
3. **Custom Backgrounds:** Choose from various custom backgrounds within the app to personalize your music videos.
4. **Share:** Once recorded, you can upload and share your music videos with friends through various platforms supported by the app.

Your browser does not support the video tag.

Video: An overview of the Disney Spotlight system, demonstrating its features and how to use the microphone and app for singing and recording.

CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your Disney Spotlight DS61 Wireless Microphone, follow these care guidelines:

- **Cleaning:** Wipe the microphone with a soft, dry cloth. Do not use abrasive cleaners or immerse the microphone in water.
- **Storage:** Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the microphone will not be used for an extended period to prevent leakage.
- **Handling:** Handle the microphone with care to avoid dropping or physical damage.

TROUBLESHOOTING

If you encounter issues with your Disney Spotlight DS61, refer to the following common problems and solutions:

Microphone Not Working / No Audio Output

- **Check Batteries:** Ensure fresh AA batteries are correctly installed in the microphone.
- **Secure Connection:** Verify that the microphone's receiver is firmly plugged into your iPad's audio port.
- **App Volume:** Check the volume settings within the Disney Spotlight app and on your iPad.

- **App Restart:** Close and restart the Disney Spotlight app.
- **iPad Restart:** Restart your iPad and try again.

App Connectivity Issues

- **App Version:** Ensure your Disney Spotlight app is updated to the latest version.
- **iOS Compatibility:** Verify your iPad's iOS version meets the app's requirements.
- **Reinstall App:** If issues persist, try uninstalling and reinstalling the app.

Limited Song Access

- **Code Redemption:** Confirm that any provided codes for free songs have been correctly redeemed within the app.
- **In-App Purchases:** Additional songs may require in-app purchases. Check the app's store for available content.
- **iTunes Library Access:** Ensure the app has permission to access your iTunes library if you are trying to use your own music.

PRODUCT SPECIFICATIONS

| Feature | Detail |
|---------------------|-------------------------|
| Item Weight | 13.6 ounces |
| Product Dimensions | 2.5 x 5.13 x 9.5 inches |
| Item Model Number | DS61 |
| Batteries Required | 2 AA batteries |
| Compatible Devices | iOS_compatible (iPad) |
| Hardware Platform | Karaoke Machine |
| Power Source | Battery Powered |
| Special Feature | Wireless |
| Included Components | Microphone |
| Recommended Uses | Karaoke |

WARRANTY AND CUSTOMER SUPPORT

For information regarding the product warranty, please refer to the documentation included with your purchase or visit the official Disney consumer products website. If you require technical assistance, troubleshooting beyond this manual, or have questions about your Disney Spotlight DS61, please contact Disney customer support directly. Contact details can typically be found on the product packaging or the official brand website.

