

[manuals.plus](#) /› [Sunbeam](#) /› [Sunbeam CKSBWFMP25 Mini Pancake Maker Instruction Manual](#)**Sunbeam CKSBWFMP25**

Sunbeam CKSBWFMP25 Mini Pancake Maker Instruction Manual

Model: CKSBWFMP25

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating this appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

2. PRODUCT OVERVIEW

The Sunbeam CKSBWFMP25 Mini Pancake Maker is designed to prepare up to eight 2-inch mini pancakes simultaneously. It features nonstick cooking plates for easy food release and cleaning, a drip rim to manage excess batter, and cool-touch handles for safe operation. Power and ready indicator lights provide clear status updates during use.



Image 2.1: The Sunbeam CKSBWFMP25 Mini Pancake Maker in its closed position, showcasing its compact design and red exterior.

Key Features:

- Eight 2-inch mini pancake molds
- Nonstick cooking plates
- Integrated drip rim for easy cleaning
- Cool-touch exterior handles
- Power and Ready indicator lights

3. BEFORE FIRST USE

1. Carefully unpack the mini pancake maker and remove all packaging materials.
2. Wipe the nonstick cooking plates with a damp cloth or sponge. Dry thoroughly.
3. Wipe the exterior of the appliance with a damp cloth. Do not immerse the appliance in water.
4. For the first use, it is recommended to operate the appliance empty for approximately 5-10 minutes to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate.
5. Allow the appliance to cool completely before storing.

4. OPERATING INSTRUCTIONS

4.1 Preparation

1. Place the mini pancake maker on a stable, flat, heat-resistant surface.

2. Ensure the appliance is closed and plug the power cord into a standard electrical outlet. The Power indicator light will illuminate.
3. Allow the appliance to preheat. The Ready indicator light will illuminate when the cooking plates have reached the optimal temperature.
4. For the first batch or if desired, lightly brush the nonstick cooking plates with a small amount of cooking oil or butter.

4.2 Cooking Mini Pancakes

1. Once the Ready light is on, carefully open the lid.
2. Pour approximately 1 tablespoon of pancake batter into the center of each 2-inch mold. Do not overfill, as batter will expand during cooking.



Image 4.1: A hand pouring pancake batter from a measuring cup into the individual molds of the open Sunbeam Mini Pancake Maker.

3. Close the lid. The Ready light may turn off temporarily as the appliance maintains temperature.
4. Cook for approximately 2-4 minutes, or until pancakes are golden brown and cooked through.
Cooking time may vary based on batter consistency and desired browning.
5. Carefully open the lid. Using the included pancake flipper or a heat-resistant non-metallic utensil, gently remove the cooked mini pancakes.



Image 4.2: Eight golden-brown mini pancakes cooked and ready for removal from the open Sunbeam Mini Pancake Maker.

6. Close the lid to allow the appliance to reheat for the next batch. The Ready light will illuminate again when ready.
7. Unplug the appliance from the outlet when finished cooking.

4.3 Tips for Best Results

- Ensure batter is of a consistent, pourable thickness.
- Do not use metal utensils on the nonstick plates to avoid scratching.
- Adjust cooking time for lighter or darker pancakes.
- For best results, allow the appliance to fully reheat between batches.

5. CARE AND CLEANING

Proper care and cleaning will ensure the longevity and optimal performance of your mini pancake maker.

1. Always unplug the appliance from the electrical outlet and allow it to cool completely before cleaning.
2. Wipe the nonstick cooking plates with a soft, damp cloth or sponge. For stubborn residue, a small amount of cooking oil can be applied to soften it before wiping clean.
3. Clean the exterior of the appliance with a damp cloth.
4. **DO NOT IMMERSE THE APPLIANCE IN WATER OR ANY OTHER LIQUID.**
5. Do not use abrasive scouring pads, steel wool, or harsh chemical cleaners, as these can damage the nonstick surface and exterior finish.
6. Ensure the appliance is completely dry before storing.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction.	Ensure plug is securely in a working outlet. Check household circuit breaker.
Pancakes stick to cooking plates.	Plates not sufficiently greased (especially for first use); batter too thick.	Lightly grease plates before each use or as needed. Adjust batter consistency.
Pancakes are unevenly cooked or too light/dark.	Insufficient preheating; cooking time too short/long; uneven batter distribution.	Allow appliance to fully preheat until Ready light illuminates. Adjust cooking time. Ensure batter is evenly distributed.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal. It will dissipate after initial use. Ensure good ventilation.

7. SPECIFICATIONS

Feature	Detail
Brand	Sunbeam
Model	CKSBWFMP25
Dimensions (L x W x H)	10.9 x 27 x 26.11 cm (approx.)
Weight	454 g (approx.)
Material	Non-stick, Plastic/Stainless Steel
Special Features	Cool Touch, Non Stick Coating
Included Components	Pancake Flipper
UPC	027045730952

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact Sunbeam customer service. Keep your proof of purchase for warranty claims.

For technical support or service inquiries, please visit the official Sunbeam website or contact their customer support line. Specific contact details may vary by region.