

## GLOBE 469036

# Globe Electric 469036 Indoor Digital Timer User Manual

Model: 469036

## 1. INTRODUCTION

---

Thank you for choosing the Globe Electric 469036 Indoor Digital Timer. This device is designed to provide convenient and energy-efficient control over your indoor electrical appliances. With its 7-day programmable features and to-the-minute accuracy, you can automate your home or office lighting and other devices with ease. Please read this manual thoroughly before operation to ensure proper use and safety.

## 2. SAFETY INFORMATION

---

Always observe the following safety precautions when using electrical devices:

- Do not immerse the timer in water or any other liquid.
- Do not use the timer outdoors or in wet locations.
- Ensure the timer is properly grounded. The timer features a grounded outlet for protection against short circuits.
- Do not exceed the maximum electrical rating of the timer. Refer to the specifications section for details.
- Do not disassemble or attempt to repair the timer yourself. Contact qualified service personnel for repairs.
- Keep out of reach of children.
- Unplug the timer from the wall outlet before cleaning.

## 3. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Globe Electric Digital Timer:



Figure 3.1: Front view of the Globe Electric 469036 Indoor Digital Timer, showing the digital display, and six blue buttons labeled DAY, HOUR, MIN, CLK, MODE, and PRG, with a RESET button below them.

### Components:

- **Digital Display:** Shows current time, day, and programming settings.
- **DAY Button:** Used to set the day of the week.
- **HOUR Button:** Used to set the hour.
- **MIN Button:** Used to set the minute.
- **CLK (Clock) Button:** Used to view the current time or exit programming mode.
- **MODE Button:** Used to cycle through different operating modes (e.g., ON, OFF, AUTO).
- **PRG (Program) Button:** Used to enter and navigate through programming settings.
- **RESET Button:** Resets all settings to factory defaults. (Often recessed, requires a pointed object to press).
- **Grounded Outlet:** Located on the front, where the appliance is plugged in.

## 4. SETUP

---

## 4.1 Initial Setup

1. Unpack the timer and inspect it for any damage.
2. Plug the timer into a standard 120V AC wall outlet.
3. The display should light up. If it does not, ensure the outlet is live.
4. It is recommended to press the **RESET** button (using a pen or paperclip) upon first use or after a prolonged period of disuse to clear any previous settings.

## 4.2 Setting the Current Time and Day

To set the current time and day:

1. Press and hold the **CLK** button.
2. While holding **CLK**, press the **DAY** button repeatedly until the correct day of the week is displayed.
3. While still holding **CLK**, press the **HOURL** button repeatedly to set the correct hour (note AM/PM if applicable).
4. While still holding **CLK**, press the **MIN** button repeatedly to set the correct minute.
5. Release the **CLK** button. The time and day are now set.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Programming ON/OFF Times

The timer allows for multiple ON/OFF programs. Follow these steps to set a program:

1. Press the **PRG** button once. The display will show "1 ON" and the time will flash.
2. Press **DAY** repeatedly to select the day(s) for this program. Options include individual days, weekdays, weekends, or all 7 days.
3. Press **HOURL** and **MIN** to set the desired ON time for "1 ON".
4. Press **PRG** again. The display will show "1 OFF" and the time will flash.
5. Press **DAY** repeatedly to select the day(s) for this OFF program (usually the same as the ON program).
6. Press **HOURL** and **MIN** to set the desired OFF time for "1 OFF".
7. To set additional programs (e.g., "2 ON", "2 OFF"), repeat steps 1-6, pressing **PRG** to advance to the next program number. The timer supports up to 10 ON/OFF programs.
8. Once all programs are set, press the **CLK** button to return to the current time display.

### 5.2 Setting Operating Mode (AUTO/ON/OFF)

After programming, ensure the timer is in the correct operating mode:

- Press the **MODE** button repeatedly to cycle through the following options:
  - **AUTO ON:** The timer will follow the programmed ON/OFF times. If the current time is within an ON period, the connected appliance will be ON.
  - **AUTO OFF:** The timer will follow the programmed ON/OFF times. If the current time is within an OFF period, the connected appliance will be OFF.
  - **ON:** The connected appliance will remain ON continuously, overriding all programs.
  - **OFF:** The connected appliance will remain OFF continuously, overriding all programs.
- For automatic operation, select either **AUTO ON** or **AUTO OFF** depending on the current state you desire before the next programmed event.

### 5.3 Manual Override

While in AUTO mode, you can temporarily override the current ON/OFF state by pressing the **MODE** button. For example, if the

timer is in AUTO OFF and you want to turn the appliance ON, press **MODE** once to switch to ON. The timer will then revert to AUTO mode at the next programmed event.

## 6. MAINTENANCE

The Globe Electric Digital Timer requires minimal maintenance.

- **Cleaning:** Unplug the timer from the wall outlet. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the timer for an extended period, unplug it and keep it in a cool, dry place.

## 7. TROUBLESHOOTING

| Problem                                             | Possible Cause                                                              | Solution                                                                                                                                                                              |
|-----------------------------------------------------|-----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Timer display is blank.                             | No power to the outlet; internal battery depleted (if applicable).          | Check the wall outlet with another appliance. Ensure the timer is fully plugged in. If the display remains blank, the unit may require service.                                       |
| Appliance does not turn ON/OFF at programmed times. | Timer is not in AUTO mode; incorrect program settings; appliance is faulty. | Press <b>MODE</b> until "AUTO ON" or "AUTO OFF" is displayed. Review your program settings (Section 5.1) for accuracy. Test the appliance by plugging it directly into a wall outlet. |
| Timer is not responding to button presses.          | Temporary software glitch.                                                  | Press the <b>RESET</b> button using a pointed object. This will clear all settings, so you will need to reprogram the timer.                                                          |

## 8. SPECIFICATIONS

- **Model:** 469036
- **Type:** Indoor Digital Timer
- **Color:** White
- **Material:** Plastic
- **Dimensions:** 6.1 x 11.18 x 13.72 cm (2.4 x 4.4 x 5.4 inches)
- **Weight:** 22.7 g (0.05 lbs)
- **Number of Settings:** Up to 10 ON/OFF programs
- **Power:** 120V AC, 60Hz (Specific amperage/wattage not provided in source, general timer info usually implies standard household load)
- **Grounding:** Grounded outlet
- **UPC:** 050428135587

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Globe Electric customer service. Refer to the product packaging or the Globe Electric website for the most current contact details and warranty policy.

*Note: Specific warranty terms may vary by region and purchase date. Please retain your proof of purchase.*

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question