



Manuals.plus /

- › EGLO /
- › EGLO 89065A Rebell Ceiling/Wall Mount Light Fixture User Manual

EGLO 89065A

EGLO 89065A Rebell One-Light Ceiling/Wall Mount Fixture

User Instruction Manual

INTRODUCTION

Thank you for purchasing the EGLO 89065A Rebell One-Light Ceiling/Wall Mount Fixture. This manual provides essential information for the safe installation, operation, and maintenance of your new light fixture. Please read these instructions thoroughly before beginning installation and retain them for future reference.



Image: The EGLO 89065A Rebell light fixture, showcasing its brushed aluminum finish and glitter foil shade, designed for ceiling or wall mounting.

SAFETY INSTRUCTIONS

- **WARNING:** Always turn off the power supply at the main circuit breaker before beginning installation, maintenance, or bulb replacement.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Use only the specified bulb type and wattage. Exceeding the maximum wattage may cause overheating and damage to the fixture.
- Do not connect this fixture to an ungrounded electrical system.
- Ensure all electrical connections are secure and comply with local electrical codes.
- Do not handle the fixture or power cord with wet hands.
- Keep flammable materials away from the light fixture.

PACKAGE CONTENTS

Verify that all components are present before discarding packaging materials:

- Light Fixture Assembly (Brushed Aluminum Finish with Glitter Foil Shade)
- Mounting Hardware (screws, wire nuts)
- Instruction Manual

Note: One (1) 60W A19 bulb is required and not included in the package.

SETUP AND INSTALLATION

This fixture can be mounted on either a ceiling or a wall. Follow these steps carefully:

1. Prepare for Installation:

- Turn off power at the main circuit breaker.
- Ensure the mounting surface is clean, dry, and structurally sound.
- Gather necessary tools (screwdriver, wire strippers, electrical tape, safety glasses).

2. Attach Mounting Bracket:

- Secure the mounting bracket to the electrical junction box using the provided screws. Ensure it is firmly attached.

3. Make Electrical Connections:

- Connect the fixture's white wire to the supply's white (neutral) wire.
- Connect the fixture's black wire to the supply's black (live) wire.
- Connect the fixture's ground wire (bare copper or green) to the supply's ground wire and the mounting bracket.
- Secure all connections with wire nuts and wrap with electrical tape for added safety.

4. Mount the Fixture:

- Carefully align the fixture with the mounting bracket and secure it using the provided screws.
- Ensure the fixture is flush against the mounting surface.

5. Install Bulb:

- Insert one (1) 60W A19 bulb (not included) into the socket. Do not overtighten.

6. Restore Power:

- Turn the power back on at the main circuit breaker.
- Test the light fixture.

OPERATING INSTRUCTIONS

The EGLO 89065A Rebell fixture operates via a standard wall switch or compatible push-button controller connected to your home's electrical system.

- **Turning On/Off:** Use the wall switch connected to the fixture to turn the light on or off.
- **Bulb Replacement:** Ensure power is off at the circuit breaker before replacing the bulb. Allow the bulb to cool completely before touching. Unscrew the old bulb and screw in a new 60W A19 bulb.

MAINTENANCE

Proper care will ensure the longevity and appearance of your light fixture.

- **Cleaning:** Turn off the power and allow the fixture to cool. Wipe the brushed aluminum finish and glitter foil shade with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Type:** Use only one (1) 60W A19 incandescent bulb or an equivalent LED/CFL bulb.
- **Inspection:** Periodically check all electrical connections and mounting hardware for tightness.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Bulb is faulty or loose. Incorrect wiring.	Check circuit breaker and wall switch. Replace bulb or tighten it. Verify wiring connections (consult a qualified electrician if unsure).
Light flickers.	Loose bulb. Loose wiring connection. Incompatible dimmer switch (if applicable).	Tighten bulb. Check and secure wiring connections. Ensure dimmer switch is compatible with the bulb type.
Fixture hums.	Incompatible bulb or dimmer.	Replace bulb with a compatible type or remove dimmer.

If you experience issues not listed here or if troubleshooting steps do not resolve the problem, please contact customer support.

SPECIFICATIONS

- **Model:** 89065A Rebell
- **Brand:** EGLO
- **Dimensions:** 9 7/8" wide, 8 3/8" tall (approximate)
- **Material:** Aluminum (Brushed Finish), Crystal (Shade)
- **Light Source:** 1 x A19 bulb (not included)
- **Max Wattage:** 60W
- **Mounting Type:** Ceiling Mount, Wall Mount
- **Power Source:** Corded Electric

WARRANTY AND SUPPORT

Specific warranty information for the EGLO 89065A Rebell fixture is not provided in this document. Please refer to the original product packaging or the manufacturer's official website for detailed warranty terms and conditions.

For technical support, replacement parts, or further assistance, please contact EGLO customer service through their official website or the retailer where the product was purchased.

EGLO Official Website: Visit the EGLO Store on Amazon

