

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Frigidaire](#) /

› [Frigidaire 0.9 Cu. Ft. 900W Countertop Microwave Oven Instruction Manual \(Model EMW953AMZBLACK\)](#)

Frigidaire EMW953AMZBLACK

Frigidaire 0.9 Cu. Ft. 900W Countertop Microwave Oven

Instruction Manual - Model EMW953AMZBLACK

INTRODUCTION

Thank you for purchasing the Frigidaire 0.9 Cu. Ft. 900W Countertop Microwave Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before use and retain them for future reference.



Figure 1: Front view of the Frigidaire 0.9 Cu. Ft. 900W Countertop Microwave Oven.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when the appliance is used by or near children.
- Do not use this microwave for commercial purposes. It is designed for household use only.
- Ensure proper ventilation around the microwave.
- Always place food on the glass turntable for even heating.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Frigidaire 0.9 Cu. Ft. 900W Countertop Microwave Oven Unit
- Glass Turntable
- Turntable Ring Assembly
- Instruction Manual (this document)

SETUP

1. Placement

Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate ventilation space around the unit: at least 4 inches (10 cm) of space on the top, sides, and rear for proper airflow.

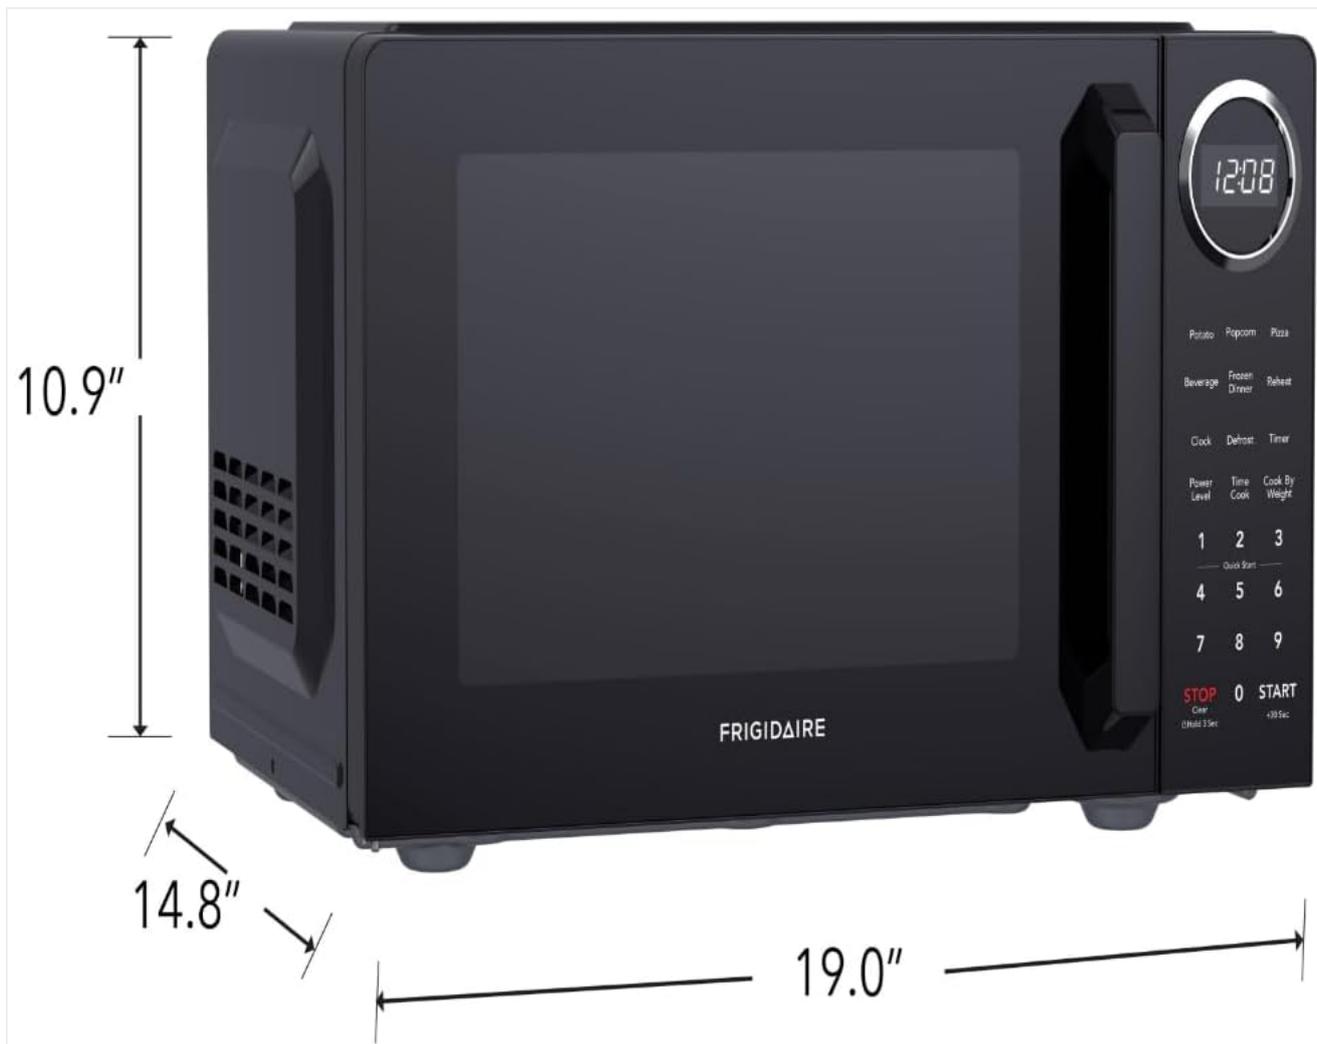


Figure 2: Microwave dimensions for proper placement.

2. Electrical Requirements

Ensure the electrical outlet is properly grounded and matches the voltage and frequency requirements specified on the microwave's rating label. Do not use extension cords or adapters.

3. Turntable Assembly

1. Place the turntable ring assembly in the center of the microwave oven cavity.
2. Carefully place the glass turntable on top of the ring assembly, ensuring it sits securely in the center support.



Figure 3: Interior view with glass turntable.

OPERATING INSTRUCTIONS

Control Panel Overview

FRIGIDAIRE



Stylish Chrome Accent Dial



Rotating Turntable



Classic Black Finish

Figure 4: Control panel featuring the digital display, chrome dial, and function buttons.

The control panel features a digital display, a chrome accent dial, and various buttons for different cooking functions. The buttons include: Popcorn, Beverage, Baked Potato, Frozen Dinner, Pizza, Reheat, Power Level, Timer, Cook, Reset, Clock, Cook By Weight, Defrost By Weight, Speed Defrost, Start, and Stop.

Basic Cooking (Time Cook)

1. Place food in a microwave-safe container on the glass turntable.
2. Close the microwave door securely.
3. Enter the desired cooking time using the number pad.
4. Press the "Start" button to begin cooking.
5. To adjust power level: After entering time, press "Power Level", then enter a number from 1-10 (10 for 100% power). Then press "Start".

Pre-set Functions

This microwave features six one-touch express cooking menu buttons for common items:

- **Popcorn:** For 3 to 3.5 oz bags.

- **Beverage:** For 1 to 4 cups.
- **Baked Potato:** For 1 to 4 potatoes.
- **Frozen Dinner:** For small/large portions.
- **Pizza:** For slice/whole.
- **Reheat:** For 10 oz serving.

Simply press the desired pre-set button once for the default setting, or multiple times to cycle through options if available (e.g., for multiple potatoes or cups of beverage), then press "Start".

Defrost Functions

- **Speed Defrost:** Alternates between defrost and stand times for efficient results.
- **Defrost by Weight:** Allows you to input the weight of the food for optimized defrosting.

Follow the on-screen prompts or refer to the quick-touch cook guide inside the microwave door for specific instructions on using these functions.

Setting Clock and Timer

- **Clock:** Press the "Clock" button, enter the current time using the number pad, then press "Clock" again to confirm.
- **Timer:** Press the "Timer" button, enter the desired time, then press "Start". The timer will count down without activating the microwave.

Child Safety Lock

To activate the child safety lock, press and hold the "Stop" button for 3 seconds. The display will show an indicator (e.g., "LOCK"). To deactivate, press and hold the "Stop" button again for 3 seconds.

Note: Some users have reported that pressing "Power Level" + "Stop" + "Start" simultaneously can also disable the door lock feature, allowing the door to be opened mid-cycle without resetting the timer.

Demonstration Videos

Your browser does not support the video tag.

Video 1: A user demonstrates the basic functions and features of the Frigidaire 0.9 Cu. Ft. Microwave Oven, including the control panel and interior.

Your browser does not support the video tag.

Video 2: A detailed review showcasing the Frigidaire 0.9 Cu. Ft. Microwave Oven, highlighting its compact size and functionality.

MAINTENANCE

Cleaning the Exterior

Wipe the exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could scratch the finish.

Cleaning the Interior

For spills and splatters, wipe the interior with a soft, damp cloth immediately. For stubborn food residue, place a bowl of water with lemon slices inside and microwave on high for 2-3 minutes. The steam will loosen the residue, making it easier to wipe clean.

Cleaning the Glass Turntable

The glass turntable is removable and dishwasher safe for easy cleaning. Wipe the turntable ring assembly with a damp cloth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Microwave does not start.	Power cord not securely plugged in; household fuse blown or circuit breaker tripped; door not closed properly.	Ensure the power cord is firmly plugged into a grounded outlet. Check your household fuse/circuit breaker. Close the microwave door completely.
Food is not heating.	Incorrect cooking time or power level set; food not suitable for microwave heating.	Verify cooking time and power level settings. Ensure food is in a microwave-safe container.
Child lock is active and door cannot be opened mid-cycle.	Child safety lock feature is engaged.	Press and hold the "Stop" button for 3 seconds to deactivate the child lock. Alternatively, try pressing "Power Level" + "Stop" + "Start" simultaneously to disable the door lock feature.
Unusual noise during operation.	Turntable not correctly seated; foreign object in cavity.	Ensure the glass turntable and ring assembly are correctly positioned. Check for any obstructions inside the microwave cavity.

SPECIFICATIONS

Brand	Frigidaire
Model Name	EMW953AMZBLACK
Capacity	0.9 Cubic Feet
Wattage	900 Watts
Product Dimensions (D x W x H)	15.5"D x 19"W x 10.85"H
Color	Black
Material (Inner)	Stainless Steel
Controller Type	Touch
Number of Power Levels	10
Special Feature	Child Safety Lock

WARRANTY INFORMATION

This Frigidaire microwave oven comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. For full terms and conditions, please refer to the warranty card included with your product or contact customer support.

Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, service, or questions regarding your Frigidaire microwave oven, please contact customer support:

- **Website:** Visit the official Frigidaire website for FAQs and support resources.
- **Phone:** Refer to your product registration card or the Frigidaire website for regional customer service contact numbers.

When contacting support, please have your model number (EMW953AMZBLACK) and serial number ready.

