

Sauder 411204

Sauder Shoal Creek Computer Desk (Model 411204) - Soft White Instruction Manual

Brand: Sauder | Model: 411204

PRODUCT OVERVIEW

The Sauder Shoal Creek Computer Desk in Soft White is designed to provide a functional workspace for various office essentials. This desk features a flip-down panel that reveals a slide-out keyboard/mouse shelf and a small storage drawer, both operating on smooth metal runners. Constructed from engineered wood, it offers a clean aesthetic suitable for home office environments.



Image 1: Front view of the Sauder Shoal Creek Computer Desk in Soft White, featuring two drawers and a spacious top surface.

Key Features:

- Flip-down panel with slide-out keyboard/mouse shelf on metal runners with safety stops.
- Small drawer with patented T-lock assembly system.
- Soft White finish.
- Durable engineered wood construction.
- Assembled dimensions: 47.165" L x 19.449" W x 30.276" H.

ASSEMBLY INSTRUCTIONS

This section provides general guidance for assembling your Sauder Shoal Creek Computer Desk. For detailed, step-by-step instructions, please refer to the included assembly manual and diagrams. Ensure all parts are present before beginning assembly.

General Assembly Tips:

- Organize all hardware and panels.
- Use a clean, flat surface for assembly to prevent scratches.
- Do not overtighten screws.

- Two people are recommended for certain assembly steps.

Hardware Identification:

Proper identification of hardware components is crucial for correct assembly. Below are videos demonstrating how to identify specific parts.

Your browser does not support the video tag.

Video 1: This video demonstrates how to identify different types of drawer rails (cabinet left, cabinet right, drawer left, drawer right) and their components like flanges and rollers, which are essential for proper drawer installation.

Your browser does not support the video tag.

Video 2: This video illustrates the assembly process for cam and dowel fasteners, showing how to insert cam dowels and cam screws into pre-drilled holes and secure them by turning the hidden cam.

Drawer and Keyboard Tray Assembly:

The desk includes a small drawer and a flip-down keyboard/mouse shelf. Ensure the metal runners are correctly aligned and secured to both the desk frame and the drawer/shelf components. The safety stops on the keyboard tray runners are designed to prevent the tray from being pulled out completely.

 


Image 2: The Sauder Shoal Creek desk with its left-side flip-down keyboard tray and right-side storage drawer both open, showcasing their functionality.

OPERATING INSTRUCTIONS

Using the Keyboard/Mouse Shelf:

1. To access the keyboard/mouse shelf, gently pull the flip-down panel forward.
2. The shelf will slide out on its metal runners. Ensure it extends smoothly.
3. When finished, push the shelf back into the desk and close the flip-down panel until it is flush with the desk front.

Using the Storage Drawer:

The small drawer provides convenient storage. Pull the drawer handle to open and push to close. The drawer operates on smooth metal runners.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your Sauder Shoal Creek Computer Desk, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth to prevent staining or damage to the engineered wood.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Heat and Moisture:** Use coasters under hot or cold beverages and protective pads under hot dishes to prevent damage to the desk surface.
- **Hardware:** Periodically check and tighten all assembly hardware to maintain stability.

TROUBLESHOOTING

If you encounter issues with your desk, consider the following common solutions:

- **Wobbly Desk:** Ensure all cam locks and screws are fully tightened. Check that the desk is on a level surface.
- **Drawer/Keyboard Tray Sticking:** Verify that the metal runners are clean and free of debris. Ensure they are correctly installed and aligned. A small amount of silicone lubricant can be applied to the runners if needed.
- **Missing or Damaged Parts:** Refer to the warranty and support section for information on obtaining replacement parts.

SPECIFICATIONS

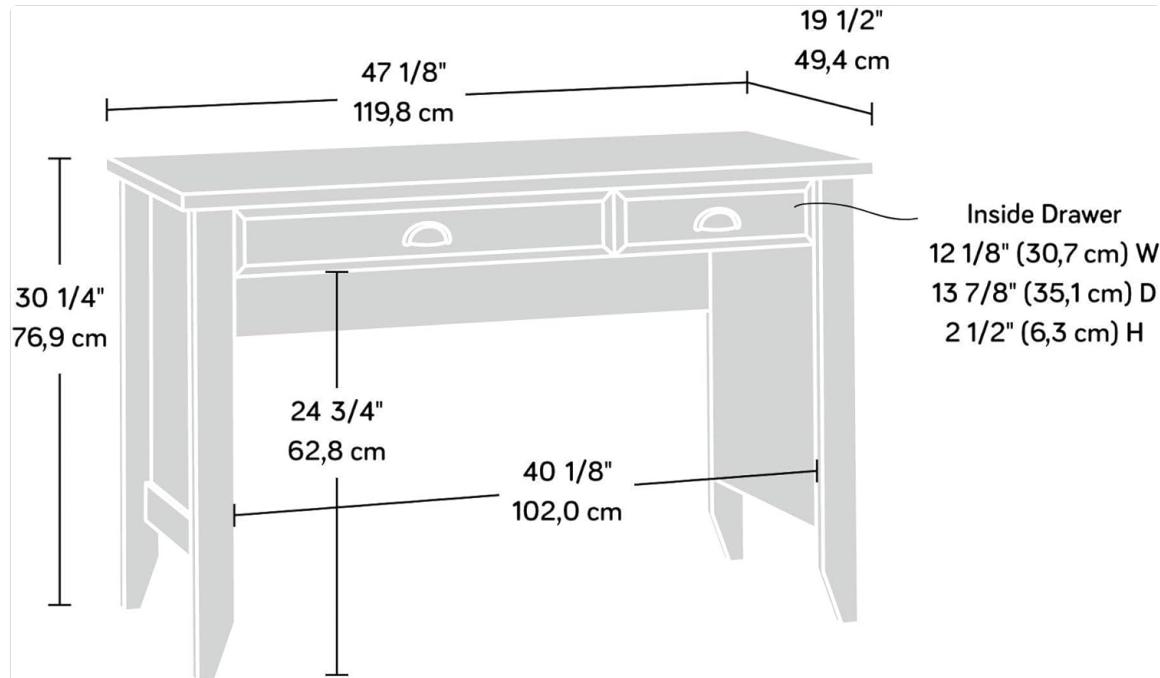


Image 3: Diagram illustrating the key dimensions of the Sauder Shoal Creek Computer Desk, including overall length, width, height, and internal drawer measurements.

Product Specifications

Brand	Sauder
Model Number	411204
Color	Soft White
Product Dimensions (D x W x H)	19.45"D x 47.17"W x 30.25"H
Item Weight	72.5 Pounds
Material	Engineered Wood (Base & Top)
Special Feature	Keyboard Tray Included
Drawer Type	Single Drawer
Drawer Glide Material	Metal
Maximum Weight Recommendation	75 Pounds
Required Assembly	Yes
Tools Recommended For Assembly	Hammer, Screw Driver (Includes All Assembly Tools: Yes)

SAFETY INFORMATION

Adhere to the following safety guidelines to prevent injury or damage to the product:

- Ensure that the desk is properly assembled and stable before use.
- Do not place heavy objects on the keyboard/mouse shelf to avoid tipping.
- Always use the safety stops when extending the keyboard/mouse shelf to prevent it from detaching.
- Do not stand or sit on the desk.
- Keep small parts away from children during assembly.

WARRANTY AND SUPPORT

Manufacturer's Warranty:

The Sauder Shoal Creek Computer Desk comes with a **5-year limited warranty on parts**. This warranty covers manufacturing defects and ensures replacement of faulty components. Please retain your proof of purchase for warranty claims.

Customer Support:


For assistance with assembly, missing parts, or warranty claims, please contact Sauder customer service. Refer to the contact information provided in your product packaging or visit the official Sauder website for support resources.

You can also visit the [Sauder Store on Amazon](#) for additional product information and support.

© 2025 Sauder. All rights reserved.

Related Documents - 411204

 <p>4-Drawer Chest Shoal Creek Collection Model 409714</p> <p>402375 Computer Desk SAUDER Good Furniture Made Possible</p>  <p>402375 Computer Desk SAUDER Good Furniture Made Possible</p> <p>PLEASE CONTACT US DIRECTLY TO YOUR UNIT TO THE STORE 1-800-543-3737 www.sauder.com</p> <p>SAUDER FURNITURE CORPORATION 10000 100th Street, Suite 200 • West Des Moines, IA 50266-3611 Phone: 515-263-7171 • Fax: 515-263-7177 E-mail: customerservice@sauder.com</p>	<p>Sauder 4-Drawer Chest Assembly Instructions & Safety Guide</p> <p>Comprehensive assembly instructions, parts list, hardware identification, and safety information for the Sauder Shoal Creek Collection 4-Drawer Chest, Model 409714.</p>
 <p>402375 Computer Desk SAUDER Good Furniture Made Possible</p>  <p>402375 Computer Desk SAUDER Good Furniture Made Possible</p> <p>PLEASE CONTACT US DIRECTLY TO YOUR UNIT TO THE STORE 1-800-543-3737 www.sauder.com</p> <p>SAUDER FURNITURE CORPORATION 10000 100th Street, Suite 200 • West Des Moines, IA 50266-3611 Phone: 515-263-7171 • Fax: 515-263-7177 E-mail: customerservice@sauder.com</p>	<p>Sauder 402375 Computer Desk Assembly Instructions</p> <p>Assembly instructions, safety information, and warranty details for the Sauder 402375 Computer Desk. Available in English, French, and Spanish.</p>

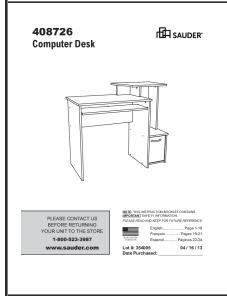	<p>Sauder Corner Computer Desk - Harbor View Collection (Model 417586) Assembly Instructions</p> <p>Detailed assembly instructions and parts guide for the Sauder Corner Computer Desk from the Harbor View Collection (Model 417586). Learn how to assemble your new desk with clear steps, part identification, and hardware details.</p>
	<p>Sauder 408726 Computer Desk Assembly Instructions</p> <p>Comprehensive assembly instructions for the Sauder 408726 Computer Desk. This guide provides detailed steps, part identification, hardware lists, safety warnings, and warranty information, with textual descriptions replacing diagrams for accessibility.</p>
	<p>Sauder 408726 Computer Desk Assembly Instructions</p> <p>Assembly instructions and safety information for the Sauder 408726 Computer Desk. Includes part identification, hardware list, step-by-step assembly guide, and warranty information.</p>
	<p>Sauder Writing Desk Assembly Instructions & Safety Guide Model 425347</p> <p>Detailed assembly instructions, part identification, safety warnings, and 1-year limited warranty for the Sauder Model 425347 Writing Desk. Support available via sauder.com/service and phone.</p>