

[Manuals.plus](#) /

› [Konami](#) /

› Konami Logitech Microphone for Nintendo Wii User Manual

Konami 25013

Konami Logitech Microphone for Nintendo Wii

USER MANUAL

Introduction

This manual provides essential information for the proper setup, operation, and maintenance of your Konami Logitech Microphone, designed specifically for use with the Nintendo Wii console. This high-performance microphone is engineered to accurately reproduce your voice, enhancing your karaoke gaming experience.

What's in the Box

- Konami Logitech Microphone (Model: 25013)

Setup

Follow these steps to connect your microphone to the Nintendo Wii console:

1. Locate an available USB port on your Nintendo Wii console. The USB ports are typically found on the back of the console.
2. Insert the USB connector of the Konami Logitech Microphone firmly into the USB port.
3. Ensure the connection is secure. The Wii console should automatically recognize the microphone when a compatible game is launched.
4. Launch your desired karaoke or music game. The game's settings may require you to select the microphone as the input device.



Figure 1: The Konami Logitech Microphone. This black wired microphone features a mesh top, a silver band, and the red 'KONAMI' logo prominently displayed on its body. It connects via a USB cable.

Operating Instructions

The Konami Logitech Microphone is designed for optimal performance in karaoke and music games. Its high-performance design ensures clear voice capture.

- **Voice Reproduction:** The microphone is built to accurately reproduce the sound of your voice, making your singing experience more immersive.
- **Cable Length:** The generous 15-foot cable provides ample freedom of movement, allowing you to perform comfortably without being restricted by proximity to the console.
- **Game Compatibility:** Ensure your game supports USB microphones. Most karaoke and music rhythm games on the Nintendo Wii are compatible.

Maintenance

Proper care will extend the life of your microphone:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the microphone. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tangling the cable.
- **Handling:** Avoid dropping the microphone or subjecting it to strong impacts, as this can damage internal components.

Troubleshooting

If you encounter issues with your microphone, try the following solutions:

- **Microphone Not Recognized:**
 - Ensure the USB cable is securely plugged into a working USB port on the Wii console.
 - Try a different USB port on the console.
 - Restart the Wii console and the game.
 - Verify that the game you are playing supports USB microphones.
- **Poor Sound Quality / Echo:**
 - Check the in-game audio settings. Many karaoke games have options to adjust microphone volume, sensitivity, and to remove background noise or echo.
 - Ensure you are holding the microphone correctly and speaking directly into the mesh top.
 - Reduce any ambient noise in the room.
- **No Sound Output:**
 - Confirm that your TV or audio system volume is turned up.
 - Check the game's audio settings to ensure microphone output is enabled.

Specifications

Model Number	25013
Dimensions	7.2 x 4.1 x 1.1 inches
Item Weight	9.6 ounces
Cable Length	15 feet

Connectivity	USB
Manufacturer	Konami
ASIN	B005Q6R3C6
First Available Date	March 28, 2010

Warranty Information

For detailed warranty information regarding your Konami Logitech Microphone, please refer to the original product packaging or visit the official Konami website. Warranty terms and conditions may vary and are subject to the policies of the manufacturer at the time of purchase.

Customer Support

If you require further assistance or have questions not covered in this manual, please contact Konami customer support. You can typically find contact information on the official Konami website or through the support section of your game console's online services.

For general inquiries, you may visit the [Konami Store on Amazon](#).

© 2024 Konami. All rights reserved. Nintendo Wii is a trademark of Nintendo.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

