

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Wahl](#) /

› [Wahl Home Pro Corded Hair Clipper 22-Piece Set User Manual](#)

Wahl Home Pro

Wahl Home Pro Corded Hair Clipper 22-Piece Set User Manual

Model: Home Pro | Brand: Wahl

1. INTRODUCTION

This manual provides comprehensive instructions for the Wahl Home Pro Corded Hair Clipper 22-Piece Set. This kit is designed for personal home hair cutting, offering a complete set of tools for various styling needs. Please read these instructions thoroughly before first use to ensure safe and effective operation.

2. SAFETY INFORMATION

WARNING: To reduce the risk of electric shock or injury:

- For external use only. Avoid contact with eyes.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning, putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions, or has been dropped or damaged in any manner.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this appliance with a damaged or broken comb, as facial injury may result.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "OFF" then remove plug from outlet.

3. PACKAGE CONTENTS

The Wahl Home Pro Corded Hair Clipper 22-Piece Set includes the following items:

- Wahl Home Pro Corded Hair Clipper
- 8 Attachment Combs (#1 - #8)
- Left Ear Taper Comb
- Right Ear Taper Comb
- Barber Comb
- Styling Comb
- Scissors
- Soft Storage Pouch
- Blade Oil
- Cleaning Brush
- Instruction Booklet



Image: All components included in the Wahl Home Pro 22-Piece Hair Clipper Set, including the clipper, various guide combs, scissors, combs, blade oil, and cleaning brush.

4. PRODUCT FEATURES

The Wahl Home Pro Corded Hair Clipper is engineered with features designed for efficient and comfortable home hair cutting:

- **Powerful Corded Motor:** Provides continuous power for consistent cutting performance without battery limitations.
- **Self-Sharpening Precision Blades:** High-carbon steel blades are designed to stay sharper for longer, ensuring a clean cut every time.
- **Adjustable Taper Lever:** Allows for easy adjustment of cutting length without changing attachment combs, ideal for blending and fading.
- **Ergonomic Design with Soft-Touch Grip:** Ensures comfortable handling and control during use.
- **Variety of Attachment Combs:** Includes 8 standard combs and 2 ear taper combs for customizable cutting lengths from 3mm to 25mm.



10 Attachment Combs

For customisable cutting lengths from 3 - 25mm

Soft-Touch Grip

Provides comfort and control

Corded

For continuous power

Image: The Wahl Home Pro clipper, illustrating its soft-touch grip, corded power, and the range of attachment combs for various cutting lengths.



Integrated Taper Lever

Adjustable for a wider variety
of cutting lengths without
changing attachment combs

Image: A close-up view of the Wahl Home Pro clipper, highlighting the integrated taper lever which allows for fine adjustment of cutting lengths.



Image: A detailed view of the Wahl clipper's precision blades, made from high-carbon steel for durability and sharpness.

5. SETUP AND ASSEMBLY

- 1. Unpack:** Carefully remove all items from the packaging. Retain the packaging for storage or future transport.
- 2. Inspect:** Check all components for any signs of damage. If any part is damaged, do not use the clipper and contact customer support.
- 3. Clean and Oil Blades:** Before first use, apply a few drops of the included blade oil to the clipper blades. Turn the clipper on for a few seconds to distribute the oil. Wipe off any excess oil.
- 4. Attach Guide Comb:** Select the desired attachment comb for your preferred hair length. Ensure the comb is securely snapped onto the clipper blades.
- 5. Power Connection:** Plug the clipper into a suitable electrical outlet. Ensure the voltage matches the clipper's requirements.

6. OPERATING INSTRUCTIONS (HAIRCUTTING GUIDE)

For best results, ensure hair is clean and dry before cutting. Always start with a longer guide comb than you

think you need, and gradually work down to shorter lengths.

6.1 Basic Haircutting Steps

1. **Prepare Hair:** Comb hair to remove tangles.
2. **Select Comb:** Choose an attachment comb based on the desired length. For a uniform cut, use the same comb all over. For tapered styles, use progressively shorter combs.
3. **Start Cutting:** Hold the clipper with the blades pointing upwards. Begin at the nape of the neck, moving upwards against the direction of hair growth. Use a slow, steady motion.
4. **Blend and Taper:** Use the adjustable taper lever for fine-tuning lengths and blending sections. Move the lever up for a shorter cut and down for a longer cut.
5. **Outline and Finish:** Remove the attachment comb for outlining around the ears, neckline, and sideburns. Use the barber comb and scissors for detailing.

6.2 Using Attachment Combs

The kit includes 8 standard attachment combs (#1 to #8) and left/right ear taper combs. Each comb is marked with its corresponding cutting length. To attach, align the comb with the clipper blade and push firmly until it clicks into place. To remove, pull the comb away from the blade.

6.3 Using the Taper Lever

The taper lever is located on the side of the clipper. When the lever is in the highest position, the blades will cut to the shortest length. Moving the lever downwards gradually increases the cutting length. This feature is useful for blending hair and achieving precise fades without constantly changing guide combs.



Image: An individual demonstrating the use of the Wahl Home Pro clipper to cut hair, illustrating proper handling during operation.



Image: A close-up shot of the Wahl Home Pro clipper in action, showing the blades cutting hair for a precise finish.

7. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your clipper.

- 1. Clean Blades After Each Use:** Use the included cleaning brush to remove loose hairs from the blades. For a more thorough cleaning, you can detach the blades (refer to the instruction booklet for specific blade removal steps if applicable) and rinse them under water, ensuring they are completely dry before reattaching.
- 2. Oil Blades Regularly:** After every few uses, or if the clipper starts to pull hair, apply 2-3 drops of Wahl clipper oil across the top of the blades. Turn the clipper on for a few seconds to allow the oil to penetrate. Wipe off any excess oil with a soft cloth. Do not use hair oil, grease, or any oil mixed with kerosene or solvent, as these will evaporate and slow down the blades.
- 3. Store Properly:** Store the clipper and all accessories in the soft storage pouch provided, in a cool, dry place, away from children.

8. TROUBLESHOOTING

If you encounter issues with your Wahl Home Pro clipper, refer to the following common solutions:

Problem	Possible Cause	Solution
Clipper does not turn on.	Not plugged in; power outlet malfunction; damaged cord.	Ensure clipper is securely plugged into a working outlet. Check for visible cord damage. If damaged, discontinue use and contact customer service.
Clipper pulls or snags hair.	Blades are dull or not oiled; hair is not clean/dry; comb attachment is loose.	Clean and oil blades. Ensure hair is clean and dry. Check that the attachment comb is securely fastened.
Clipper is noisy or vibrates excessively.	Blades are not aligned or need oiling; internal mechanism issue.	Ensure blades are properly aligned and oiled. If the issue persists, contact customer support.

If these solutions do not resolve the issue, please refer to the full instruction booklet or contact Wahl customer support.

9. SPECIFICATIONS

- **Brand:** Wahl
- **Model Name:** Home Pro
- **Power Source:** Corded Electric
- **Blade Material:** Stainless Steel
- **Unit Count:** 22 Pieces (Total kit components)
- **Manufacturer:** Wahl Clipper Corporation
- **Country of Origin:** USA
- **ASIN:** B005ROTDMK

10. WARRANTY AND SUPPORT

Wahl products are manufactured to high standards and are inspected before shipment. For specific warranty information, please refer to the warranty card included in your product packaging or visit the official Wahl website. For technical support, replacement parts, or service inquiries, please contact Wahl customer service directly.

You can find more information and support on the official Wahl website: www.wahl.com