

Cuisinart CPM-100P1

Cuisinart CPM-100 EasyPop Hot Air Popcorn Maker Instruction Manual

Model: CPM-100P1 | Brand: Cuisinart

1. INTRODUCTION

The Cuisinart EasyPop Hot Air Popcorn Maker is designed for convenient and healthy popcorn preparation. This appliance uses hot air to pop kernels without the need for oil, delivering up to 15 cups of popcorn in under 3 minutes. Its user-friendly design includes a removable chute and butter warming tray for enhanced functionality and easy cleaning.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Never preheat the popcorn maker. Always add popcorn kernels to the popping chamber before plugging in.
- Operating the popper without popcorn kernels may cause damage to the unit.

3. PARTS AND FEATURES

- **Removable Multi-Purpose Cup:** Located in the popping chute, this cup allows you to measure kernels and melt butter simultaneously while popcorn is popping.
- **Popping Chute:** Directs popped corn directly into a waiting bowl. It is dishwasher-safe for easy cleanup.
- **Popping Chamber:** Channels hot air to pop up to 15 cups of popcorn in less than 3 minutes without oil.
- **On/Off Switch:** Provides simple control to start and stop the popping process.



Figure 3.1: Overview of the Cuisinart CPM-100 EasyPop Hot Air Popcorn Maker. The image displays the red base unit with a clear plastic popping chute and a removable multi-purpose cup on top.



Figure 3.2: Dimensions of the Cuisinart CPM-100 EasyPop Hot Air Popcorn Maker. The image shows the appliance with measurements: 7.87 inches (L), 5.51 inches (W), and 12.83 inches (H).

4. SETUP

1. Unpack all components and remove any packaging materials.
2. Wipe the base unit with a damp cloth. Wash the removable popping chute and multi-purpose cup in warm, soapy water, then rinse and dry thoroughly.
3. Place the popcorn maker on a stable, flat, heat-resistant surface.
4. Ensure the popping chute is securely placed on the base unit.
5. Place the multi-purpose cup into the opening of the popping chute.

5. OPERATING INSTRUCTIONS

5.1 Popping Popcorn

1. Use the removable multi-purpose cup to measure popcorn kernels. Do not exceed 1/2 cup of kernels per batch.
2. Pour the measured kernels into the popping chamber through the opening in the popping chute. Ensure the kernels do not cover the maximum fill line inside the chamber.
3. If desired, place butter (up to 2 tablespoons) into the multi-purpose cup to melt while the popcorn is popping.
4. Place a large heat-resistant bowl (not included) under the popping chute to collect the popped corn.
5. Plug the appliance into a standard electrical outlet.
6. Press the On/Off switch to the 'On' position. The popping process will begin immediately.
7. Once popping is complete (typically under 3 minutes), switch the appliance to the 'Off' position and unplug it from the outlet.
8. Carefully remove the multi-purpose cup (it may be hot) and pour any melted butter over the popcorn.

5.2 Popcorn Amounts and Yield

Kernels (cups)	Yield (cups of popped popcorn)
1/4	Approximately 7
1/3	Approximately 10
1/2	Approximately 15

5.3 Popcorn Flavoring Tips

The flavor possibilities for popcorn are extensive. After popping, add melted butter and your preferred seasonings to a bowl of popcorn. For best results with toppings, heat the seasoned popcorn on a baking sheet lined with foil and coated with nonstick cooking spray in a 300°F (150°C) oven for 15 to 20 minutes before serving. This enhances crispness and flavor intensity. The amount of seasoning should be adjusted to your taste. Olive oil can provide a richer flavor, while grapeseed oil imparts no flavor to the popcorn.

Video 5.1: Official Cuisinart demonstration of the CPM-100 EasyPop Hot Air Popcorn Maker. This video provides a visual guide to the product's features and basic operation.

6. MAINTENANCE AND CLEANING

1. Always unplug the popcorn maker from the electrical outlet and allow it to cool completely before cleaning.
2. The removable popping chute and multi-purpose cup are dishwasher safe (top rack only) or can be washed by hand in warm, soapy water. Rinse thoroughly and dry.

3. Wipe the exterior of the base unit with a damp cloth. Do not immerse the base unit in water or any other liquid.
4. Do not use abrasive cleaners or scouring pads on any part of the appliance, as this may damage the surfaces.
5. Ensure all parts are completely dry before storing or next use.

7. TROUBLESHOOTING

- **Popcorn not popping or burning:** Ensure you are using fresh popcorn kernels. Old or dry kernels may not pop effectively. Do not overload the popping chamber; adhere to the recommended 1/2 cup maximum.
- **Unpopped kernels:** A small number of unpopped kernels is normal. If a significant amount remains, ensure the appliance is on a flat surface and not overloaded.
- **Popcorn flying out:** Ensure the popping chute is correctly positioned and a sufficiently large bowl is placed to catch the popcorn.

8. SPECIFICATIONS

- **Model:** CPM-100P1
- **Brand:** Cuisinart
- **Power:** 1500 Watts
- **Capacity:** Up to 15 cups of popped popcorn
- **Material:** Plastic (BPA Free)
- **Color:** Red
- **Product Dimensions:** 7.87" L x 5.51" W x 12.83" H
- **Item Weight:** 1 Pound
- **Special Feature:** Oil Free, Portable
- **Included Components:** Popcorn Maker Base, Popping Chute, Multi-Purpose Measuring Cup

9. WARRANTY AND SUPPORT

The Cuisinart CPM-100 EasyPop Hot Air Popcorn Maker comes with a Limited 3-Year Warranty. For warranty claims, technical support, or replacement parts, please contact Cuisinart Customer Service. Refer to the official Cuisinart website or your purchase documentation for detailed contact information.

For more information and product registration, visit the official [Cuisinart Store](#).