

[Manuals.plus](#) /

> [Jaytech](#) /

> Jay-Tech DL-1217 Camera Sunglasses User Manual

Jaytech DL-1217

Jay-Tech DL-1217 Camera Sunglasses User Manual

Model: DL-1217 | Brand: Jaytech

INTRODUCTION

Welcome to the user manual for your Jay-Tech DL-1217 Camera Sunglasses. This guide provides essential information for the proper setup, operation, and maintenance of your device. Please read it carefully before use to ensure optimal performance and longevity of your product.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Jay-Tech DL-1217 Camera Sunglasses
- USB Charging Cable
- Power Adapter (5V DC / 400mA)
- Cleaning Cloth
- Carrying Case



Image showing the Jay-Tech DL-1217 Camera Sunglasses along with its included accessories: a black zippered carrying case, a light blue cleaning cloth, a USB charging cable, and a power adapter.

PRODUCT OVERVIEW

Familiarize yourself with the components of your camera sunglasses:



A pair of black Jay-Tech DL-1217 Camera Sunglasses with dark lenses, viewed from a slight angle. The right arm of the sunglasses shows control buttons and a Micro SD card slot.

1. **Camera Lens:** Small, discreet lens located on the front frame, between the eyes.
2. **Power/Record Button:** Located on the inner side of the right arm. Used for powering on/off and initiating/stopping recordings.
3. **Micro SD Card Slot:** Located on the inner side of the right arm, near the hinge. For inserting the memory card.
4. **USB Port:** Located on the inner side of the right arm, typically covered by a small flap. Used for charging and data transfer.
5. **LED Indicator Light:** A small light on the inner side of the right arm, providing status feedback (e.g., charging, recording, standby).

SETUP

1. Charging the Device

Before first use, fully charge the camera sunglasses:

1. Connect the USB charging cable to the sunglasses' USB port.
2. Connect the other end of the cable to the provided power adapter or a computer's USB port.
3. The LED indicator light will typically show red during charging and turn off or change color when fully charged.
4. Charging time is approximately 2-3 hours.

2. Inserting a Micro SD Card

A Micro SD card (not included) is required for storing recordings:

1. Locate the Micro SD card slot on the arm of the sunglasses.
2. Gently insert the Micro SD card with the gold contacts facing down until it clicks into place.
3. To remove, push the card in slightly until it springs out.

OPERATING INSTRUCTIONS

Powering On/Off

- To power on, press and hold the Power button for approximately 3 seconds. The LED indicator will light up.
- To power off, press and hold the Power button again for approximately 3 seconds. The LED indicator will turn off.

Recording Video

Ensure the device is powered on:

1. Briefly press the Record button (often the same as the Power button) to start video recording. The LED indicator may flash or change color to indicate recording is in progress.
2. To stop recording, briefly press the Record button again. The LED indicator will return to standby mode.
3. Videos are saved as AVI files to the Micro SD card.

Taking Photos

Ensure the device is powered on and in standby mode:

1. Press the Photo button (if separate, or a quick double-press of the Power/Record button) to take a still photo. The LED indicator may flash once.
2. Photos are saved as JPEG files to the Micro SD card.

CONNECTING TO A COMPUTER

To transfer files, connect the sunglasses to your computer:

1. Power off the sunglasses.
2. Connect the sunglasses to your computer using the USB cable.

3. Your computer should recognize the device as a removable disk.
4. You can now access the video and photo files stored on the Micro SD card.

MAINTENANCE

- Use the provided cleaning cloth to gently wipe the lenses and frame.
- Avoid using harsh chemicals or abrasive materials.
- Store the sunglasses in their carrying case when not in use to protect them from dust and scratches.
- Keep the device away from extreme temperatures and moisture.

TROUBLESHOOTING

Device does not power on:

Ensure the battery is fully charged. Connect to a charger and wait for the LED indicator.

Cannot record video/take photos:

Check if a Micro SD card is properly inserted. Ensure the card has sufficient free space. The card may need to be formatted (refer to your computer's instructions for formatting Micro SD cards).

Computer does not recognize the device:

Ensure the sunglasses are powered off before connecting to the computer. Try a different USB port or cable.

Poor video/photo quality:

Ensure the camera lens is clean and free from obstructions. Record in well-lit environments.

SPECIFICATIONS

Feature	Specification
Sensor Resolution	2 Megapixels
Video Resolution	640x480 (AVI)
Video Frame Rate	30fps
Photo Resolution	1280x960
Connectivity	USB 2.0
Storage	Micro SD Card Slot (card not included)
Power	Integrated 350mA Lithium Polymer Battery
Charging	5V DC / 400mA Charger
Dimensions	175x152x44mm
Weight	45 Grams

WARRANTY AND SUPPORT

Information regarding warranty and customer support for the Jay-Tech DL-1217 Camera Sunglasses is not available in this manual. Please refer to your purchase documentation or contact the retailer for details.