

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Soundmaster](#) /

› [Soundmaster UR 2006 Portable Radio User Manual](#)

## Soundmaster UR2006

# Soundmaster UR 2006 Portable Radio User Manual

## INTRODUCTION

This user manual provides detailed instructions for the operation, setup, maintenance, and troubleshooting of your Soundmaster UR 2006 Portable Radio. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your listening experience.

## PRODUCT OVERVIEW

The Soundmaster UR 2006 is a versatile portable radio designed for convenience and quality audio. Its compact design and advanced features make it an ideal addition to any kitchen or living space.

## Key Features:

- FM PLL Radio with 30 preset stations.
- LCD clock with radio reception.
- Fully automatic time setting via DCF-77 radio signal.
- Power reserve for inserted batteries (1 x CR2032, to be ordered separately).
- Exclusive aluminum front panel.
- Blue backlit LCD display.
- Bass support for enhanced audio.
- Electronic volume control.
- Alarm function with radio or buzzer.
- Two alarm time settings.
- 120-minute timer.
- Portable design.



Figure 1: Front view of the Soundmaster UR 2006 Portable Radio, displaying the frequency and controls.

## SETUP

---

### 1. Unpacking and Initial Inspection

Carefully remove the radio from its packaging. Inspect the unit for any signs of damage. The package should contain the Soundmaster UR 2006 radio unit.

### 2. Power Connection

Connect the radio to a standard AC power outlet using the provided power adapter. The radio also supports battery backup for time retention (requires 1 x CR2032 battery, not included).

### 3. Battery Installation (for time backup)

1. Locate the battery compartment, usually on the bottom or rear of the unit.
2. Open the compartment cover.
3. Insert one CR2032 battery, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

### 4. Placement and Mounting

The Soundmaster UR 2006 is designed as a portable or under-cabinet radio. For optimal radio reception, place the unit away from large metal objects or other electronic devices that may cause interference. If mounting under a cabinet:

- Identify a suitable flat surface under a cabinet.
- Use appropriate screws and mounting brackets (not explicitly mentioned as included, but implied by "Unterbauradio" and review comments about mounting) to secure the radio. Ensure the mounting is stable and safe.
- Avoid placing near heat sources or in areas with excessive moisture.



Figure 2: The Soundmaster UR 2006 Portable Radio shown mounted under a kitchen cabinet.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

Press the **On/Off** button to turn the radio on or off.

### 2. Radio Tuning (FM/AM/PLL)

The radio supports FM, AM, and PLL bands. Use the **Mode** button to switch between radio bands. Use the **Up** and **Down** buttons to manually tune to desired frequencies. For automatic station search, press and hold the **Up** or **Down** button.

### 3. Setting Presets

The radio can store up to 30 preset stations.

1. Tune to the desired station.
2. Press the **Memory** button. The preset number will flash on the display.
3. Use the **Up** or **Down** buttons to select the desired preset number.
4. Press **Memory** again to confirm and save the station.

To recall a preset station, press the **Preset** button repeatedly or use the **Up** and **Down** buttons after pressing **Preset** once.

### 4. Volume Control

Adjust the listening volume using the **Vol+** and **Vol-** buttons. The electronic volume control ensures smooth adjustments.

### 5. Clock and Time Setting

The LCD clock features fully automatic time setting via the DCF-77 radio signal. Ensure the radio is placed in an area with good reception for the time signal. Manual time adjustment may be available if automatic synchronization fails (refer to specific button combinations on the device, typically involving a "Time Set" or "Clock" button).

### 6. Alarm Function

The radio supports two alarm time settings.

1. Press the **Alarm Set** button.
2. Use the **Up** and **Down** buttons to set the desired alarm time (Alarm 1 or Alarm 2).
3. Press **Alarm Set** again to confirm.
4. Select the alarm source (radio or buzzer) using the **Mode** or **Alarm Set** button.
5. To activate/deactivate the alarm, press the **Alarm Set** button until the alarm icon appears/disappears.

To snooze the alarm, press the **ADT/Snooze** button when the alarm sounds. To turn off the alarm, press the **On/Off** button.

## 7. Timer Function

The radio includes a 120-minute timer (sleep timer).

Press the **Timer** button repeatedly to cycle through available timer settings (e.g., 120, 90, 60, 30, 15 minutes, or Off). The radio will automatically turn off after the selected time duration.

## 8. Bass Support

Press the **Bass** button to activate or deactivate the bass enhancement feature for richer sound.

## MAINTENANCE

---

### 1. Cleaning

Wipe the exterior of the radio with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

### 2. Battery Replacement

If the time backup function is not working, replace the CR2032 battery in the battery compartment. Dispose of old batteries responsibly.

### 3. Storage

If storing the radio for an extended period, disconnect it from the power outlet and remove the CR2032 battery to prevent leakage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Radio does not turn on.	No power connection or power outage.	Ensure the power adapter is securely plugged into the radio and a working wall outlet. Check the power supply.
Poor radio reception.	Weak signal; interference from other electronics or metal objects.	Adjust the radio's position or antenna (if applicable). Move away from other electronic devices or large metal structures. Try tuning manually.

Problem	Possible Cause	Solution
Clock time is incorrect or not setting automatically.	Poor DCF-77 signal reception; battery backup low/dead.	Ensure the radio is in an area with good signal reception for the DCF-77 signal. Replace the CR2032 battery if the time is not retained during power outages.
No sound from speakers.	Volume too low; Mute activated; Speaker malfunction.	Increase the volume. Check if the unit is muted. If the problem persists, the speaker may be faulty (as noted in some reviews, though rare).
Alarm does not sound.	Alarm not activated; Alarm volume too low; Incorrect alarm time set.	Verify that the alarm is activated (alarm icon visible). Check the alarm volume setting. Ensure the alarm time is correctly set.

## SPECIFICATIONS

Feature	Detail
Brand	Soundmaster
Model Number	UR2006
Color	Silver
Dimensions (L x W x H)	10 x 10 x 10 cm (approx. 3.94 x 3.94 x 3.94 inches)
Weight	598.74 grams (approx. 1.32 pounds)
Tuner Technology	FM, AM, PLL
Power Source	AC Power, Battery (for backup)
Battery Type (Backup)	CR2032 (1x, not included)
Special Feature	Portable
Display Type	LCD, Blue Backlit
Included Components	Soundmaster UR 2006 unit

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Soundmaster website. Keep your proof of purchase for any warranty claims.

If you encounter issues not covered in this manual, please contact Soundmaster customer service for assistance.