

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic DMC-ZS9 14.1MP Digital Camera User Manual](#)

Panasonic DMC-ZS9

Panasonic DMC-ZS9 14.1MP Digital Camera User Manual

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Panasonic DMC-ZS9 14.1MP Digital Camera. Please read this manual thoroughly before using the camera and keep it for future reference.

The Panasonic DMC-ZS9 is a compact digital camera featuring a 14.1-megapixel sensor, a 16x optical zoom LEICA DC VARIO-ELMAR lens, and a 3-inch LCD screen. It is designed for capturing high-quality still images and HD videos with ease.

Key Features

- 14.1-megapixel resolution with a 1/2.33-inch CCD sensor for high-resolution images.
- 16x optical zoom and 21x Intelligent Zoom function for versatile telephoto capabilities.
- 24mm wide-angle Leica DC Vario-Elmar lens system.
- POWER O.I.S. (Optical Image Stabilizer) for reduced blur from camera shake.
- 3.0-inch, 230,000-dot TFT-LCD screen for clear viewing and playback.
- iA (Intelligent Auto) Mode for automatic scene detection and optimal settings.
- AF Tracking for continuous focus on moving subjects.
- HD video recording capability.
- Compatibility with SD/SDHC memory cards (not included).

WHAT'S IN THE Box

Verify that all items are present in the package:

- Panasonic DMC-ZS9 Digital Camera
- Battery Charger
- Battery Pack
- AV Cable
- USB Cable
- Hand Strap

- CD-ROM (containing full user manual and software)

SETUP

1. Charging the Battery

Insert the supplied battery pack into the battery charger. Connect the charger to a power outlet. The charging indicator will illuminate during charging and turn off when charging is complete. Ensure the battery is fully charged before first use.

2. Inserting the Battery and Memory Card

Open the battery/card compartment cover on the bottom of the camera.



Image: Rear view of the camera, illustrating the LCD screen and control layout.

1. Insert the charged battery pack into the battery compartment with the correct orientation, ensuring it clicks into place.
2. Insert an SD/SDHC/SDXC memory card into the card slot until it clicks. Ensure the card is inserted correctly to avoid damage.
3. Close the battery/card compartment cover securely.

3. Attaching the Hand Strap

Thread the hand strap through the strap eyelet on the side of the camera to prevent accidental drops.

OPERATING THE CAMERA

1. Powering On/Off

Slide the ON/OFF switch located on the top of the camera to power on or off.



Image: Top view of the camera, highlighting the power switch and mode dial.

2. Mode Dial Selection

Rotate the mode dial to select your desired shooting mode:

- **iA (Intelligent Auto) Mode:** The camera automatically detects the scene and optimizes settings for best results. Recommended for beginners.
- **P (Program AE) Mode:** Allows more control over settings while the camera sets exposure.
- **A (Aperture Priority AE) Mode:** You set the aperture, and the camera sets the shutter speed.
- **S (Shutter Priority AE) Mode:** You set the shutter speed, and the camera sets the aperture.
- **M (Manual Exposure) Mode:** Full manual control over aperture and shutter speed.
- **SCN (Scene Mode):** Choose from various preset scene modes like Portrait, Scenery, Macro, etc.
- **MS1/MS2 (My Scene Mode):** Custom modes for frequently used settings.

3. Taking Photos

Focusing: Gently press the shutter button halfway down to focus. The focus frame will turn green when focus is achieved.

Shooting: Press the shutter button fully down to take the picture.

4. Zoom Function

Use the zoom lever around the shutter button to adjust the zoom. Push towards 'W' for wide-angle and 'T' for telephoto.



Image: Front angled view of the camera, illustrating the lens and zoom capabilities.

- **Optical Zoom (16x):** Provides high-quality magnification without loss of detail.
- **Intelligent Zoom (21x):** Extends the zoom range beyond optical zoom with minimal image degradation, especially in iA Mode.

5. Recording Videos

To start recording a video, press the dedicated video record button. Press it again to stop recording. The camera supports HD video recording.

6. Playback Mode

Press the playback button (usually indicated by a triangle icon) to view your captured photos and videos on the LCD screen.

7. LUMIX Image Uploader

The LUMIX Image Uploader software, found on the supplied CD-ROM, facilitates sharing photos and videos to social media platforms like Facebook and YouTube. Connect the camera or memory card to your computer, and follow the on-screen instructions after installing the software.

MAINTENANCE

1. Cleaning the Camera

- **Camera Body:** Wipe with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water, then wipe dry.
- **Lens:** Use a lens brush or a soft, clean cloth specifically designed for camera lenses. Avoid touching the lens surface with your fingers.

- **LCD Screen:** Gently wipe with a soft, dry cloth. Do not apply pressure.

2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid exposing batteries to extreme temperatures.
- Do not short-circuit the battery terminals.

3. Storage

When storing the camera for an extended period, remove the battery and memory card. Store the camera in a dry, well-ventilated area, away from direct sunlight and high humidity.

TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common solutions. For more detailed troubleshooting, consult the full user manual provided on the CD-ROM.

- **Camera does not power on:** Ensure the battery is fully charged and correctly inserted.
- **Cannot take pictures:** Check if the memory card is inserted and has sufficient free space. Ensure the lens cap is removed.
- **Images are blurry:** Check if the POWER O.I.S. is active. Ensure proper focus before shooting. Clean the lens if necessary.
- **Flash is too bright/dark:** Adjust flash settings in the camera menu or use a different shooting mode.
- **Noisy photos (grainy):** This can occur in low light or at high ISO settings. Try shooting in better light or using a lower ISO if possible.
- **Camera freezes or becomes unresponsive:** Remove and reinsert the battery to reset the camera.

SPECIFICATIONS

Feature	Detail
Brand	Panasonic
Model Name	Panasonic DMC-ZS9
Photo Sensor Resolution	14.1 MP
Photo Sensor Technology	CCD
Optical Zoom	16x
Maximum Focal Length	384mm (35mm equivalent)
Minimum Focal Length	24mm (35mm equivalent)
Image Stabilization	Optical (POWER O.I.S.)
Screen Size	3 Inches
Display Type	LCD

Supported File Format	JPEG, RAW
Video Resolution	FHD 1080p
Video Capture Format	MP4
Flash Memory Type	SD/SDHC/SDXC
Connectivity Technology	USB, HDMI
Battery Type	Lithium Ion
Color	Black

WARRANTY AND SUPPORT

Warranty Information

The Panasonic DMC-ZS9 Digital Camera comes with a lifetime warranty. Please refer to the warranty card included in your package or the full user manual on the CD-ROM for complete terms and conditions.

Customer Support

For technical assistance, service, or further inquiries, please contact Panasonic customer support. Contact information can typically be found on the Panasonic official website or in the full user manual.