

[Manuals.plus](#) /

› [Kikkerland](#) /

› Kikkerland Hedgehog Reusable Dryer Balls Instruction Manual

Kikkerland Hedgehog Reusable

Kikkerland Hedgehog Reusable Dryer Balls Instruction Manual

Model: Hedgehog Reusable

PRODUCT OVERVIEW

The Kikkerland Hedgehog Reusable Dryer Balls are designed to enhance your laundry drying experience. These innovative dryer balls tumble with your laundry, lifting and separating fabrics to allow hot air to circulate more efficiently. This process naturally fluffs and softens clothes while reducing drying time and static cling.

- Tumble in the dryer to lift and separate laundry, allowing hot air to flow more efficiently.
- Softens fabrics naturally and reduces static.
- Designed to save energy and reduce drying time.
- Set includes 2 hedgehog-shaped dryer balls.
- Each dryer ball measures approximately 2.5 by 2.5 by 3.5 inches.



Image: The Kikkerland Hedgehog Reusable Dryer Balls, designed for efficient and gentle laundry drying.

SETUP AND FIRST USE

Before using your Hedgehog Reusable Dryer Balls for the first time, ensure they are clean and free of any packaging materials. No special preparation is required.

1. Load your wet laundry into the dryer as usual.

2. Place both Hedgehog Reusable Dryer Balls directly into the dryer drum with your clothes.
3. Close the dryer door and select your desired drying cycle.



Image: The Hedgehog Dryer Buddies in their packaging, ready for first use.

OPERATING INSTRUCTIONS

The Hedgehog Reusable Dryer Balls work by physically separating laundry items as they tumble, allowing warm air to reach more surfaces. This action helps to reduce drying time and improve fabric softness.

- For optimal results, use both dryer balls in each load.
- The dryer balls are safe for all fabric types.
- Monitor your drying cycle; you may find that your clothes dry faster than usual, potentially allowing you to shorten the cycle and save energy.
- The spikes on the dryer balls gently massage fabrics, contributing to a softer feel and reduced static.



Image: A Hedgehog Dryer Ball inside a dryer drum, demonstrating its use with laundry.

Demonstration Video

Your browser does not support the video tag.

Video: Official Kikkerland Design video demonstrating the use of Hedgehog Dryer Buddies.

CARE AND MAINTENANCE

The Hedgehog Reusable Dryer Balls are designed for long-term use. To maintain their effectiveness and appearance:

- **Cleaning:** If the dryer balls become discolored from dark fabrics, they can be gently wiped with a damp cloth. Avoid harsh chemicals.
- **Inspection:** Periodically inspect the dryer balls for any signs of wear or damage, such as cracks or detached spikes. While durable, extreme heat or prolonged use can affect their integrity.
- **Storage:** Store the dryer balls in a cool, dry place when not in use.



Image: A close-up view of a Hedgehog Dryer Ball, useful for inspecting its condition.

TROUBLESHOOTING

If you encounter any issues while using your Hedgehog Reusable Dryer Balls, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Loud noise during drying cycle	Dryer balls hitting the drum or other hard items.	This is normal for plastic dryer balls. To reduce noise, ensure the dryer is not overloaded and consider adding softer items to the load.
Clothes still damp after cycle	Overloaded dryer, incorrect dryer setting, or clothes tangled.	Ensure dryer is not overloaded. Check dryer settings. The dryer balls help separate clothes, but very large or bulky items may still require additional attention or a longer cycle.
Static cling persists	Some fabrics are more prone to static.	While the dryer balls reduce static, for highly static-prone fabrics, a small amount of fabric softener or a dryer sheet may still be needed. Ensure clothes are not over-dried.
Dryer balls show discoloration	Transfer of dye from dark-colored clothing.	This is cosmetic and does not affect performance. Wipe with a damp cloth if desired.

PRODUCT SPECIFICATIONS

- **Brand:** Kikkerland
- **Model Name:** Hedgehog Reusable
- **Material:** Plastic
- **Color:** White
- **Form Factor:** Spherical with Spikes
- **Item Dimensions (D x W x H):** 2.5"D x 3.5"W x 2.5"H
- **Item Weight:** 1.76 ounces (per set)
- **Unit Count:** 1.0 Count (Set of 2)
- **GTIN/UPC:** 885594117309, 885636964069, 737508579089, 612615054806

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or customer support, please refer to the retailer's return policy or contact Kikkerland customer service directly. Details can typically be found on the product packaging or the official Kikkerland website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B005U9Y71Y>

More documents and user manuals: <https://manuals.plus/>