



[Manuals.plus](#) /

› [MTD Genuine Parts](#) /

› MTD 734-2042A Complete Wheel Assembly Instruction Manual

## MTD Genuine Parts 734-2042A

# MTD 734-2042A Complete Wheel Assembly Instruction Manual

Model: 734-2042A

## INTRODUCTION

This instruction manual provides detailed guidance for the installation, maintenance, and general use of the MTD 734-2042A Complete Wheel Assembly. This genuine MTD part is designed for specific lawn mower models, ensuring proper fit and function. Please read this manual thoroughly before proceeding with installation or maintenance.

## SAFETY INFORMATION

Always prioritize safety when working with machinery and replacement parts. Failure to follow safety instructions may result in injury or damage to equipment.

- Ensure the equipment is turned off and the spark plug wire is disconnected before beginning any work.
- Wear appropriate personal protective equipment (PPE), such as gloves and eye protection.
- Use only the correct tools for the job.
- Keep children and pets away from the work area.
- If you are unsure about any step, consult a qualified service technician.

## SETUP AND INSTALLATION

### Tools Required:

- Wrench set (appropriate size for axle nut)
- Pliers (optional, for cotter pins)
- Work gloves

### Installation Steps:

1. **Prepare the Mower:** Park the lawn mower on a flat, stable surface. Ensure the engine is off and the spark plug wire is disconnected to prevent accidental starting. If necessary, elevate the mower safely using a jack or sturdy blocks to access the wheel assembly.
2. **Remove the Old Wheel:** Locate the retaining clip or nut securing the existing wheel to the axle. Carefully remove it using appropriate tools. Slide the old wheel off the axle. Note the order and orientation of any washers or spacers.





Image 1: Side view of the MTD 734-2042A Wheel Assembly. This image displays the robust tread pattern designed for traction and the integrated hub structure.

3. **Inspect the Axle:** Before installing the new wheel, inspect the axle for any damage, rust, or debris. Clean the axle if necessary.
4. **Install the New Wheel:** Slide the new MTD 734-2042A Complete Wheel Assembly onto the axle. Ensure it is seated correctly and any washers or spacers are in their original positions.



Image 2: Front view of the MTD 734-2042A Wheel Assembly. This view highlights the central mounting point and the internal gear teeth for self-propelled models.

5. **Secure the Wheel:** Reinstall the retaining clip or tighten the nut securely. Ensure the wheel spins freely but without

excessive wobble.





Image 3: Angled side view of the MTD 734-2042A Wheel Assembly. This perspective shows the full tire profile and the robust rim construction.

6. **Test Functionality:** Lower the mower and reconnect the spark plug wire. Briefly operate the mower to ensure the new wheel functions correctly and smoothly.

## OPERATING CONSIDERATIONS

Once installed, the MTD 734-2042A wheel assembly operates as part of your lawn mower's drive system. For self-propelled models, ensure the gear teeth engage properly. For push mowers, verify smooth rotation. Always refer to your lawn mower's primary instruction manual for specific operating procedures.

## MAINTENANCE

Regular maintenance extends the life of your wheel assembly and ensures optimal performance.

- **Cleaning:** Periodically clean grass clippings, dirt, and debris from around the wheel and axle area. This prevents buildup that can hinder rotation or damage components.
- **Inspection:** Regularly inspect the wheel for signs of wear, cracks, or damage to the tread. Check the axle for rust or bending. Ensure the retaining nut or clip is secure.
- **Lubrication:** Some axles may benefit from light lubrication. Consult your mower's manual for specific recommendations regarding axle lubrication.
- **Storage:** When storing the mower for extended periods, ensure the wheels are clean and dry.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Wheel does not spin freely	Debris caught in axle, overtightened nut, damaged bearing (unlikely for new part)	Clean axle area, loosen nut slightly (if applicable), inspect for obstructions.
Excessive wheel wobble	Loose retaining nut/clip, bent axle, incorrect installation of washers/spacers	Tighten retaining nut/clip, re-check washer/spacer placement, inspect axle for damage.
Poor traction	Worn tread (over time), wet/slippery conditions	Replace wheel if tread is excessively worn. Exercise caution in wet conditions.

## SPECIFICATIONS

- **Model Number:** 734-2042A

- **Brand:** MTD Genuine Parts
- **Wheel Size:** 8 inches (Diameter)
- **Dimensions:** 8 x 2.125 inches (Diameter x Width)
- **Material:** Metal (hub), Rubber/Plastic (tire)
- **Color:** Black
- **Item Weight:** Approximately 0.25 Pounds (4 ounces)
- **Vehicle Service Type:** Lawn Mower

## WARRANTY INFORMATION

---

MTD Genuine Parts typically come with a limited warranty against defects in material and workmanship. The specific terms and duration of the warranty may vary. Please retain your proof of purchase. For detailed warranty information, refer to the documentation included with your original equipment or visit the official MTD website.

## CUSTOMER SUPPORT

---

For further assistance, technical support, or to inquire about replacement parts, please contact MTD Customer Service. You can find contact information on the official MTD website or through your product's original documentation.

**Website:** [www.mtdproducts.com](http://www.mtdproducts.com)

