



[Manuals.plus](#) /

› [ClassicFlame](#) /

› ClassicFlame Gotham TV Stand (Model 26MM9313-D974) Instruction Manual

ClassicFlame 26MM9313-D974

ClassicFlame Gotham TV Stand

Model: 26MM9313-D974

Instruction Manual

1. INTRODUCTION

Thank you for purchasing the ClassicFlame Gotham TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new TV stand. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

The ClassicFlame Gotham TV Stand is designed to accommodate most flat screen televisions up to 80 inches or weighing up to 155 lbs. It features a contemporary bow front design, adjustable smoke glass shelves, and integrated cable management. An electric fireplace insert is sold separately and is not included with this TV stand.

2. SAFETY INFORMATION

- **Read all instructions:** Ensure you understand all assembly and safety instructions before use.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 155 lbs (70 kg) for the top surface. Do not place TVs larger than 80 inches on the stand.
- **Stability:** Always place the TV stand on a flat, level, and stable surface. Uneven surfaces can cause instability and potential tipping.
- **Children Safety:** Keep small parts away from children during assembly. Do not allow children to climb on or play with the TV stand. Consider anchoring the unit to a wall to prevent tipping, especially in homes with children or pets.
- **Proper Tools:** Use only the recommended tools for assembly.
- **Electrical Safety:** If installing an electric fireplace insert (sold separately), ensure it is installed

according to its own instruction manual and all electrical connections comply with local codes.

- **Ventilation:** Ensure proper ventilation around electronic devices placed within the stand's compartments. The stand includes pass-through holes for this purpose.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- Top Panel
- Side Panels (Left and Right)
- Bottom Panel
- Back Panels
- Adjustable Smoke Glass Shelves
- Cabinet Doors with Brushed Metal Frames
- Hardware Pack (screws, cam locks, dowels, hinges, handles, etc.)
- Legs/Feet
- Owner's Manual

4. ASSEMBLY INSTRUCTIONS

Assembly of the ClassicFlame Gotham TV Stand is designed to be simple and hassle-free. Only a Phillips head screwdriver is required. It is recommended to assemble the unit with two people to ensure stability and ease of handling.

Required Tool:

Phillips Head Screwdriver

General Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratching.
2. **Attach Cam Locks and Dowels:** Insert cam locks and wooden dowels into the pre-drilled holes on the panels as indicated in the detailed diagrams (refer to the included owner's manual for specific diagrams).
3. **Assemble Base Structure:** Connect the side panels to the bottom panel using the cam locks and screws.
4. **Install Back Panels:** Secure the back panels to the assembled structure. Ensure proper alignment for stability.
5. **Attach Top Panel:** Carefully place and secure the top panel to the main structure.
6. **Install Legs:** Attach the support legs to the bottom of the stand.
7. **Assemble Doors:** Attach hinges to the cabinet doors and then mount the doors to the side compartments. Adjust hinges as needed for proper alignment and closure.
8. **Insert Shelves:** Place the adjustable smoke glass shelves into the desired positions within the side compartments.

9. **Final Check:** Ensure all connections are secure and the stand is stable.



Image 1: The ClassicFlame Gotham TV Stand fully assembled, showcasing its design with a television and an optional electric fireplace insert.

5. OPERATING INSTRUCTIONS

Placement

Position the TV stand on a flat, level, and stable surface in your desired location. Ensure there is adequate space around the unit for ventilation and access to cables.

Television Placement

Carefully place your flat screen TV on the top surface of the stand. Ensure the TV's base is fully supported and centered to prevent tipping. The stand supports TVs up to 80 inches and 155 lbs.

Adjustable Shelves

The smoke glass shelves in the side compartments are adjustable. To change their height, remove the shelf, reposition the shelf pins to the desired level, and then reinsert the shelf.

Cable Management

Utilize the pass-through holes located on the back panels of the stand to route and organize your electronic device cables. This helps to keep wires tidy and provides necessary ventilation.

Electric Fireplace Insert (Sold Separately)

The central compartment is designed to accommodate a ClassicFlame 25" or 26" electric fireplace insert. Refer to the fireplace insert's own instruction manual for installation and operation details. Ensure the insert is properly secured and ventilated.



Image 2: The ClassicFlame Gotham TV Stand integrated into a living room, demonstrating its functional use with a television and an electric fireplace insert.

6. MAINTENANCE

Cleaning

- **Surfaces:** Wipe the stand's surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Glass:** For glass surfaces, use a non-ammonia glass cleaner and a soft cloth to prevent streaks.
- **Dusting:** Regularly dust the unit to prevent buildup, especially on the black glass top, which can show dust easily.

Care

- **Avoid Moisture:** Do not place hot or wet items directly on the surface. Use coasters or protective pads.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or damage to the finish.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.

7. TROUBLESHOOTING

Unit is Unstable/Wobbly

- Ensure the TV stand is placed on a completely flat and level surface.
- Check all assembly hardware (screws, cam locks) to ensure they are fully tightened.
- Verify that the legs are securely attached and evenly adjusted, if applicable.

Cabinet Doors Do Not Align or Close Properly

- Adjust the hinges on the cabinet doors. Most hinges have adjustment screws that allow for vertical, horizontal, and depth alignment. Refer to the hinge manufacturer's instructions or general hinge adjustment guides.
- Ensure the door frames are not bent or damaged.
- Verify that the side panels and top/bottom panels are correctly assembled and squared.

Scratches or Dings on Surfaces

- For minor scratches, touch-up pens or furniture repair kits matching the finish may be used.
- To prevent future damage, use protective pads under items placed on the stand.

8. SPECIFICATIONS

Feature	Detail
Model Number	26MM9313-D974
Product Dimensions (L x W x H)	72 x 21.25 x 23.5 inches
Assembled Length	56 inches
Assembled Width	19 inches
Assembled Height	15 inches
Item Weight	110.9 pounds
Maximum TV Size	Up to 80 inches
Maximum TV Weight	Up to 155 lbs
Material	Wood composite, metal, glass
Color/Finish	Silver/Black



Image 3: A detailed view of the ClassicFlame Gotham TV Stand, highlighting the central opening for an electric fireplace insert and the design of the side storage compartments.

9. WARRANTY AND CUSTOMER SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the ClassicFlame official website. If you encounter any issues during assembly or operation, or if you have questions about your product, please contact ClassicFlame customer support.

Please have your model number (26MM9313-D974) and purchase information ready when contacting support.