

[manuals.plus](#) /

› [Nespresso](#) /

› [Nespresso Descaling Solution User Manual](#)

Nespresso CECOMINOD052830


Nespresso Descaling Solution User Manual

FOR ALL NESPRESSO ORIGINALLINE AND VERTUOLINE MODELS

Brand: Nespresso | Product Model: CECOMINOD052830

1. Introduction

The Nespresso Descaling Solution is designed to maintain the optimal performance and longevity of your Nespresso coffee machine. Regular descaling helps remove mineral deposits that can accumulate over time, ensuring consistent coffee quality and machine efficiency. This package contains two 100ml sachets of descaling solution, suitable for use with all Nespresso OriginalLine and VertuoLine machines.

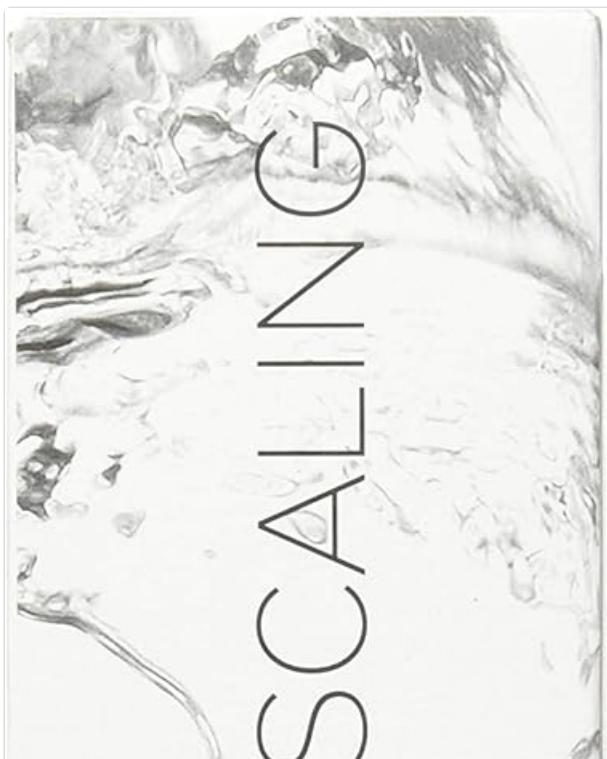

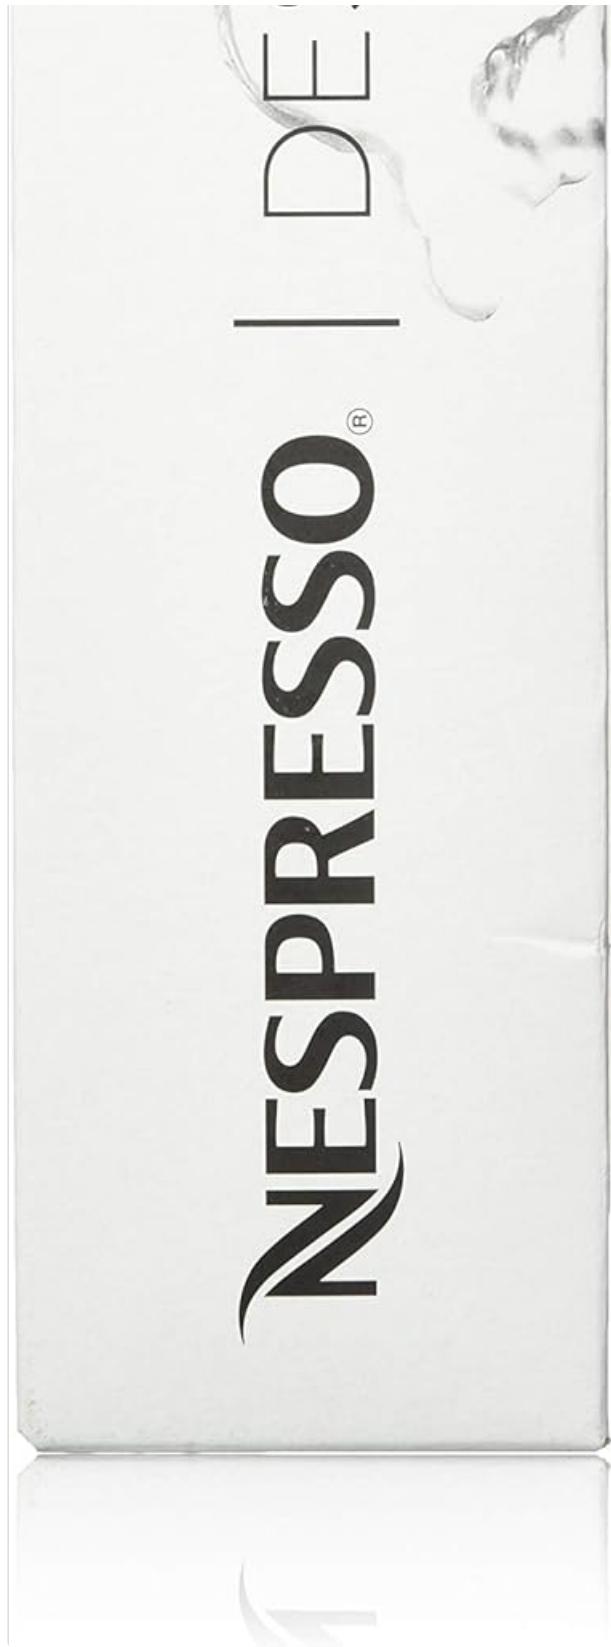


Figure 1: Nespresso Descaling Solution packaging.

2. Important Safety Information

Please read and follow all safety instructions carefully before use. Keep this product out of reach of children.

- **WARNING:** Wear protective gloves, protective clothing, eye protection, and face protection.
- **KEEP OUT OF REACH OF CHILDREN:** Harmful if swallowed.
- **CAUSES SKIN IRRITATION:** Wash thoroughly after handling. If on skin, wash with plenty of

soap and water. If skin irritation occurs, get medical advice/attention.

- **CAUSES SERIOUS EYE IRRITATION:** If in eyes, rinse cautiously with water for several minutes. Remove contact lenses if present and easy to do. Continue rinsing. If irritation persists, get medical advice/attention.

STORAGE: Store in a cool, dry area and away from foodstuffs. Keep container tightly closed.

DISPOSAL: Dispose of contents/container in accordance with local regulations. The bottle is recyclable and the box is biodegradable.

INGREDIENTS: L-(+)-lactic acid, <5% phosphonate.





Figure 2: Safety warnings and usage instructions as printed on the product packaging.

3. Descaling Instructions

Nespresso recommends descaling your machine at least once per year. For detailed, machine-specific descaling procedures, always refer to the user manual of your Nespresso machine or visit the official Nespresso website at www.nespresso.com/descaling.

The general steps for descaling are as follows:

1. Empty the water tank and the used capsule container.
2. Pour one sachet (100ml) of Nespresso Descaling Solution into the water tank.
3. Fill the rest of the water tank with fresh water.
4. Place a large container (minimum 1 liter capacity) under the coffee outlet.
5. Initiate the descaling cycle according to your specific Nespresso machine model's instructions.
This usually involves pressing and holding certain buttons.
6. Allow the machine to complete the descaling cycle, which will flush the solution through the system.
7. Once the descaling cycle is complete, empty and rinse the water tank thoroughly.
8. Refill the water tank with fresh water only.
9. Run at least two full water tanks of fresh water through the machine to rinse it completely.
10. Your Nespresso machine is now descaled and ready for use.

Note: Always consult your Nespresso machine's user manual for precise descaling instructions, as procedures may vary slightly between models.

4. Product Specifications

Feature	Detail
Brand	Nespresso

Item Form	Liquid
Scent	Unscented
Specific Uses For Product	Coffee Maker cleaning product
Material Feature	Descaler
Item Model Number	CECOMINOD052830
Product Dimensions	157.48 x 157.48 x 157.48 inches; 8.82 ounces
ASIN	B005W3BR2A
UPC	7630047604836

5. Support and Further Information

For machine-specific descaling instructions, troubleshooting, or warranty information regarding your Nespresso coffee machine, please refer to your machine's user manual or visit the official Nespresso website. You can also contact Nespresso customer support for assistance.

© 2024 Nespresso. All rights reserved.