

Edifier MF240Reto

Edifier Tick Tock Retro Multifunctional Alarm Clock

Model: MF240Reto

INTRODUCTION

Thank you for purchasing the Edifier Tick Tock Retro Multifunctional Alarm Clock. This device combines a retro design with modern functionality, offering an alarm clock, FM radio, and media playback from SD cards, USB drives, and auxiliary input. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.

PRODUCT FEATURES

- SD card reader and USB input port for media playback.
- LCD display screen for time, date, alarm status, and input mode (SD/USB/FM/AUX).
- Alarm clock function with customizable audio sources: SD card, USB drive, FM radio, or Auxiliary input.
- Auxiliary 3.5mm input jack for connecting external audio devices.
- FM radio function with 24 preset channels for easy access to your favorite stations.
- Two 360° omni-directional full-range speakers for rich, multi-directional sound.

CONTROLS AND PORTS

Rear Panel Ports



This image displays the rear panel of the Edifier Tick Tock alarm clock. Visible ports and buttons include:

- **SD Card Slot:** Insert an SD card for music playback.
- **USB Port:** Connect a USB flash drive for music playback.
- **DC IN:** Power input for the included AC adapter.
- **LINE IN (AUX):** 3.5mm audio input for external devices.
- **MODE Button:** Cycles through input modes (SD, USB, FM, AUX).
- **SET Button:** Used for entering settings menus (e.g., time, alarm).
- **UP/DOWN Buttons:** Navigate menus, adjust volume, or change settings.

Top Panel Controls



This image shows the top panel controls of the Edifier Tick Tock alarm clock. These include:

- **Play/Pause Button:** Starts or pauses media playback.
- **Previous/Next Track Buttons:** Skips to the previous or next track during media playback. Also used for tuning FM radio.
- **Volume Up/Down Buttons:** Adjusts the audio output volume.
- **SNOOZE/LIGHT Button:** Activates snooze during an alarm or adjusts display brightness.

SETUP

1. **Unpacking:** Carefully remove the alarm clock and all accessories from the packaging. Ensure all components are present: the alarm clock unit, AC power adapter, and this user manual.
2. **Power Connection:** Connect the AC power adapter to the "DC IN" port on the rear of the alarm clock. Plug the adapter into a standard wall outlet. The display should illuminate.
3. **Initial Power On:** The unit should power on automatically. If not, press the power button (if available, otherwise it's always on when plugged in).
4. **Antenna (FM Radio):** Extend the FM antenna located at the back of the unit for optimal radio reception.

OPERATING INSTRUCTIONS

Setting Time and Date

1. Press and hold the **SET** button until the time display starts flashing.
2. Use the **UP** and **DOWN** buttons to adjust the hour. Press **SET** to confirm and move to minutes.
3. Adjust minutes using **UP** and **DOWN**. Press **SET** to confirm.
4. Continue this process to set the year, month, and day. Press **SET** to exit the time/date setting mode.

Setting the Alarm

1. Press the **SET** button once (do not hold) to enter alarm setting mode. The alarm time will flash.
2. Use the **UP** and **DOWN** buttons to adjust the alarm hour. Press **SET** to confirm and move to minutes.
3. Adjust minutes using **UP** and **DOWN**. Press **SET** to confirm.
4. Next, select the alarm source (FM, SD, USB, AUX). Use **UP** and **DOWN** to cycle through options. Press **SET** to confirm.
 - If FM is selected, use **UP** and **DOWN** to select a preset FM station (P01-P24).
 - If SD or USB is selected, ensure a card/drive with audio is inserted. The alarm will play the first track.
 - If AUX is selected, ensure an external device is connected and playing audio.
5. Press **SET** again to activate the alarm. An alarm icon will appear on the display.
6. To deactivate the alarm, press **SET** until the alarm icon disappears.
7. When the alarm sounds, press the **SNOOZE/LIGHT** button to activate snooze (typically 9 minutes). To turn off the alarm completely, press any other button.

FM Radio Operation

1. Press the **MODE** button repeatedly until "FM" appears on the display.
2. **Auto Scan and Preset:** Press and hold the **PLAY/PAUSE** button. The radio will automatically scan for available stations and save them to presets (P01-P24).
3. **Manual Tuning:** Use the **PREVIOUS/NEXT TRACK** buttons to fine-tune the frequency.
4. **Selecting Presets:** In FM mode, briefly press the **PREVIOUS/NEXT TRACK** buttons to cycle through saved preset stations.
5. Adjust volume using the **UP** and **DOWN** buttons on the rear panel.

SD Card / USB Playback

1. Insert an SD card into the SD card slot or a USB flash drive into the USB port on the rear panel.
2. Press the **MODE** button repeatedly until "SD" or "USB" appears on the display. The device will automatically start playing audio files.
3. Use the **PLAY/PAUSE** button to pause or resume playback.
4. Use the **PREVIOUS/NEXT TRACK** buttons on the top panel to skip tracks.
5. Adjust volume using the **UP** and **DOWN** buttons on the rear panel.

Auxiliary Input (LINE IN)

1. Connect an external audio device (e.g., smartphone, MP3 player) to the "LINE IN" (3.5mm) port on the rear panel using an audio cable (not included).
2. Press the **MODE** button repeatedly until "AUX" appears on the display.
3. Start playback on your connected external device.
4. Adjust volume using the **UP** and **DOWN** buttons on the rear panel, and also control volume from your external device.

Display Brightness

Briefly press the **SNOOZE/LIGHT** button on the top panel to cycle through different display brightness levels.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the alarm clock. Do not use abrasive cleaners, waxes, or solvents.
- **Placement:** Place the unit on a stable, flat surface. Avoid direct sunlight, high temperatures, humidity, or dusty environments.
- **Power:** Disconnect the power adapter from the wall outlet if the unit will not be used for an extended period.

TROUBLESHOOTING

| Problem | Possible Cause / Solution |
|--------------------------------------|--|
| No power / Display off | <ul style="list-style-type: none"> • Ensure the AC power adapter is securely connected to both the unit and a working wall outlet. • Check if the power outlet is functional. |
| No sound from speakers | <ul style="list-style-type: none"> • Increase the volume using the UP button. • Ensure the correct input mode (FM, SD, USB, AUX) is selected. • If using AUX, check the connection cable and the volume on the external device. • If using SD/USB, ensure the media contains compatible audio files. |
| Poor FM radio reception | <ul style="list-style-type: none"> • Fully extend and adjust the position of the FM antenna. • Try relocating the unit to a different position to improve signal. • Perform an auto-scan again to find stronger stations. |
| Alarm does not sound or plays static | <ul style="list-style-type: none"> • Ensure the alarm is activated (alarm icon visible on display). • Verify the alarm time is set correctly. • If FM is the alarm source, ensure a valid preset station is selected and that station has a clear signal. • If SD/USB is the alarm source, ensure the media is inserted and contains playable audio files. |
| Display is too bright at night | <ul style="list-style-type: none"> • Press the SNOOZE/LIGHT button repeatedly to cycle through brightness levels. |

SPECIFICATIONS

| | |
|--------------------------------|--|
| Brand | Edifier |
| Model Number | MF240Reto |
| Display Type | LCD |
| Connectivity Technology | AUX, USB |
| Special Features | Alarm, Radio, SD Card Reader, USB Playback |
| Power Source | Corded Electric |
| Material | Plastic |
| Item Weight | 0.74 Pounds (approx. 0.34 kg) |
| Manufacturer | Edifier USA |

WARRANTY AND SUPPORT

This Edifier product comes with a **2-year manufacturer warranty**. For warranty claims, technical support, or further assistance, please contact Edifier USA customer service. Please retain your proof of purchase for warranty validation.

For the most up-to-date support information, please visit the official Edifier website.