

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA TUPPLUR Roller Blind User Manual

IKEA 70099620

IKEA TUPPLUR Roller Blind User Manual

Model: 70099620 | Brand: IKEA

INTRODUCTION

This manual provides essential information for the safe and effective use of your IKEA TUPPLUR Roller Blind. Please read these instructions carefully before installation and retain them for future reference. The TUPPLUR roller blind is designed to block out light, providing privacy and reducing glare in your living space.

SAFETY INFORMATION

Important: For child safety, ensure that all cords and chains are kept out of reach of young children. Install the safety device provided to secure the cord/chain to the wall. Loose cords can pose a strangulation hazard.

- Always follow local building codes and regulations when installing.
- Do not allow children to play with the blind or its operating mechanism.
- Regularly check the blind for any signs of wear or damage. Discontinue use if damaged.

SETUP AND INSTALLATION

Before beginning installation, ensure you have all necessary parts and tools. Refer to the packaging for a complete list of components.

Tools Required:

- Drill
- Screwdriver (Phillips head)
- Measuring tape
- Pencil
- Level

Installation Steps:

1. **Unpack Components:** Carefully remove all items from the packaging and verify that all parts are present according to the included parts list.
2. **Determine Mounting Location:** Decide whether to mount the blind inside or outside the window frame. Mark the desired positions for the brackets using a pencil and a level to ensure they are perfectly aligned.

3. **Drill Pilot Holes:** Drill pilot holes at the marked locations. Use appropriate drill bits for your wall material (e.g., wood, drywall, concrete).
4. **Attach Brackets:** Securely fasten the mounting brackets to the wall or window frame using the provided screws.
5. **Mount the Blind:** Carefully insert the roller blind mechanism into the installed brackets. Ensure it clicks securely into place.
6. **Install Safety Device:** Attach the child safety device for the cord/chain to the wall at a height inaccessible to young children. This device keeps the cord taut and prevents entanglement.
7. **Test Operation:** Gently pull the chain to ensure the blind rolls up and down smoothly.



Image: The IKEA TUPPLUR Roller Blind in white, shown fully extended. This image illustrates the simple, clean design of the blind, suitable for various interior settings.

OPERATING INSTRUCTIONS

The IKEA TUPPLUR Roller Blind operates manually using a chain mechanism.

- **To Lower the Blind:** Gently pull the front part of the chain downwards until the blind reaches the desired position.
- **To Raise the Blind:** Gently pull the back part of the chain downwards until the blind is fully retracted or at the desired height.
- **Stopping the Blind:** The blind will typically stop at any desired height when the chain is released.

MAINTENANCE AND CARE

Proper care will extend the life of your roller blind.

- **Cleaning:** Dust the blind regularly with a soft brush or vacuum cleaner with a soft brush attachment. For stains, gently wipe with a damp cloth and mild detergent. Do not use harsh chemicals or abrasive cleaners.
- **Mechanism:** Avoid pulling the chain with excessive force, as this can damage the rolling mechanism.
- **Sun Exposure:** While designed to block light, prolonged direct exposure to intense sunlight may cause slight discoloration over time.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blind does not roll up or down smoothly.	Obstruction in the mechanism or misaligned installation.	Check for any objects blocking the blind's path. Ensure brackets are level and securely installed.
Chain feels stiff or stuck.	Chain tangled or mechanism dirty.	Untangle the chain if necessary. Clean any dust or debris from the chain and mechanism.
Blind rolls up unevenly.	Fabric not aligned correctly on the roller.	Lower the blind completely and gently guide the fabric back into alignment as you raise it.

SPECIFICATIONS

Brand: IKEA
Model Name: TUPPLUR
Model Number: 70099620
Color: White
Dimensions: Width 140 cm x Length 195 cm
Operation Mode: Manual (Chain)
ASIN: B005X3SBIW
First Available Date: October 19, 2011

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the original purchase documentation or contact IKEA customer service directly. IKEA provides various support channels, including online FAQs, product guides, and direct customer assistance. You can typically find support information on the official IKEA website or by visiting your local IKEA store.

© 2023 IKEA. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question