

FEEL 3

FEEL 3 Audio CD Instruction Manual

Model: 3 | Brand: FEEL

INTRODUCTION

This manual provides essential instructions for the proper handling, playback, and care of your FEEL 3 Audio CD. Adhering to these guidelines will help ensure optimal performance and longevity of your product.

SETUP AND PREPARATION

- Unboxing:** Carefully remove the Audio CD from its packaging. Avoid touching the reflective surface of the disc.
- Inspection:** Before first use, visually inspect the disc for any visible scratches, smudges, or defects. A clean, undamaged disc ensures the best playback quality.
- Handling:** Always hold the CD by its edges or by placing a finger through the center hole. Do not touch the data side (the shiny, reflective side) of the disc.

OPERATING INSTRUCTIONS

To play your FEEL 3 Audio CD, follow these general steps:

- Insert Disc:** Open the disc tray or slot of your compatible CD player, computer drive, or game console. Carefully place the FEEL 3 Audio CD with the label side facing up (or as indicated by your device).
- Close Tray:** Close the disc tray or allow the device to automatically draw in the disc.
- Playback:** Most devices will automatically begin playing the CD. If not, navigate to the CD playback function on your device and select "Play."
- Controls:** Use your device's controls for functions such as play, pause, skip track, fast forward, and rewind.

MAINTENANCE AND CARE

Proper care extends the life of your Audio CD and maintains sound quality:

- **Cleaning:** If the disc becomes dirty or smudged, gently wipe the reflective surface with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep discs away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Prevent scratches by handling the disc carefully and avoiding contact with rough surfaces.

TROUBLESHOOTING

If you encounter issues during playback, consider the following:

- **Disc Skipping or Freezing:**
 - Clean the disc thoroughly as described in the "Maintenance and Care" section.
 - Ensure the disc is free of deep scratches or cracks.
 - Check your CD player for dust or debris on the laser lens. Refer to your player's manual for cleaning instructions.
 - Try playing the disc in a different CD player to determine if the issue is with the disc or the player.
- **Disc Not Recognized:**
 - Ensure the disc is inserted correctly (label side up).
 - Verify that your player is compatible with Audio CDs.
 - Clean the disc for smudges or dirt.
- **No Sound:**
 - Check the volume settings on your CD player and connected audio system.
 - Ensure all audio cables are securely connected.

SPECIFICATIONS

Product Title	FEEL 3
Format	Audio CD
Artist	FEEL
Number of Discs	2
Manufacturer	Emi Poland
Label	Emi Poland
Original Release Date	2011
Product Dimensions	5.61 x 0.47 x 4.96 inches; 4.48 ounces
ASIN	B005XPHICU

PRODUCT IMAGE



This image displays the front cover of the FEEL 3 Audio CD. The cover features the album title "Feel 3" in a stylized gold font, set against a light background with subtle wing-like imagery. The top portion of the cover has a yellow band with "RMF FM NAJLEPSZA MUZYKA" text. The bottom right corner includes "Edycja specjalna CD & DVD" indicating a special edition with both CD and DVD content, and a small "Feel..." text.

WARRANTY AND SUPPORT

Specific warranty and support information for the FEEL 3 Audio CD is not provided in the available product details. For any issues or inquiries, please refer to the retailer or the record label, Emi Poland, for further assistance.