

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DOMO](#) /
- › [DOMO Mini-Wok/Crêpe Maker DO8706W Instruction Manual](#)

DOMO DO8706W

DOMO Mini-Wok/Crêpe Maker DO8706W Instruction Manual

Model: DO8706W

INTRODUCTION

Thank you for purchasing the DOMO Mini-Wok/Crêpe Maker DO8706W. This appliance is designed for preparing mini-woks and crêpes, offering a versatile cooking experience. Please read this manual carefully before first use to ensure safe operation and optimal performance. Keep these instructions for future reference.



Image: The DOMO Mini-Wok/Crêpe Maker DO8706W, illustrating its dual functionality for preparing both crêpes and mini-wok dishes simultaneously. The image highlights the main heating plate with multiple cooking surfaces and several small wok pans.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Retain the packaging for future storage or disposal.
2. **Initial Cleaning:** Before first use, wipe the cooking surface of the main unit with a damp cloth. Wash the mini-wok pans and wooden spatulas with warm, soapy water, then rinse and dry thoroughly.
3. **Placement:** Place the appliance on a stable, flat, heat-resistant surface, away from walls or other heat-sensitive objects. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Ensure the appliance is switched off (if applicable) before plugging it into a grounded electrical outlet. The appliance operates at 1000W.

OPERATING INSTRUCTIONS

General Operation

- Plug the appliance into a suitable power outlet. The indicator light will illuminate, indicating the unit is heating up.
- Allow the appliance to preheat for approximately 5-10 minutes before placing food on the cooking surface or in the mini-wok pans.

Using as a Crêpe Maker

1. Once preheated, lightly grease the crêpe cooking areas if desired, although the non-stick coating reduces this need.
2. Pour a small amount of crêpe batter onto the designated round cooking areas. Use the provided measuring spoon for consistent portions.
3. Cook until the crêpe edges are golden brown and the surface begins to bubble.
4. Flip the crêpe using a non-metallic spatula (such as the provided wooden spatulas) and cook the other side until done.
5. Remove cooked crêpes and repeat the process.



Image: The DOMO Mini-Wok/Crêpe Maker DO8706W being used to prepare crêpes. A hand is shown pouring batter onto one of the round cooking surfaces, with several other crêpes already cooking on the plate.

Using as a Mini-Wok

1. Place the mini-wok pans onto the circular heating elements on the main unit.
2. Add a small amount of oil or butter to each pan, if desired.
3. Place your desired ingredients (e.g., vegetables, meat, seafood) into the mini-wok pans.
4. Stir ingredients frequently using the wooden spatulas to ensure even cooking.
5. Cook until ingredients are tender and thoroughly cooked.
6. Carefully remove the hot pans using oven mitts or heat-resistant gloves.



Image: A close-up view of one of the mini-wok pans, containing cooked shrimp. This illustrates the individual portion cooking capability of the appliance.



Image: A set of three wooden spatulas, provided as accessories with the DOMO Mini-Wok/Crêpe Maker. These are ideal for use with non-stick surfaces.

CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your appliance.

1. Cleaning the Main Unit:

- Always unplug the appliance and allow it to cool completely before cleaning.

- Wipe the exterior and the cooking surface with a damp cloth. For stubborn food residue, use a small amount of mild dish soap on the cloth.
- **DO NOT immerse the main unit in water or any other liquid.**
- Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.

2. Cleaning Mini-Wok Pans and Spatulas:

- The mini-wok pans and wooden spatulas can be washed by hand with warm, soapy water. Rinse thoroughly and dry immediately.
- The mini-wok pans are indicated as dishwasher safe, however, hand washing is recommended to preserve the non-stick coating over time.

3. **Storage:** Ensure the appliance is clean and completely dry before storing. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in, power outlet malfunction, or appliance fault.	Check if the plug is securely inserted into a working outlet. Test the outlet with another appliance. If the problem persists, contact customer support.
Food sticks to the cooking surface/pans.	Insufficient preheating, no oil/butter used, or damaged non-stick coating.	Ensure the appliance is fully preheated. Lightly grease the surface/pans before adding food. Avoid using metal utensils that can scratch the coating.
Uneven cooking.	Appliance not fully preheated, or ingredients not spread evenly.	Allow sufficient preheating time. Ensure ingredients are spread thinly and evenly, especially for crêpes. Stir wok ingredients frequently.

If you encounter issues not listed here or if the problem persists after attempting the solutions, please contact DOMO customer support.

PRODUCT SPECIFICATIONS

Brand: DOMO

Model Name: DO8706W

Color: Black

Material: Plastic (main unit), Non-stick coated metal (pans)

Special Features: Non-stick coating, Easy to clean

Power: 1000 W

Product Weight: 2 Kilograms

Oven Safe: No

Dishwasher Safe: Yes (for mini-wok pans and spatulas only, not main unit)

Components Included: Measuring spoon for crêpes, 6 wooden spatulas

Global Trade Item Number (GTIN): 05411397009715

WARRANTY INFORMATION

For detailed warranty information, please refer to the "Terms and Conditions" section on the DOMO official website or the documentation provided with your purchase. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need to report a problem with your DOMO Mini-Wok/Crêpe Maker DO8706W, please contact DOMO customer service. Contact details can typically be found on the manufacturer's website or in the product packaging.