

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Vitamix](#) /
- › [Vitamix 36019-1 Vita-Mix Quiet One Blender 48 oz Instruction Manual](#)

Vitamix 36019

Vitamix 36019-1 Vita-Mix Quiet One Blender 48 oz Instruction Manual

Model: 36019

[Product Overview](#) [Setup](#) [Operation](#) [Maintenance & Cleaning](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The Vitamix 36019-1 Vita-Mix Quiet One Blender is a high-performance commercial countertop blender designed for efficiency and reduced noise levels. It features a 48 oz clear Tritan BPA-free Advance container, 6 touch control buttons with 34 program options, and a magnetically-secured back cover for easy cleaning. This blender is built to handle demanding commercial environments while maintaining a quiet operation.



Figure 1: Vitamix Quiet One Blender with its transparent sound enclosure.

2. SETUP

Follow these steps to set up your Vitamix Quiet One Blender:

1. **Unpack Components:** Carefully remove all components from the packaging, including the blender base, 48 oz container, lid, and sound enclosure.
2. **Position the Blender:** Place the blender base on a stable, flat, and dry surface. Ensure there is adequate space around the unit for proper ventilation and to open the sound enclosure.
3. **Install the Container:** Place the 48 oz Tritan container onto the blender base. Ensure it is seated securely on the drive socket.
4. **Attach the Lid:** Secure the lid onto the container. The lid features a removable plug for adding ingredients during blending.

5. **Close the Sound Enclosure:** Lower the transparent sound enclosure over the container until it clicks into place. This is crucial for activating the quiet operation feature.
6. **Connect Power:** Plug the power cord into a grounded 120V, 50/60 Hz electrical outlet. The blender is now ready for operation.



Figure 2: The 48 oz Tritan container detached from the blender base, showing the drive socket.

3. OPERATION

The Vitamix Quiet One Blender offers intuitive controls for various blending needs. It features 6 program buttons and 34 optimized program options for consistent results.

3.1. Control Panel Overview

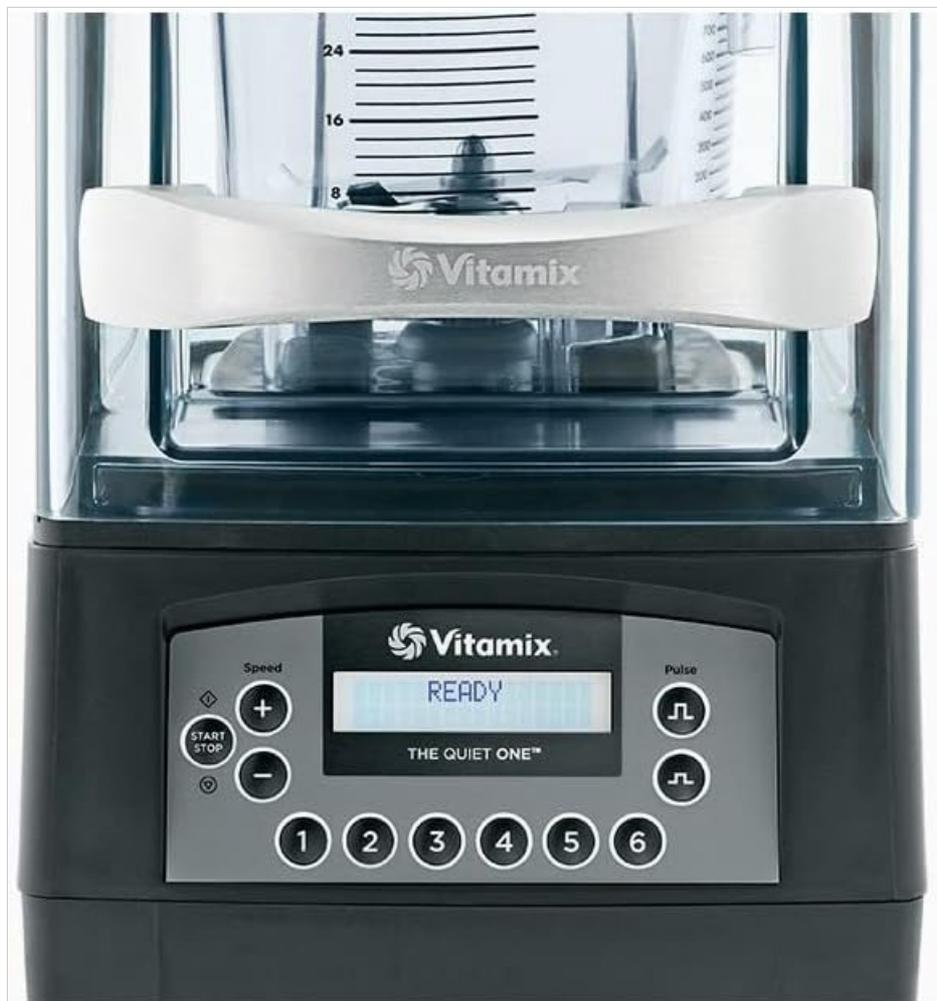


Figure 3: Close-up of the control panel with speed, pulse, and program buttons.

- **Speed Controls (Up/Down Arrows):** Adjust the blending speed manually.
- **Start/Stop Button:** Initiates or halts the blending cycle.
- **Program Buttons (1-6):** Select from 6 pre-programmed settings, each offering optimized blending cycles for specific recipes.
- **Pulse Buttons:** Provides short bursts of power for chopping or quick mixing.
- **Digital Display:** Shows selected program, speed, and remaining blend time.

3.2. Blending Procedure

1. **Add Ingredients:** Place desired ingredients into the 48 oz container. Ensure the container is not overfilled beyond the maximum capacity line.
2. **Secure Lid and Enclosure:** Place the lid firmly on the container and close the sound enclosure completely.
3. **Select Program or Speed:**
 - For pre-programmed blending, press one of the **Program Buttons (1-6)**. The display will show the selected program.
 - For manual control, use the **Speed Up/Down Arrows** to set the desired speed.
4. **Start Blending:** Press the **Start/Stop** button to begin blending. The blender will automatically adjust speed according to the selected program or maintain the manual speed.
5. **Monitor Blending:** Observe the blending process. If necessary, use the removable lid plug to add additional ingredients or use a tamper (not included) to push ingredients towards the blades.
6. **Stop Blending:** The blender will stop automatically upon completion of a pre-programmed cycle. For manual blending,

press the **Start/Stop** button to halt operation.

7. **Serve:** Open the sound enclosure, remove the container, and pour out the blended contents.

Your browser does not support the video tag.

Video 1: Demonstration of the Vitamix Quiet One Blender's operation and quiet performance. This video highlights the ease of use and the effectiveness of the sound enclosure during blending.

Your browser does not support the video tag.

Video 2: A user demonstrating the quiet operation and blending capabilities of the Vitamix Quiet One Blender in a home kitchen setting.

4. MAINTENANCE & CLEANING

Proper cleaning and maintenance ensure the longevity and optimal performance of your Vitamix Quiet One Blender.

4.1. Daily Cleaning

1. **Unplug the Blender:** Always unplug the unit from the power outlet before cleaning.
2. **Clean the Container:**
 - Rinse the container immediately after use.
 - For thorough cleaning, fill the container halfway with warm water and a drop of dish soap. Secure the lid and sound enclosure. Run the blender on a low setting for 30-60 seconds. Rinse thoroughly.
 - The Tritan container is generally dishwasher safe, but hand washing is recommended for longevity.
3. **Clean the Lid and Lid Plug:** Wash the lid and lid plug with warm, soapy water. Rinse thoroughly and allow to air dry.
4. **Clean the Sound Enclosure:** The sound enclosure can be easily removed for cleaning. Wipe it down with a damp cloth and mild detergent. Rinse and dry. The magnetically-secured back cover can also be removed for access.
5. **Clean the Base:** Wipe the blender base with a damp cloth. Do not immerse the base in water.

Your browser does not support the video tag.

Video 3: A seller demonstrating the ease of cleaning the Vitamix Quiet One Blender, including the removable sound enclosure and container.

5. TROUBLESHOOTING

If you encounter issues with your Vitamix Quiet One Blender, refer to the following common troubleshooting tips:

• **Blender Not Starting:**

- Ensure the power cord is securely plugged into a functional outlet.
- Verify the container is correctly seated on the base and the sound enclosure is fully closed. The blender has safety interlocks that prevent operation if components are not properly aligned.

• **Ingredients Not Blending Smoothly:**

- Check the liquid-to-solid ratio. Add more liquid if the mixture is too thick.
- Use a tamper (if available) through the lid plug opening to push ingredients towards the blades.
- Ensure ingredients are cut into appropriate sizes for blending.

• **Unusual Noise During Operation:**

- While designed for quiet operation, excessive or unusual noise may indicate an issue. Stop the blender immediately.

- Check for any foreign objects in the container or around the blade assembly.
- Ensure the container is properly seated and the sound enclosure is closed.

- **Motor Overheating:**

- If the motor stops and the display shows an error, the unit may have overheated. Unplug the blender and allow it to cool down for at least 20-30 minutes.
- Reduce the load on the motor by adding more liquid or reducing the amount of ingredients.

For persistent issues or complex problems, please contact Vitamix customer support or a certified service technician.

6. SPECIFICATIONS

Feature	Detail
Brand	Vitamix
Model Number	36019
Color	Black
Special Features	Compact, Quiet, Removable Cover
Capacity	48 Fluid Ounces (1.4 Liters)
Product Dimensions	12.8"D x 13.8"W x 22"H
Included Components	Blender with container
Style	Blender
Recommended Uses	Blending
Power Source	Corded Electric
Number of Speeds	6 (with 34 optimized program options)
Voltage	120 Volts
Material Type Free	BPA Free
Blade Material	Stainless Steel
Container Material	Tritan
Item Weight	12 pounds

7. WARRANTY & SUPPORT

The Vitamix 36019-1 Vita-Mix Quiet One Blender comes with the following warranty:

- **1-Year Full Warranty:** Covers all parts, labor, and two-way shipping for the first year.
- **3-Year Limited Warranty:** Covers parts and labor for three years from the date of purchase.

For warranty claims, technical assistance, or to purchase replacement parts, please contact Vitamix customer support directly. Refer to the official Vitamix website or your purchase documentation for contact information.

