

Magimix 3200 XL

Magimix 3200 XL Food Processor Instruction Manual

Model: 3200 XL

1. INTRODUCTION

Thank you for choosing the Magimix 3200 XL Food Processor. This appliance is designed to assist you with a wide range of culinary tasks, from chopping and blending to kneading and grating. To ensure safe and efficient operation, please read this instruction manual thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving blades or discs while processing food to prevent injury.
- Never operate the food processor without the lid securely locked in place.
- Do not immerse the motor base in water or any other liquid. Clean with a damp cloth only.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Avoid contact with sharp blades. Handle with extreme care.
- Do not use attachments not recommended or sold by the manufacturer.

3. PRODUCT OVERVIEW AND COMPONENTS

The Magimix 3200 XL Food Processor is designed with a robust motor and a versatile 3-bowl system to handle various food preparation tasks efficiently.



Image 1: Magimix 3200 XL Food Processor. This image displays the complete food processor unit, featuring the chrome-finished motor base with 'Off', 'On', and 'Pulse' buttons, and the transparent main bowl with its handle, lid, and feed tube. Inside, the smaller bowls are nested, and a blade is visible.

Included Components:

- Motor Base (650 W)
- Large Bowl (2.6 liters capacity)
- Medium Bowl (2.2 liters capacity)
- Mini Bowl (1.2 liters capacity)
- Main Blade (Sabatier steel)
- Whisk Sticks
- Spatula
- Recipe Book

The unique 3-bowl system allows you to process different ingredients consecutively without needing to wash the bowls in between. The smaller bowls fit inside the larger ones and operate independently.

4. SETUP

- 1. Unpack:** Carefully remove all components from the packaging. Remove any protective films or stickers.
- 2. Position the Motor Base:** Place the motor base on a clean, dry, and stable surface. Ensure it is near an electrical outlet.
- 3. Assemble the Bowls:** Choose the appropriate bowl size for your task. Place the desired bowl onto the motor base, aligning the handle with the front of the base, and twist clockwise until it locks into place.
- 4. Insert Blade/Accessory:** Place the chosen blade or accessory (e.g., main blade, whisk sticks) onto the central spindle inside the bowl.
- 5. Secure the Lid:** Place the lid onto the bowl, aligning the feed tube with the handle, and twist clockwise until it locks securely. The appliance will not operate if the lid is not correctly locked.
- 6. Connect Power:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

Control Buttons:

- **Off:** Stops the appliance.
- **On:** Starts continuous operation.
- **Pulse:** Provides short bursts of power for precise control, ideal for chopping or mixing. The motor runs only while the button is pressed.

Using the 3-Bowl System:

The Magimix 3200 XL features three bowls that can be used independently. For smaller tasks, use the mini bowl or medium bowl nested inside the larger ones. This allows for sequential processing without cleaning between tasks.

Processing Capacities (Approximate):

- Brioche: 500g
- Bread Dough: 600g
- Shortcrust Pastry: 1kg
- Soup/Velouté: 1kg
- Minced Meat: 26.46 oz (approx. 750g)
- Carrots: 28 oz (approx. 790g)
- Egg Whites: 5

Recommended Uses: Blend, Chop, Grate, Knead, Liquefy, Mince.

6. CLEANING AND MAINTENANCE

1. **Disconnect Power:** Always unplug the food processor from the electrical outlet before cleaning.
2. **Disassemble:** Remove the lid, then the blade/accessory, and finally the bowl from the motor base.
3. **Clean Bowls and Accessories:** The bowls, lids, and accessories are dishwasher safe. Alternatively, they can be hand washed with warm, soapy water. Rinse thoroughly and dry immediately.
4. **Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse it in water.
5. **Handle Blades Carefully:** Blades are very sharp. Use caution when cleaning them.
6. **Storage:** Store the cleaned and dried components in a safe place. The accessory box is designed for standard accessories.

7. TROUBLESHOOTING

- **Appliance does not start:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Verify that the bowl and lid are correctly assembled and locked into position. The safety interlock system prevents operation if not properly secured.
- **Motor stops during operation:**
 - The appliance may be overloaded. Turn off, unplug, remove some ingredients, and restart.
 - Check for any obstructions preventing the blade from rotating freely.
- **Unusual noise or smell:**
 - Immediately turn off and unplug the appliance. Inspect for any visible damage or foreign objects. If the

issue persists, contact customer support.

8. SPECIFICATIONS

Brand	Magimix
Model Name	3200 XL
Item Model Number	18361EA
Power	650 W
Bowl Capacity (Large)	2.6 Liters
Bowl Capacity (Medium)	2.2 Liters
Bowl Capacity (Mini)	1.2 Liters
Product Dimensions	7.48 x 8.86 x 15.55 inches (190 x 225 x 395 mm)
Item Weight	21.7 pounds (9.3 kg)
Blade Material	Stainless Steel (Sabatier)
Special Feature	3 modes: auto, pulse, and stop
Product Care Instructions	Hand Wash (Bowls and accessories are dishwasher safe)
BPA Free	Yes (0% BPA)
Country of Manufacture	France

9. WARRANTY AND SUPPORT

- Motor Warranty:** The professional motor is guaranteed for 30 years.
- Appliance Warranty:** The appliance is covered by a 3-year warranty.
- Spare Part Availability:** EU spare parts are available for a duration of 30 years.
- For technical assistance, spare parts, or warranty claims, please contact Magimix customer support through their official website or your local distributor. Please have your model number (3200 XL) and item model number (18361EA) ready when contacting support.

© 2024 Magimix. All rights reserved.

This manual is for informational purposes only. Magimix reserves the right to make changes to product specifications without prior notice.

Related Documents - 3200 XL

	<p><u>Magimix Ma Cuisine: Gebruiksaanwijzing en Recepten</u></p> <p>Ontdek de veelzijdigheid van uw Magimix foodprocessor met deze uitgebreide gebruikershandleiding en receptengids, inclusief meer dan 100 makkelijke, natuurlijke recepten voor dagelijks gebruik.</p>
	<p><u>Magimix Slicer T250 Instructions for Use</u></p> <p>Comprehensive instructions for using and maintaining the Magimix Slicer T250. Covers setup, operation, blade sharpening, cleaning, and safety precautions.</p>
	<p><u>Magimix Gelato Expert Ice Cream Maker User Manual</u></p> <p>Comprehensive user manual for the Magimix Gelato Expert ice cream maker, covering safety instructions, product description, operation modes (manual and automatic), preparation tips, and cleaning guidelines.</p>
	<p><u>Magimix Power Blender User Manual: Features, Operation, and Safety</u></p> <p>Comprehensive user manual for the Magimix Power Blender. Learn about its features, operation, accessories, safety instructions, and troubleshooting for optimal kitchen performance.</p>
	<p><u>Magimix Cook Expert Winter Promotion: Free Cocotte Accessory</u></p> <p>Get a free €350 Cocotte accessory with the purchase of a Magimix Cook Expert or Cook Expert XL during the winter promotion. Valid from November 1, 2025, to January 31, 2026, in Belgium and Luxembourg. Follow simple steps to claim your gift.</p>
	<p><u>Magimix Cook Expert & Cook Expert XL Winter Offer - Free Gifts Included</u></p> <p>Explore the Magimix winter promotion for Cook Expert and Cook Expert XL. Purchase a Cook Expert XL to receive a free Cocotte and 2 recipe books, or a Cook Expert to get a free XXL Steamer Basket and 3 recipe books. Offer valid until January 7, 2026. Follow simple steps to claim your gifts.</p>