

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Supersonic](#) /

› [Supersonic SC-2212 22-Inch 1080p LED HDTV with Built-in DVD Player Instruction Manual](#)

Supersonic SC-2212

Supersonic SC-2212 22-Inch 1080p LED HDTV with Built-in DVD Player Instruction Manual

Model: SC-2212

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Supersonic SC-2212 22-Inch 1080p LED HDTV with Built-in DVD Player. Please read these instructions thoroughly before using the product and retain them for future reference.

SETUP

1. Unpacking and Stand Installation

Carefully remove the TV and all accessories from the packaging. Place the TV face down on a soft, clean surface to prevent screen damage. Attach the included stands to the bottom of the TV using the provided screws. Ensure they are securely fastened.

Immerse Yourself in Crystal-Clear 1080p Picture Quality



Image: Supersonic SC-2212 TV and included accessories.

Your browser does not support the video tag.

Video: Demonstrates bracket installation for a similar 19-inch TV model. The process for the 22-inch model is comparable.

2. Power Connection

Connect the AC/DC power adapter to the DC 12V input port on the TV. Plug the other end of the adapter into a suitable power outlet. The TV supports both AC (home) and DC (vehicle/RV) power sources.

3. Antenna Connection and Channel Scan

For over-the-air broadcasts, connect a digital antenna (not included) to the RF IN port on the back of the TV. Position the antenna for optimal signal reception, ideally near a window. Once connected, power on the TV and navigate to the 'Channel' menu to perform an 'Auto Scan' for available channels.

Your browser does not support the video tag.

Video: Illustrates connecting the power cord, antenna, and performing an auto channel scan for a similar 19-inch TV model.

4. Connecting External Devices

The TV offers multiple connectivity options:

- **HDMI:** Connect devices like cable boxes, gaming consoles, or streaming sticks to the HDMI input ports.
- **USB:** Insert a USB drive into the USB port for media playback.
- **AV:** Use the AV input for older devices with composite video and stereo audio outputs.
- **PC Monitor:** The TV can function as a PC monitor.

Your browser does not support the video tag.

Video: Shows connecting a TV box via HDMI and selecting the HDMI input source on a similar 19-inch TV model.

OPERATING INSTRUCTIONS

1. Basic Controls

The TV can be controlled using the included full-function remote control or the buttons located on the TV itself. The remote provides direct access to various functions, including power, volume, channel selection, input source, and menu navigation.



Image: Front view of the TV with the remote control.

Your browser does not support the video tag.

Video: Demonstrates the remote control and on-device buttons for a similar 19-inch TV model.

2. Input Source Selection

Press the 'SOURCE' button on the remote or TV to cycle through available input sources (ATSC, AV, HDMI, VGA, USB). Select the desired input for your connected device.

3. Picture and Sound Modes

Customize your viewing experience with various picture and sound modes:

- **Picture Modes:** User, Standard, Dynamic, Mild. Adjust brightness, contrast, and color saturation to your preference.
- **Sound Modes:** User, Music, Movie, Standard. Fine-tune bass, treble, and balance for optimal audio.

4. Built-in DVD Player Operation

The integrated DVD player supports multiple formats including DVD+/-R, DVD+/-RW, VCD, HDCD, and CD. Insert a disc into the side slot with the label facing you. The TV will automatically switch to DVD mode or you can select it from the source menu. Use the remote control for playback functions (play, pause, stop, skip).



Image: Close-up of the TV showing the built-in DVD player slot.

5. Media Playback (USB/SD/MMC/MS)

Insert a USB drive or a compatible memory card (SD/MMC/MS) into the respective slots. Select 'USB' from the input source menu. You can then browse and play photos, music, or videos stored on your media device.

Your browser does not support the video tag.

Video: Demonstrates plugging in a USB drive and selecting the USB source for media playback on a similar 19-inch TV model.

6. Additional Features

- **Sleep Timer:** Set a timer for the TV to automatically turn off.
- **Multi-language OSD:** On-Screen Display supports multiple languages for menu navigation.
- **Digital Noise Reduction:** Enhances picture clarity by reducing visual noise.

MAINTENANCE

1. Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Avoid using harsh chemicals or abrasive materials.

2. Cleaning the Cabinet

Use a soft, dry cloth to clean the TV cabinet. Do not use liquid or aerosol cleaners directly on the cabinet as they may damage the finish.

3. Storage

If storing the TV for an extended period, disconnect it from the power source and store it in a cool, dry place, preferably in its original packaging to protect it from dust and physical damage.

TROUBLESHOOTING

If you encounter issues with your TV, please refer to the following common solutions before contacting support:

- **No Power:** Ensure the power adapter is securely connected to both the TV and the power outlet. Check if the power outlet is functional.
- **No Picture/Sound:** Verify that the correct input source is selected. Check all cable connections (HDMI, AV, antenna) for looseness or damage.
- **Poor Picture Quality:** Adjust picture settings (brightness, contrast, color) in the menu. For antenna reception, try repositioning the antenna or performing another channel scan.
- **No Signal (Antenna):** Ensure the antenna is properly connected and positioned. Perform an auto channel scan.
- **DVD Player Not Reading Disc:** Ensure the disc is clean and free of scratches. Insert the disc correctly with the label side facing you.
- **Remote Control Not Working:** Check and replace the batteries (2 AAA batteries required). Ensure there are no obstructions between the remote and the TV's IR sensor.

SPECIFICATIONS

Feature	Specification
Screen Size	22 Inches (21.5" visible)
Display Technology	LED
Resolution	1080p (1920x1080)
Aspect Ratio	16:9
Refresh Rate	480 Hz
Response Time	25ms
Speaker Type	Built-In
Connectivity	HDMI, USB, AV, RF IN
Built-in DVD Player	Supports DVD+/-R, DVD+/-RW, VCD, HDCD, CD

Power Input	AC/DC Compatible (240 Volts, 42 Watts)
Item Weight	5.9 Pounds
Product Dimensions	19.8 x 13.07 x 6.5 inches (with stand)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official Supersonic website. Keep your purchase receipt as proof of purchase for any warranty claims.