

TRESemmé 5542DU

TRESemmé Power Dryer 2200 Ionic Hair Dryer User Manual

Model: 5542DU

1. INTRODUCTION

Thank you for choosing the TRESemmé Power Dryer 2200. This ionic hair dryer is engineered for efficient and effective hair drying and styling, providing salon-quality results. Please read this manual thoroughly before use to ensure safe and optimal performance of your appliance.

2. IMPORTANT SAFETY INFORMATION

WARNING: Burn Hazard. This appliance becomes hot during use.

- Always keep the appliance out of reach of children, both during and after use, and while it is cooling down.
- Exercise extreme caution when using the appliance on or near children. Do not use on very young children.
- Do not use this appliance near water, such as in bathtubs, showers, basins, or other vessels containing water.
- Always unplug the appliance immediately after use.
- Do not use the appliance if the cord or plug is damaged. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Keep the air intake and outlet openings free from dust, lint, hair, and anything that might reduce airflow.
- Do not block the air openings or place the appliance on a soft surface, such as a bed or couch, where the air openings may be blocked.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your TRESemmé Power Dryer 2200.

- Hair Dryer Unit
- Concentrator Nozzle
- Removable Rear Filter
- Power Cord with Hanging Loop



Figure 3.1: Overview of the TRESemmé Power Dryer 2200.



Figure 3.2: The concentrator nozzle, used for precise styling.



Figure 3.3: Control switches for heat and speed settings.

4. SETUP

1. **Unpack:** Carefully remove the hair dryer and all accessories from the packaging.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Attach Concentrator Nozzle (Optional):** If desired, firmly attach the concentrator nozzle to the front of the hair dryer. Ensure it clicks securely into place.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet. Ensure your power supply matches the voltage specified on the appliance.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To turn the hair dryer on, slide the ON/OFF switch to the desired speed setting. To turn off, slide the switch to the '0' position.

5.2 Heat and Speed Settings

The TRESemmé Power Dryer 2200 features independent controls for heat and speed, allowing for customized drying.

- **Speed Settings:** Use the speed switch to select between two airflow speeds (I for low, II for high).
- **Heat Settings:** Use the heat switch to select between two heat levels (I for low, II for high).

5.3 Cool Shot Function

Press and hold the cool shot button (often marked with a snowflake icon) to deliver a burst of cool air. This helps to set your style and add shine.

5.4 Using the Concentrator Nozzle

The concentrator nozzle directs airflow to specific sections of hair, ideal for precision styling and smoothing. Attach it firmly before turning on the dryer.



Figure 5.1: The ionic conditioning technology helps to reduce frizz and enhance shine during drying.

6. MAINTENANCE

6.1 Cleaning the Removable Rear Filter

Regular cleaning of the rear filter is crucial for maintaining optimal performance and extending the life of your hair dryer. A blocked filter can lead to overheating.

1. **Ensure Power Off:** Always unplug the hair dryer from the power outlet before cleaning.
2. **Remove Filter:** Gently twist or pull the rear filter cover to detach it from the appliance.
3. **Clean Filter:** Use a soft brush or cloth to remove any accumulated dust, lint, or hair from the filter mesh. You may also rinse it under running water if necessary, ensuring it is completely dry before reattaching.
4. **Reattach Filter:** Align the filter cover and push or twist it back into place until it is securely fastened.



Figure 6.1: The removable rear filter, essential for preventing dust and hair buildup.



Figure 6.2: The filter is designed for easy removal and cleaning.

6.2 General Cleaning

Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

If you encounter any issues with your TRESemmé Power Dryer 2200, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Hair dryer does not turn on.	No power supply.	Check if the plug is securely inserted into the outlet. Test the outlet with another appliance.
Weak airflow.	Blocked rear filter.	Unplug the appliance and clean the rear filter as described in Section 6.1.
Appliance overheats and shuts off.	Blocked air intake/outlet or prolonged use.	Unplug the appliance and allow it to cool down. Clean the rear filter. Ensure air vents are clear during use.
Unusual noise during operation.	Debris in the fan or motor.	Unplug the appliance. Check the rear filter for any foreign objects. If the noise persists, contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the TRESemmé Power Dryer 2200.

Feature	Specification
Model Number	5542DU
Power	2200 Watts
Heat Settings	2
Speed Settings	2
Cool Shot Function	Yes
Technology	Ionic, Tourmaline Ceramic
Cord Length	2.4 meters
Filter	Removable Rear Filter
Included Components	Concentrator Nozzle, Information Booklet, Hair Dryer
Dimensions (L x W x H)	26.5 x 9 x 25.4 cm
Weight	525 grams

Feature	Specification
Color	Black
Material	Tourmaline Ceramic



Figure 8.1: The 2200W motor provides powerful and fast drying.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The TRESemmé Power Dryer 2200 comes with a **3-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For any questions, troubleshooting assistance beyond this manual, or warranty claims, please contact TRESemmé customer support. Refer to the information booklet included with your product for specific contact details or visit the official TRESemmé website.