

[Manuals.plus](#) /

› [Rip Curl](#) /

› Rip Curl Cortez 2 XL Tidemaster 2 Watch A1059-WHI User Manual

Rip Curl A1059

Rip Curl Cortez 2 XL Tidemaster 2 Watch

MODEL: A1059-WHI USER MANUAL

Introduction

This manual provides detailed instructions for the Rip Curl Cortez 2 XL Tidemaster 2 watch, model A1059-WHI. This advanced timepiece is designed for surfers and water sports enthusiasts, featuring both analog and digital displays, pre-programmed tide data, and various other functions. Please read this manual thoroughly to understand the watch's capabilities and ensure proper operation and maintenance.



Image: The Rip Curl Cortez 2 XL Tidemaster 2 watch displayed on a wrist, showcasing its size and fit.

Features

- Ana-digi display with analog hands and digital screen.
- Pre-programmed tide charts for over 200 beach locations worldwide.
- Pre-programmed sunrise, sunset, and moon phase data.
- Durable 316L marine-grade stainless steel case, resistant to rust and corrosion.
- Hardened mineral crystal face for scratch protection.
- Water resistant to 200 meters (660 feet), suitable for recreational scuba diving.
- Functions include countdown timer, stopwatch, alarm, and dual time display.
- Comfortable silicone strap.

Setup

Initial Time Setting

Upon first use or after a battery change, the watch may require initial time synchronization. Refer to the specific button functions section for adjusting the analog and digital time displays. Ensure both are set correctly for accurate tide and timekeeping functions.

Setting Location for Tide Data

The watch comes with pre-programmed tide data for over 200 locations. To access accurate tide information, you must select your current or desired beach location. Navigate to the tide mode and use the adjustment buttons to scroll through the available locations until your desired spot is selected. Confirm the selection to activate the local tide graph.

Battery Information

The watch is powered by one Lithium Metal battery (included). When the digital display dims or functions become erratic, it indicates a low battery. Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance integrity is maintained.

Operating Instructions



Image: A detailed view of the Rip Curl Cortez 2 XL Tidemaster 2 watch face, showing both analog hands and the digital display.

Button Functions

The watch typically features multiple pushers and a crown for navigating modes and adjusting settings. Consult the diagram below (if available in physical manual) for specific button assignments. Generally:

- **Mode Button:** Cycles through different functions (Time, Tide, Chronograph, Timer, Alarm, Dual Time).

- **Adjust/Set Button:** Used to enter setting mode for the currently displayed function.
- **Up/Down Buttons:** Used to increase or decrease values during setting, or to scroll through options like beach locations.
- **Light Button:** Activates the backlight for the digital display.

Tide Function

In Tide Mode, the digital display shows a graphical representation of the tide cycle for the selected beach, along with high/low tide times. Use the Up/Down buttons to view future tide predictions. Ensure your location is correctly set for accurate data.

Chronograph (Stopwatch)

To use the stopwatch, navigate to Chronograph Mode. Press the Start/Stop button to begin and end timing. Press the Reset button to clear the elapsed time. The stopwatch can measure split times and lap times.

Countdown Timer

In Timer Mode, you can set a specific duration for a countdown. Once set, start the timer, and an alarm will sound when it reaches zero. This is useful for surf heats or other timed activities.

Alarm and Dual Time

The watch includes an alarm function that can be set for a specific time. The dual time feature allows you to display a second time zone simultaneously, useful for travel or communicating with contacts in different regions.

Maintenance

Cleaning

Regularly rinse your watch with fresh water after exposure to saltwater, sand, or chlorine. Use a soft cloth to dry it. Avoid using harsh chemicals or abrasive materials, which can damage the case, crystal, or strap.

Water Resistance

The Cortez 2 XL Tidemaster 2 is water resistant to 200 meters (660 feet). This rating is suitable for recreational scuba diving. Always ensure the crown is fully pushed in and any pushers are not operated while the watch is submerged or wet, as this can compromise the water seal. Avoid exposing the watch to extreme temperature changes, which can affect seals.

Strap Care

The silicone strap is durable but can be cleaned with mild soap and water. Avoid prolonged exposure to direct sunlight or harsh chemicals to prevent material degradation.

Troubleshooting

Digital Display is Blank or Dim

- **Possible Cause:** Low battery.
- **Solution:** Replace the battery. It is recommended to have this done by a professional watch technician.

Incorrect Time Display

- **Possible Cause:** Time not set correctly or accidental adjustment.
- **Solution:** Refer to the 'Initial Time Setting' section to re-synchronize the analog and digital displays.

Inaccurate Tide Data

- **Possible Cause:** Incorrect beach location selected.
- **Solution:** Ensure the correct beach location is selected in Tide Mode.

Watch Fogging Up Internally

- **Possible Cause:** Moisture ingress, possibly due to compromised water seals.
- **Solution:** Stop using the watch in water immediately and have it inspected by a professional watch repair service.

Specifications

Feature	Detail
Model Number	A1059-WHI
Case Material	316L Stainless Steel
Case Diameter	46 mm
Case Thickness	16 mm
Band Material	Silicone
Band Width	26 mm
Crystal Material	Hardened Mineral Crystal
Movement Type	Quartz (Analog-Digital)
Water Resistance Depth	200 meters (660 feet)
Battery Type	1 Lithium Metal battery (included)
Item Weight	454 g (approx. 1 Pound)

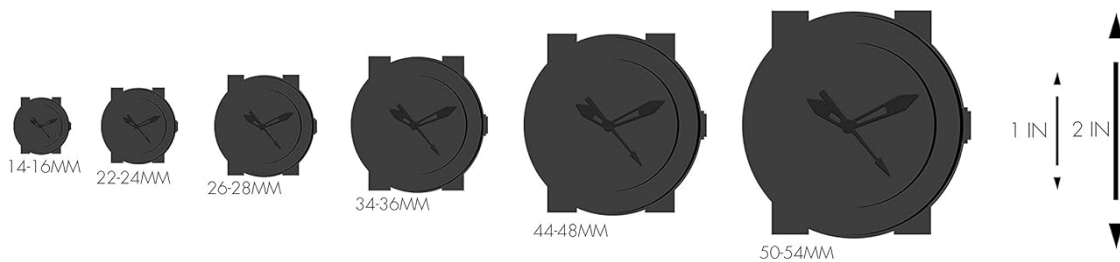


Image: A visual guide illustrating different watch case diameters, including the 46mm size of the Cortez 2 XL Tidemaster 2.

Warranty and Support

This product is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact the seller of record. For technical support, service, or inquiries regarding your Rip Curl Cortez 2 XL Tidemaster 2 watch, please reach out to Rip Curl's official customer service channels or the authorized retailer from whom the watch was purchased.