

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [Black & Decker FX1200 1000-Watt 25 Function Food Processor User Manual](#)

BLACK+DECKER FX1200

Black & Decker FX1200 Food Processor User Manual

Model: FX1200 | Brand: BLACK+DECKER

INTRODUCTION

Thank you for choosing the Black & Decker FX1200 1000-Watt 25 Function Food Processor. This appliance is designed to simplify your kitchen tasks with its powerful motor and versatile functions. To ensure safe and efficient operation, please read this manual thoroughly before first use and retain it for future reference.

The FX1200 features durable stainless steel blades, a robust 1000W motor, and a unique moving head safety lock-on system. It includes a processing glass bowl and blender jar, both hygienic and long-lasting, with variable speed control and pulse function for precise food processing. With 25 functions, this food processor is equipped to handle a wide range of culinary needs.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not immerse the motor unit in water or other liquids. Clean only with a damp cloth.
- Keep hands and utensils out of the processing bowl/blender jar while operating to prevent severe injury to persons or damage to the food processor.
- Ensure the safety lock-on facility is engaged before operation. The appliance will not operate unless properly assembled and locked.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Blades are sharp. Handle with extreme care.
- Do not use outdoors.
- This appliance is for household use only.

PRODUCT OVERVIEW



Image: The Black & Decker FX1200 Food Processor, showcasing its silver main unit with control dial, transparent processing bowl with a feed chute, and the S-shaped blade assembly inside. The base features rubber suction feet for stability.

Components Included:

- Main unit (motor base)
- 2.2 litre direct-serve processing glass bowl
- 1.75 litre direct-serve blender jar
- Stainless steel S-shaped blades for slicing
- Stainless steel indented blades for light grating and rasping
- 2 blades for thick and thin shreds
- Special dough blade for sifting and kneading batter
- Special perforated disk for whisking and whipping eggs and cream
- Juicer extractor and special centrifugal juice extractor attachment
- Rubber storage lids
- Manual and Warranty card

SETUP

1. Unpack all components and remove any packaging materials.
2. Place the main unit on a clean, dry, and stable surface. The rubber suction feet will help ensure stability during operation.
3. Ensure the appliance is unplugged from the power outlet before assembly.
4. Carefully place the processing bowl or blender jar onto the motor base, twisting it clockwise until it locks securely into place.
5. Insert the desired blade or attachment onto the spindle inside the bowl/jar.
6. Place the lid onto the bowl/jar and twist it clockwise until it clicks into the safety lock position. The appliance will not start if the lid is not properly secured.

OPERATING INSTRUCTIONS

General Operation:

1. After assembly, plug the power cord into a suitable electrical outlet (Operating Voltage: 210 - 250 volts).
2. Add ingredients to the processing bowl or blender jar. Do not overfill.
3. Select the desired speed using the variable speed control dial. For quick bursts of power, use the 'Pulse' setting.
4. The powerful 1000-watt motor handles all tough jobs with ease.
5. When finished, turn the speed dial to 'OFF' and unplug the appliance.

Specific Functions (25 functions):

- **Mincing:** Use the stainless steel S-shaped blades for mincing boneless meat.
- **Crushing Ice:** The S-shaped blades are also suitable for crushing ice for smoothies.
- **Slicing & Shredding:** Utilize the stainless steel S-shaped blades for slicing, and the two blades for thick and thin shreds.
- **Grating & Rasping:** The stainless steel indented blades are ideal for light grating and rasping.
- **Dough Preparation:** The special dough blade is designed for sifting and kneading batter for cakes and pastries.
- **Whisking & Whipping:** Use the special perforated disk for whisking and whipping eggs and cream.
- **Juicing:** Attach the juicer extractor and special centrifugal juice extractor for collecting juice and pulp separately.
- **Baby Food & Mashes:** The appliance is ideal for preparing baby food, cheese, and various mashes.

The patented double blade system ensures equal food processing results at all levels within the bowl.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your food processor.

- Always unplug the appliance before cleaning.
- All removable parts (processing bowl, blender jar, blades, lids, attachments) should be hand washed. Do not wash the motor unit in water.
- The processing glass bowl and blender jar are microwave safe and can be used in the microwave. They also come with lids for storage in the fridge or direct table service.
- Wipe the motor unit with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Exercise extreme caution when handling sharp blades.
- The built-in blade storage at the base reduces tabletop clutter and saves space, providing convenient storage for all attachment blades and discs.
- Ensure all parts are completely dry before storing.

TROUBLESHOOTING

If your food processor is not functioning as expected, please check the following:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working outlet. Verify that the processing bowl/blender jar and lid are correctly assembled and locked into place. The safety lock-on system prevents operation if not properly secured.

- **Motor seems weak or stalls:** Reduce the amount of ingredients in the bowl/jar. Ensure ingredients are cut into appropriate sizes.
- **Uneven processing:** Ensure the correct blade is used for the task. For best results, process ingredients in batches if necessary. The patented double blade system helps ensure even processing.
- **Excessive noise or vibration:** Check that the appliance is on a stable, flat surface and that all components are securely assembled.

If the issue persists after checking these points, please contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	BLACK+DECKER
Model Name	FX1200
Power	1000 Watts
Operating Voltage	210 - 250 Volts
Special Feature	Safety Lock
Colour	Grey, Black and Silver
Recommended Uses	Mince, Slice, Shred, Grate, Knead, Whisk, Juice, Baby Food, Mashers
Product Care Instructions	Hand Wash
Blade Material	Stainless Steel
Item Weight	9 kg 120 g
Included Components	Main unit, Accessories for 25 functions, Manual and Warranty card

WARRANTY AND SUPPORT

Your Black & Decker FX1200 Food Processor comes with a **2-year warranty** on the product from the date of purchase. Please retain your purchase receipt as proof of purchase for warranty claims.

For technical assistance, spare parts, or warranty service, please contact Black & Decker customer support. Refer to the contact information provided on the warranty card included with your product.

For more information, you may visit the official Black & Decker website or authorized service centers.