

Tepro 1061

Tepro 1061 Toronto Charcoal Barbecue Instruction Manual

Model: 1061 | Brand: Tepro

INTRODUCTION

This instruction manual provides essential information for the safe and efficient assembly, operation, and maintenance of your Tepro 1061 Toronto Charcoal Barbecue. Please read this manual thoroughly before using the barbecue for the first first time and keep it for future reference.



Image: The Tepro 1061 Toronto Charcoal Barbecue, showcasing its overall design with side shelf and wheels.

SAFETY INSTRUCTIONS

Always prioritize safety when operating any barbecue. Failure to follow these instructions can result in property damage, injury, or death.

- **Outdoor Use Only:** This barbecue is designed for outdoor use in a well-ventilated area. Do not use indoors or in enclosed spaces.
- **Stable Surface:** Place the barbecue on a firm, level, non-combustible surface.
- **Clearance:** Maintain a safe distance from combustible materials, walls, and other structures.
- **Children and Pets:** Keep children and pets away from the barbecue at all times, especially during operation.
- **Fuel:** Use only charcoal as fuel. Do not use gasoline, kerosene, or alcohol for lighting or re-lighting.
- **Fire Starters:** Use only approved charcoal starters. Allow starter fluid to soak into charcoal for at least 15 minutes before lighting.

- **Hot Surfaces:** Barbecue surfaces become extremely hot during use. Use heat-resistant gloves and appropriate tools.
- **Ash Disposal:** Allow charcoal to cool completely before disposing of ash. Ash can remain hot for several hours.
- **Supervision:** Never leave a lit barbecue unattended.

ASSEMBLY INSTRUCTIONS

The Tepro 1061 Toronto Barbecue requires assembly. It is recommended to have two people for assembly, though one person can complete it. Allow approximately 2-3 hours for assembly. All necessary screws and parts are typically well-organized and identified by letters in the packaging.

1. **Unpack Components:** Carefully unpack all parts and verify against the parts list provided in the manufacturer's manual.
2. **Base Frame Assembly:** Assemble the base frame, ensuring all connections are secure. The barbecue includes wheels for mobility and fixed feet for stability.
3. **Main Body Attachment:** Secure the main barbecue body to the assembled base frame.
4. **Charcoal Tray Mechanism:** Install the charcoal tray and its height adjustment mechanism. Ensure the crank handle operates smoothly.
5. **Lid and Thermometer:** Attach the lid, ensuring the integrated thermometer is correctly positioned.
6. **Side Shelf and Accessories:** Mount the side shelf, which includes utensil hooks, and attach the bottle opener.
7. **Cooking Grates:** Place the two-part cooking grates onto the barbecue.
8. **Final Check:** Before first use, ensure all screws are tightened and the barbecue is stable.

OPERATING INSTRUCTIONS

1. Initial Use and Seasoning

Before cooking food for the first time, it is recommended to season the barbecue. This involves burning a small amount of charcoal for about an hour with the lid closed to burn off any manufacturing residues and prepare the surfaces.

2. Lighting the Charcoal

- Open the lid and ensure the air vents are open.
- Place charcoal on the charcoal grate.
- Use an approved charcoal starter to light the charcoal. Allow it to burn until covered with a light gray ash (approximately 20-30 minutes).

3. Temperature Control

The Tepro Toronto barbecue offers precise temperature control:

- **Adjustable Charcoal Level:** Use the crank handle on the front of the barbecue to raise or lower the charcoal tray. Raising the tray increases heat intensity, while lowering it reduces heat.



Image: Close-up of the two crank handles on the front of the barbecue, used for adjusting the charcoal tray height and accessing the charcoal door.

- **Air Vents:** Control airflow using the adjustable air vents on the lid and sides. More airflow increases temperature, less airflow reduces it.



Image: Detail of the circular, adjustable air vent located on the barbecue lid, used to regulate internal temperature.

- **Lid Thermometer:** Monitor the internal temperature of the barbecue using the integrated thermometer on the lid.



Image: The Tepro 1061 Toronto Barbecue with its lid open, revealing food items such as corn, peppers, and meat cooking on the two-part grates.

4. Grilling Methods

- **Direct Grilling:** For searing and quick cooking, place food directly over the hot charcoal.
- **Indirect Grilling:** For slower cooking or larger cuts, arrange charcoal on one side and place food on the other side of the grate, or use the two-part grate to create a cooler zone. Close the lid to circulate heat evenly.

5. Refueling Charcoal

The front access door allows for easy addition of charcoal during cooking without removing the cooking grates.

MAINTENANCE AND CLEANING

- **Ash Removal:** After the barbecue has completely cooled, slide out the ash collection drawer located beneath the charcoal tray. Dispose of ash safely.
- **Cooking Grates:** The two-part cooking grates are enamel-coated and can be cleaned with a grill brush after each use. They are also suitable for dishwasher cleaning.
- **Exterior Cleaning:** Wipe down exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Storage:** Store the barbecue in a dry, protected area when not in use. A barbecue cover is recommended to protect it from weather elements.

TROUBLESHOOTING

- **Low Temperature:** Ensure air vents are fully open. Check charcoal quantity and add more if needed. Raise the charcoal tray closer to the cooking grates.
- **Excessive Smoke:** This can occur during initial seasoning or if too much fat drips onto the charcoal. Ensure proper ventilation.
- **Uneven Heating:** Distribute charcoal evenly across the charcoal grate. Adjust the charcoal tray height as needed.
- **Difficulty Lighting Charcoal:** Ensure charcoal is dry. Use sufficient starter fluid or a chimney starter.

SPECIFICATIONS






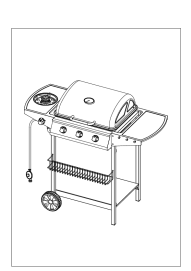
Feature	Detail
Model Number	1061
Brand	Tepro
Dimensions (L x W x H)	67 x 107 x 115 cm
Weight	26 kg
Cooking Surface	2 x approx. 41.5 x 27.5 cm (enamel-coated)
Material	Powder-coated steel, Stainless steel handles
Fuel Type	Charcoal
Special Features	Adjustable charcoal height, Integrated lid thermometer, Ash collection drawer, Side shelf with utensil hooks, Bottle opener, Wheels for mobility

WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contact details is not provided within this manual. Please refer to the manufacturer's official website or your purchase documentation for comprehensive warranty information and support options.

For spare parts availability, please consult the manufacturer's resources, as this information is not available in this document.

Related Documents - 1061

	<p>Tepro Grill Model 28691053: Essential Safety Instructions</p> <p>Comprehensive safety guidelines for the Tepro Grill Model 28691053, covering safe operation, handling, and maintenance to prevent accidents and ensure user safety.</p>
	<p>Tepro Grill Safety Instructions and Usage Guide</p> <p>Essential safety instructions and operating guidelines for the Tepro grill (model 28675880) from TEST RITE tepro GmbH. Learn how to use your grill safely.</p>
	<p>tepro Schaschlik- und Kebabgrill „Samara“ (Art. Nr. 1125) – Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für den tepro Schaschlik- und Kebabgrill „Samara“ (Art. Nr. 1125). Erfahren Sie mehr über Montage, Bedienung, Wartung und Sicherheitshinweise für Ihren Holzkohlengrill.</p>
	<p>Tepro Milwaukee Smoker Charcoal Grill Instruction Manual</p> <p>Comprehensive instruction manual for the Tepro Milwaukee Smoker Charcoal Grill, covering safety, assembly, operation, maintenance, and technical specifications.</p>
	<p>Tepro Keansburg 6 Gas Grill User Manual - Assembly, Operation, Safety & Technical Details</p> <p>Official user manual for the Tepro Keansburg 6 gas grill (Model 3316UK). Provides comprehensive instructions for assembly, safe operation, maintenance, troubleshooting, and technical specifications.</p>
	<p>Tepro Hampton 3 Burner Gas BBQ with Side Burner - Assembly and User Manual</p> <p>Comprehensive assembly instructions, safety guidelines, and care tips for the Tepro Hampton 3 Burner Gas BBQ Grill with Side Burner (Model G2085). Learn how to safely connect, light, use, and maintain your barbecue.</p>