

[Manuals.plus](#) /

- › [DYMO](#) /
- › DYMO LabelManager 210D Label Maker User Manual

DYMO 210D

DYMO LabelManager 210D Label Maker User Manual

Model: 210D | Brand: DYMO

1. OVERVIEW

The DYMO LabelManager 210D is a versatile desktop label maker designed for efficient organization in homes and offices. It features a QWERTZ keyboard for easy text entry, a large graphical display, and various formatting options to create professional-looking labels. This model utilizes thermal printing technology, eliminating the need for ink or toner. The product comes with a soft case for convenient storage and portability.



2. SETUP

2.1 Unpacking and Powering On

Carefully remove all components from the packaging. The LabelManager 210D can be powered using either 6 AA batteries (not included) or the provided AC power adapter. For initial setup, it is recommended to use the AC adapter.

- **Using AC Adapter:** Connect the AC power adapter to the power port on the side of the label maker and plug it into a wall outlet.
- **Using Batteries:** Open the battery compartment on the back of the device. Insert 6 AA batteries, ensuring correct polarity. Close the battery compartment securely.

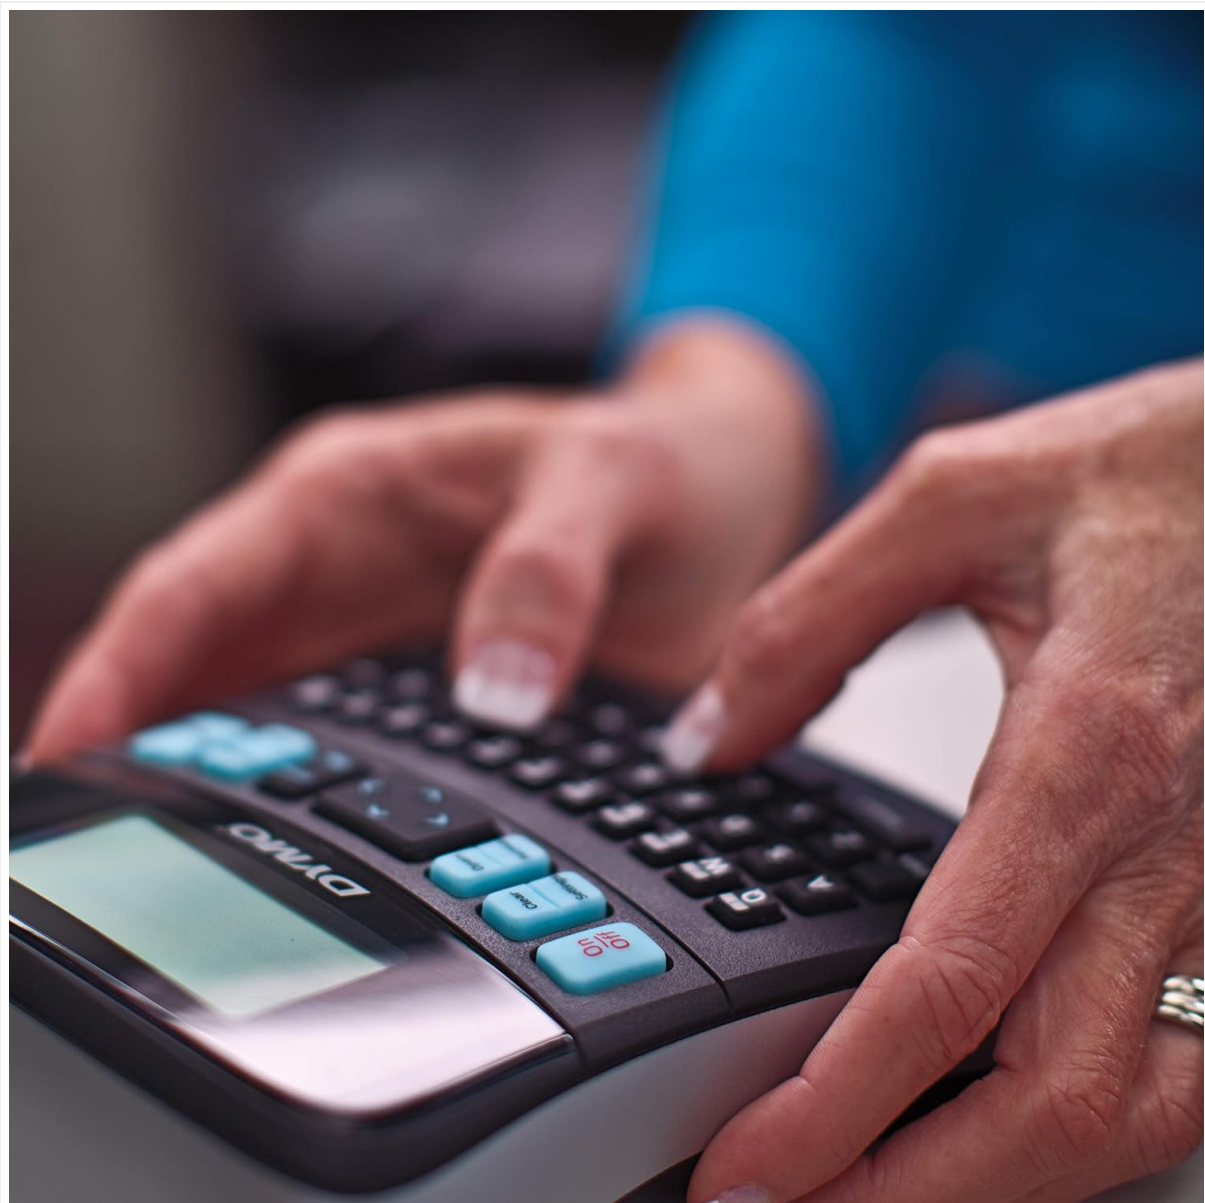


Figure 2: Label maker with power adapter and label tape cartridge.

2.2 Loading a Label Cassette

The LabelManager 210D uses DYMO D1 label cassettes. Follow these steps to load a new cassette:

1. Open the label cassette compartment cover located on the top-right side of the label maker.
2. Insert the label cassette with the label tape facing the print head. Ensure the cassette clicks into place.

3. Close the label cassette compartment cover.

Your browser does not support the video tag.

Video 1: Demonstration of loading a label tape cassette into a compatible DYMO label maker.

3. OPERATING INSTRUCTIONS

3.1 Basic Label Creation

1. Press the **Power** button to turn on the label maker.
2. Type your desired text using the QWERTZ keyboard. The text will appear on the display.
3. Use the formatting buttons (e.g., font size, bold, italic, underline) to customize your label's appearance.
4. Press the **Print** button to print the label.
5. Use the manual cutter on the side of the device to cut the printed label.



Figure 3: User typing text on the label maker's QWERTZ keyboard.

Your browser does not support the video tag.

Video 2: General usage demonstration of the DYMO LabelManager, showing text input and printing.

3.2 Applying Labels

Once printed and cut, labels are easy to apply:

- Gently peel the backing from the label to expose the adhesive.
- Carefully position the label on your desired surface.
- Press firmly along the entire length of the label to ensure good adhesion.



Figure 4: Applying a label to a file folder for organization.



Figure 5: Detailed view of peeling and applying a label.

4. MAINTENANCE

4.1 Cleaning the Print Head

To maintain optimal print quality, regularly clean the print head. Use a DYMO cleaning cassette (sold separately) or a cotton swab lightly dampened with isopropyl alcohol. Gently wipe the print head surface. Ensure the device is turned off and disconnected from power before cleaning.

4.2 Replacing Label Tape

When the label tape runs out or you wish to change label types, replace the cassette as described in Section 2.2. Always use genuine DYMO D1 label cassettes for best results.



Figure 6: View of the label maker with the tape compartment open, showing the label cassette.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	No power, dead batteries, or faulty AC adapter.	Check AC adapter connection. Replace batteries if using battery power. Ensure batteries are inserted correctly.
Poor print quality.	Dirty print head, incorrect label tape, or low battery.	Clean the print head (see Section 4.1). Ensure you are using genuine DYMO D1 label tape. Replace batteries or use AC adapter.
Label tape jams.	Improperly loaded cassette, foreign object, or damaged tape.	Open the cassette compartment and re-insert the label cassette correctly. Remove any obstructions. Replace damaged tape.
Labels are not cutting properly.	Dull cutter blade or tape misalignment.	Ensure the tape is properly aligned. If the issue persists, the cutter blade may need servicing (contact support).

6. SPECIFICATIONS

Feature	Detail
Brand	DYMO

Feature	Detail
Model Name	210D
Model Number	S0964070
Printing Technology	Thermal
Connectivity Technology	USB
Keyboard Layout	QWERTZ
Display Type	LCD
Max Media Size	12 mm
Max Print Resolution (Monochrome)	200 dpi
Item Weight	971 Grams
Product Dimensions (L x W x H)	25.5P x 26.5I x 8.5H centimeters
Power Source	6 AA batteries or AC adapter
What's in the Box	Label maker, soft case, AC adapter, D1 label cassette (may vary by region)

7. WARRANTY AND SUPPORT

The DYMO LabelManager 210D comes with a **2-year manufacturer's limited warranty**. For warranty claims, technical support, or service inquiries, please refer to the contact information provided in your product packaging or visit the official DYMO website. Ensure you retain your proof of purchase for warranty validation.

This product is sourced from the European Economic Area (EEE) and is guaranteed to be an authentic product from authorized distributors.